



BAJA GRILLE

W/ LED LIGHTING

(2016-2018 TACOMA) 

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Grille w/ LED Lights
- (1) LED Wiring Harness
- (2) Scotchlok Connectors

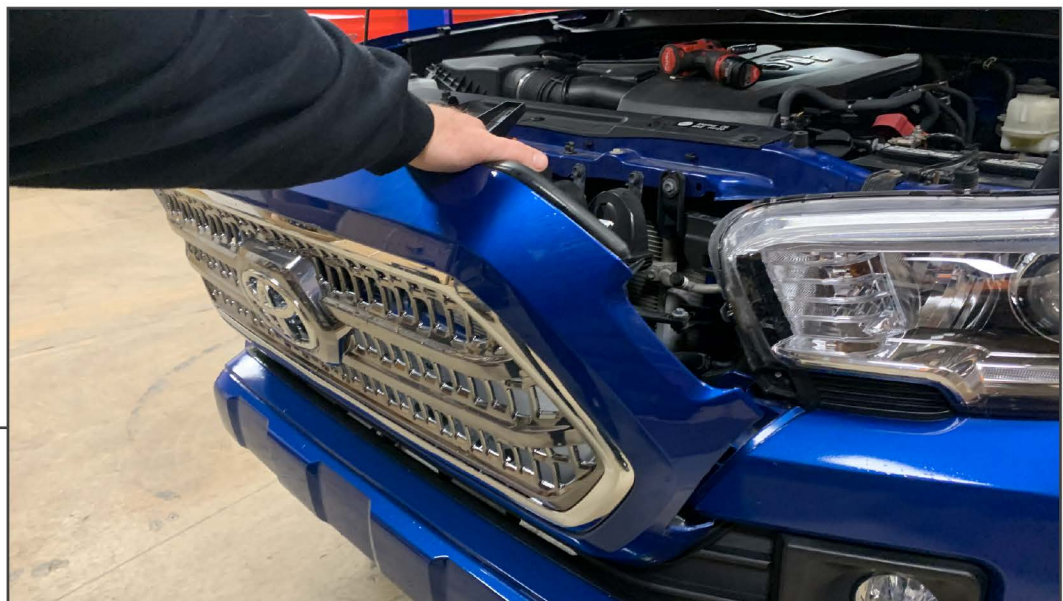
TOOLS REQUIRED

- 10mm Socket
- Socket Wrench
- Flat Blade Screw Driver
- Plies

SKU # TT6943

STEP 1

Begin by removing the (2) 10mm bolts securing the top of the grille to the radiator support. Then using a soft pry tool, remove the (6) plastic push pins securing the sides and bottom of the grille to the vehicle.

STEP 2

With the bolts and clips removed, carefully pull the grill away from the vehicle.



STEP 3

Using a flat blade screw driver, depress the grille insert tabs and remove the factory from the grille surround.



STEP 4

Clip the new grille into the factory grille surround.

**STEP 5**

Attach the supplied wiring harness to the LED lights. Route the wiring harness to the back of the driver's side headlight. Locate the parking light connector.

LED Harness	-	Factory Parking Light Connector
Red	-	Purple
Black	-	White/Black

**STEP 6**

Test the lights for functionality before reinstalling the grille in reverse order. Installation is now complete.