



BAJA GRILLE

W/ LED LIGHTING & DRL

(2016-2018 TACOMA) 

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Grille w/ LED Lights
- (1) LED Wiring Harness
- (1) DRL Control Box
- (7) Scotchlok Connectors


TOOLS REQUIRED

- 10mm Socket
- Socket Wrench
- Flat Blade Screw Driver
- Plies

SKU # TT6944

**STEP 1**

Begin by removing the (2) 10mm bolts securing the top of the grille to the radiator support. Then using a soft pry tool, remove the (6) plastic push pins securing the sides and bottom of the grille to the vehicle.

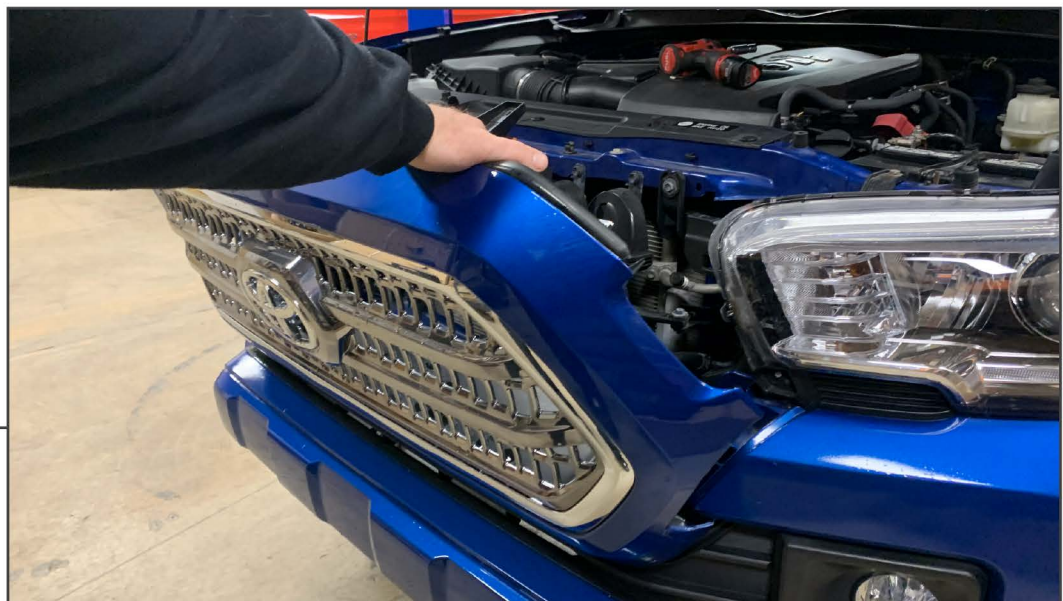**STEP 2**

With the bolts and clips removed, carefully pull the grill away from the vehicle.



STEP 3


Using a flat blade screw driver, depress the grille insert tabs and remove the factory from the grille surround.



STEP 4

Clip the new grille into the factory grille surround.


STEP 5

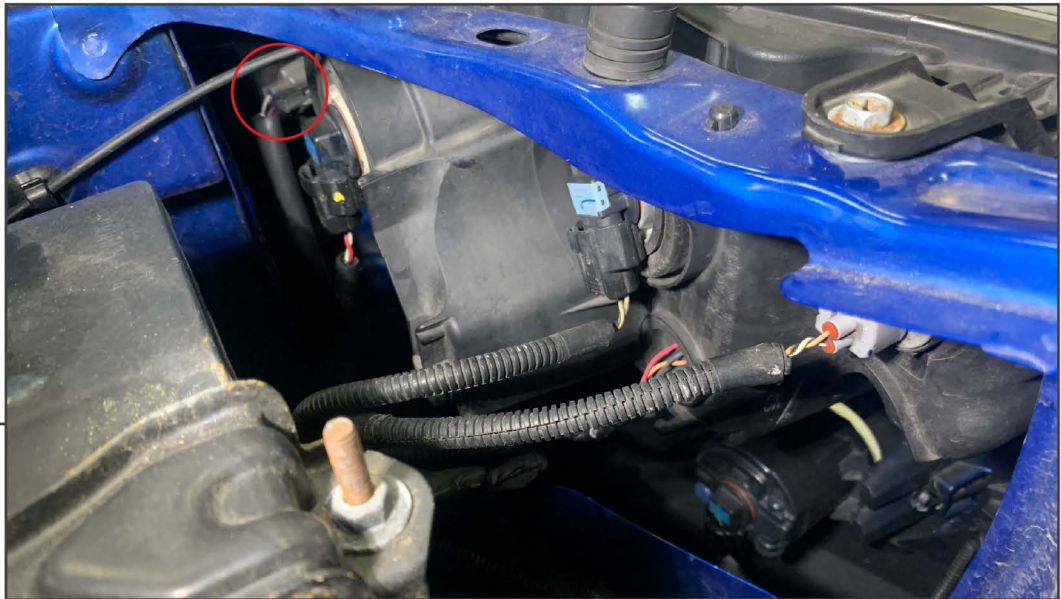

Attach the supplied wiring harness to the LED lights. Route the wiring harness to the back of the driver's side headlight. Locate the parking light connector.

- | | | |
|--------------------|---|--|
| LED Harness | - | Factory Parking Light Connector |
| Red | - | Purple |
| Black | - | White/Black |

STEP 6

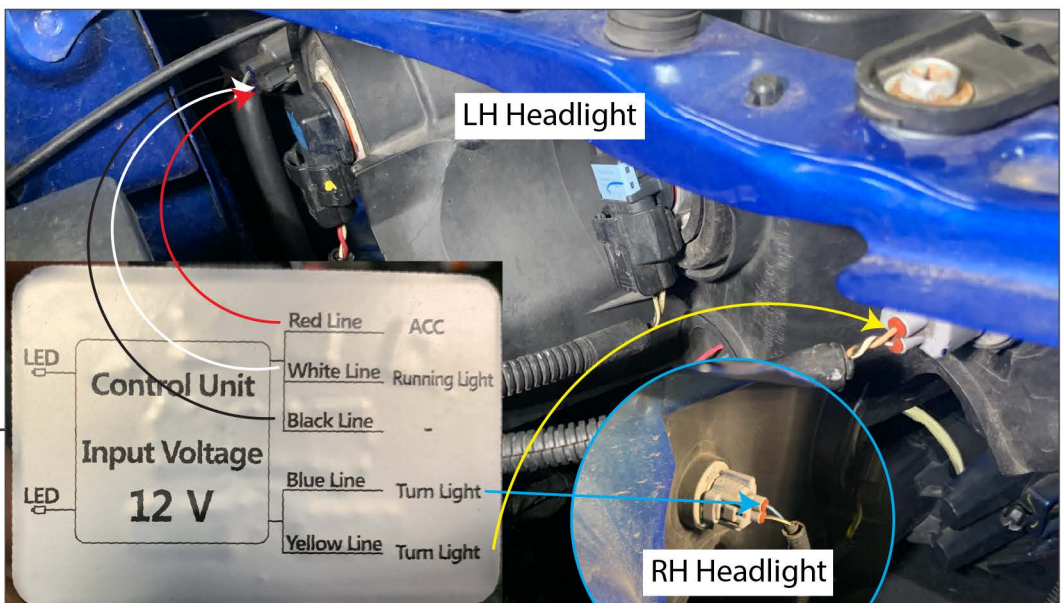

DRL Wiring: Using the supplied scotchlok connectors, connect the factory turn signals plugs to the control box wiring harness as follows:

- | | | |
|---------------------------|---|---|
| Control Box | - | Factory Turn Signal Plug |
| Red (ACC) | - | Purple wire from Step 5 |
| White (Running Light) | - | Purple wire from Step 5 |
| Black (Ground) | - | White/Black from Step 5 |
| Blue (Right Turn Signal) | - | Light Blue(Located on RH Turn Signals Plug) |
| Yellow (Left Turn Signal) | - | Orange (Located on LH Turn Signals Plug) |



STEP 7

Test the lights for functionality before reinstalling the grille in reverse order. Installation is now complete.