











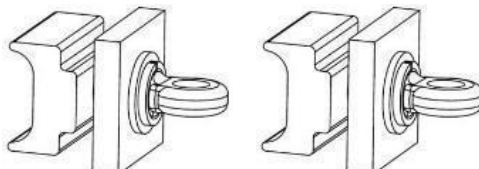
INSTALLATION MANUAL

Lightweight Low Profile Tri-Fold Hard Tonneau Cover

(#118w) 2024 Toyota Tacoma

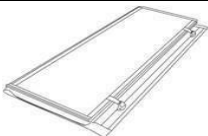

Parts included in the Cover Assembly:

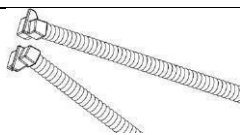Item	Description	Qty	Pic
1-A	Tonneau Cover	1	
1-B	Left Side Rail	1	
1-C	Right Side Rail	1	
1-D	Front Bolt	2	
1-E	Drain Tube	2	
1-F	Front Support Plate (Including Bolts)	2	
1-G	Side Rail Locking Latch (including Bolts)	2	
1-J	Foam Seal Tape	1	
1-M	Safety Buckle Connector Toyota Tacoma Trucks (Utility Track Channel) ONLY	2	








Accessories: Allen Wrench 1pc

Step1



Check Contents of carton with the list above. Clean truck bed and bed rails thoroughly before installation.

Step2


2-1 Slide the Front Support Plate (1-F) into the side rails (from front end), and move the Front Support Plate (1-F) to front part of side rail.

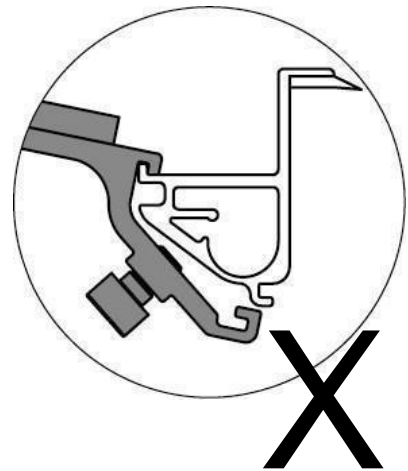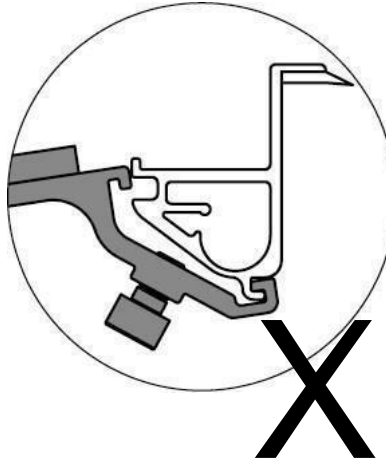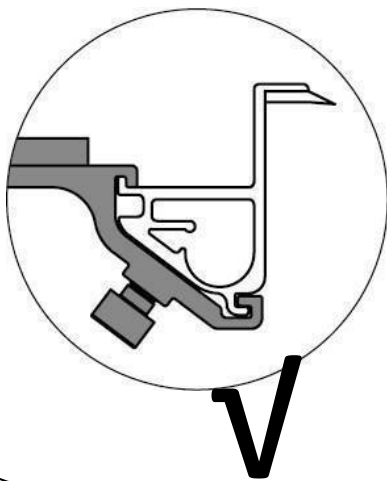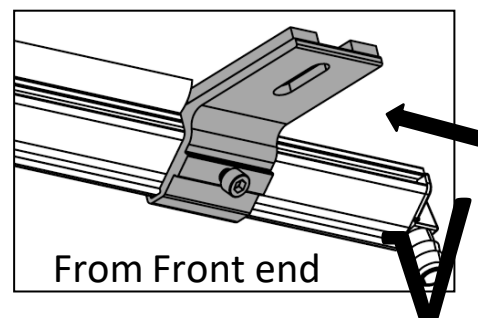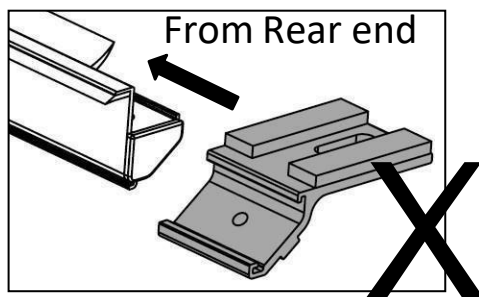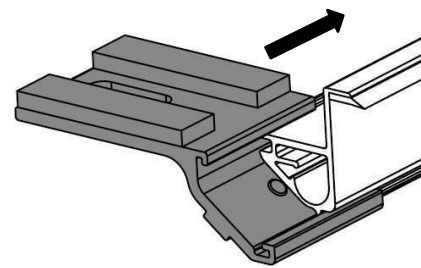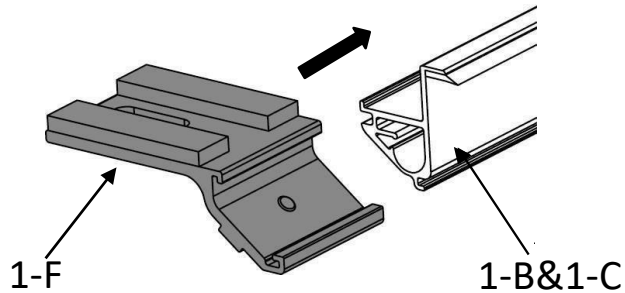

2-2 Slide the Side Rail Locking Latch (1-G) into side rail (from rear end) and move it to the rear part of side rail. Do not tighten the bolts.

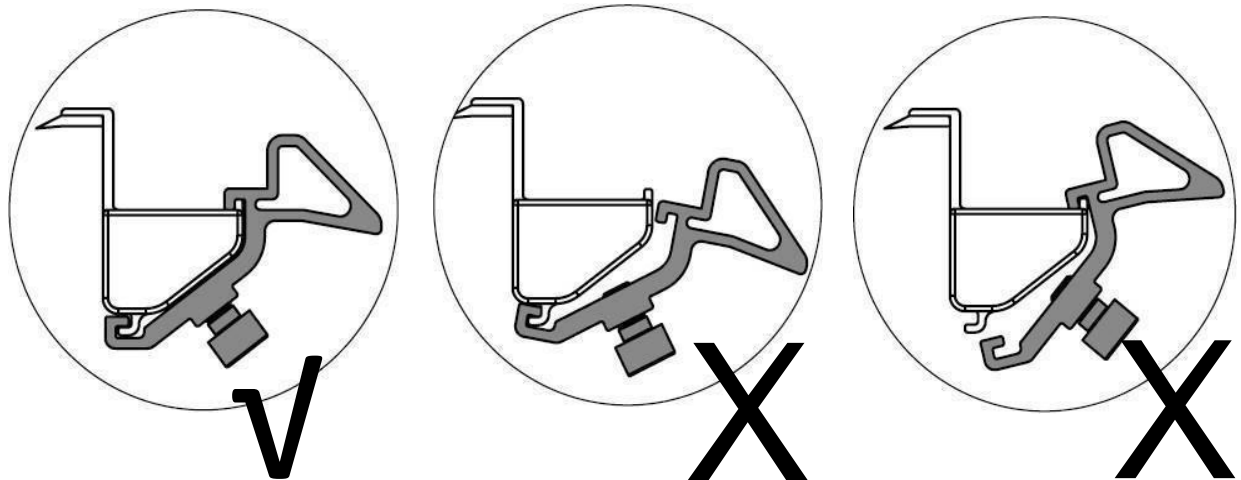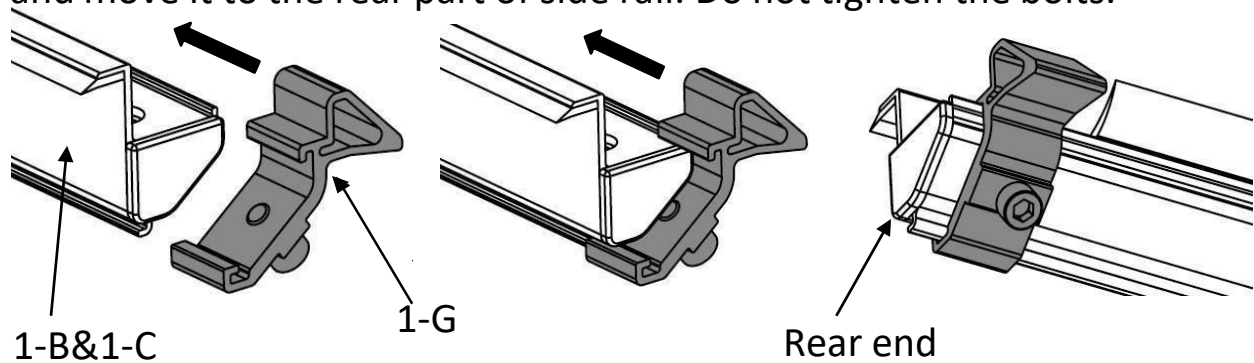


2-3 Insert the drain tubes (1-E) into the front of side rails.

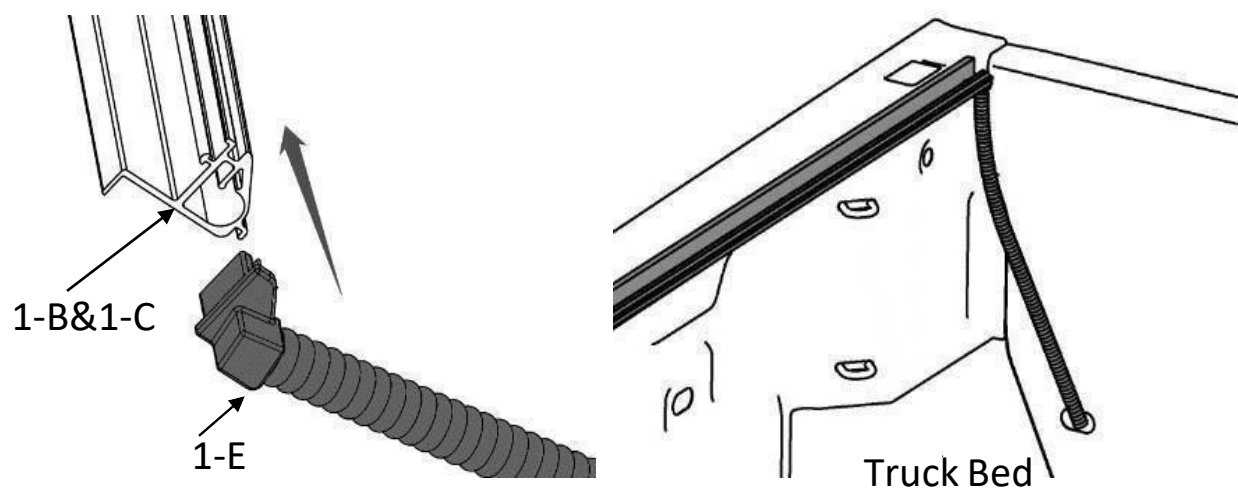


Step3

Unscrew and remove the aluminum block from the side rail.
Insert the block into the truck bed Factory Track.

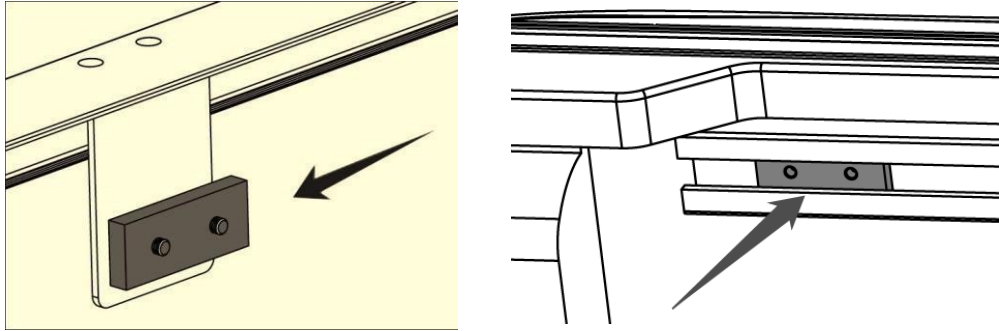


Step4

Place the side rail on the bed rail, and push it to the front wall of truck bed. Then bolt the side rail with the aluminum block (already in the Factory Track in Step 5) together. Tighten the clamps each side.

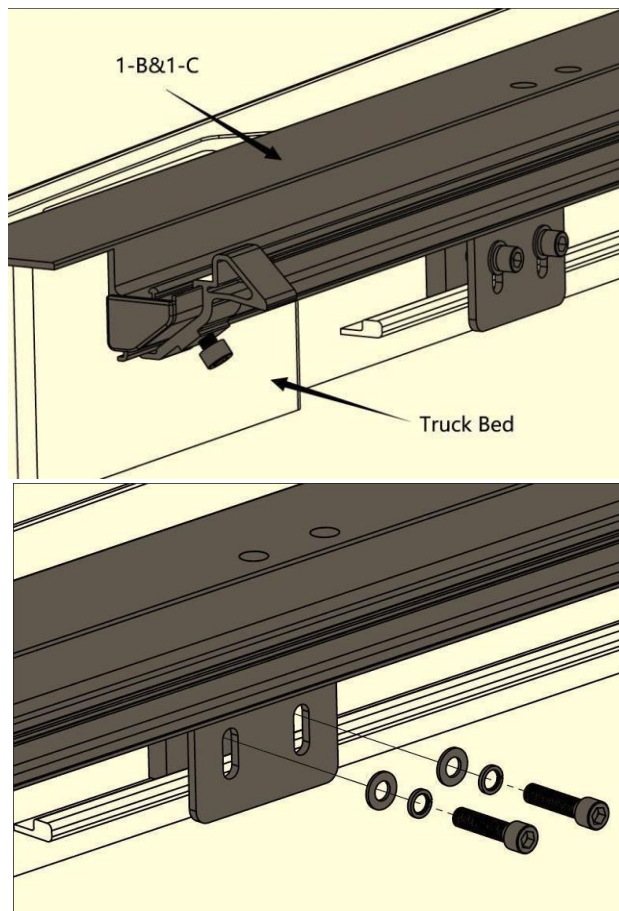


Step5

Place the tonneau cover over on the front end of truck bed. Ensure the cover is even on all sides and sit firmly on side rails.

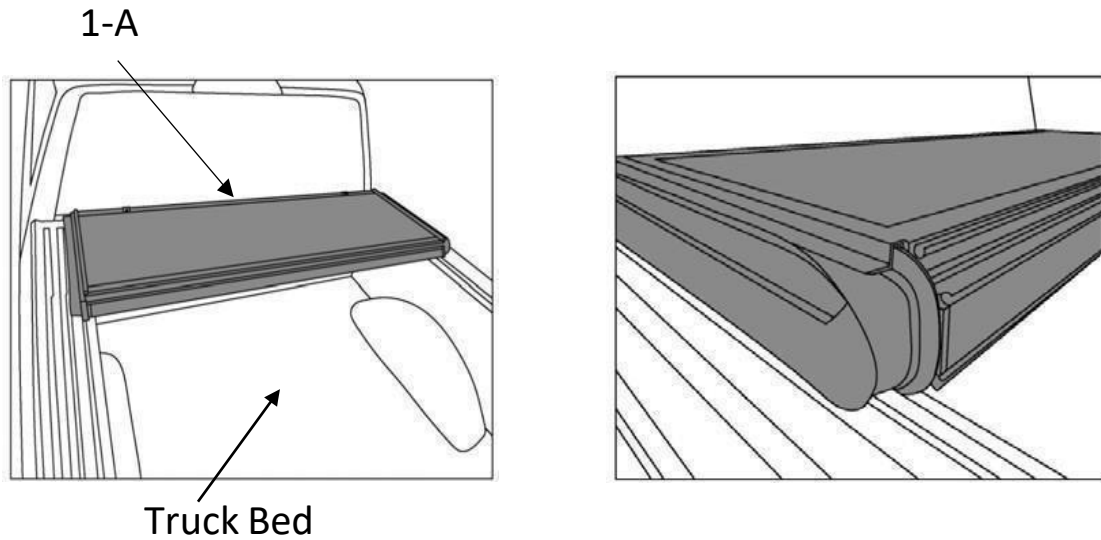

Step6


Place the tonneau cover over on the front end of truck bed. Ensure the cover is even on all sides and sit firmly on side rails.

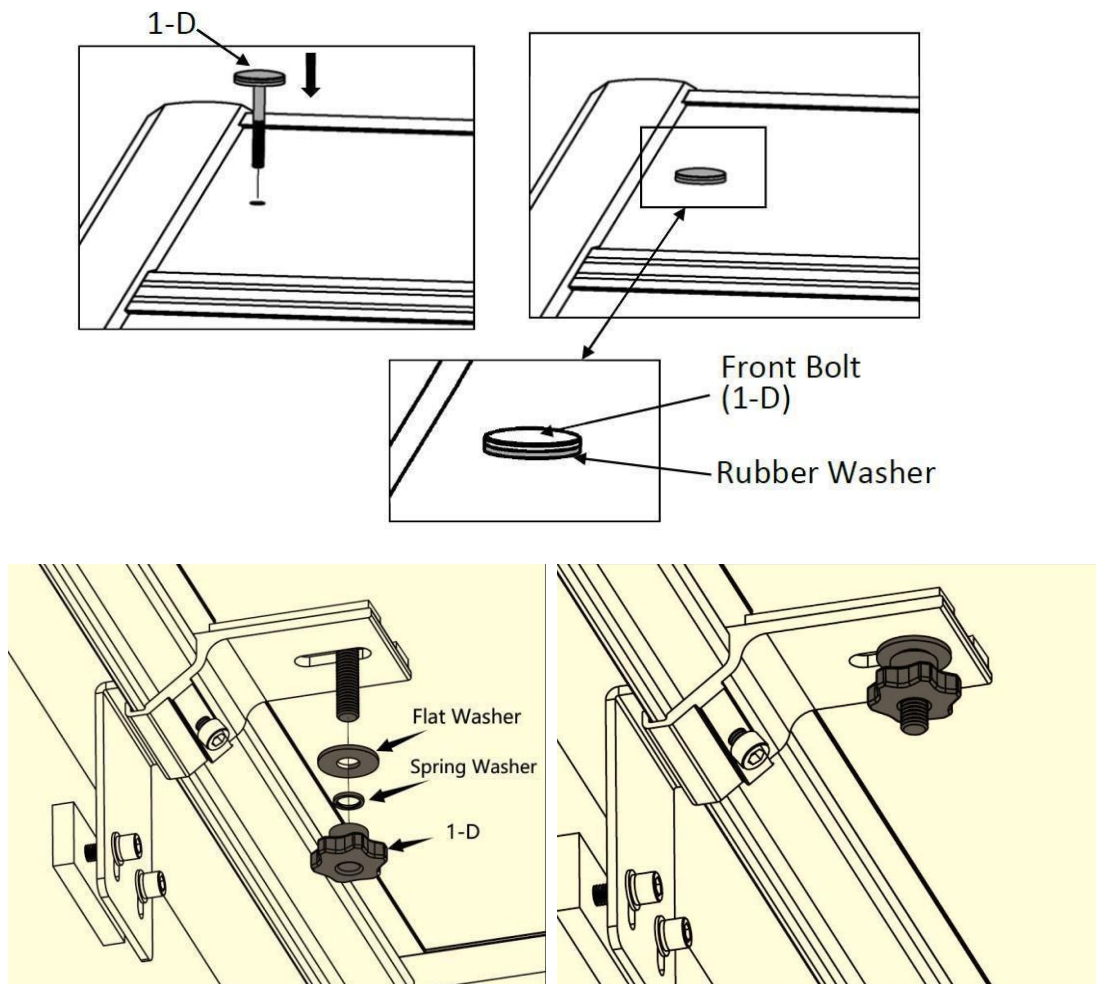


ATTENTION: Make sure the Flat Washer and Spring Washer are all placed on bolt before screw the plastic nut on.

Step8


Unfold the cover, ensure the cover release touches the side rail locking latch(1-G). If necessary, adjust the Locking latch(1-G) to match the release position. Tighten the side rail locking latches. Lock the cover and close the tailgate.

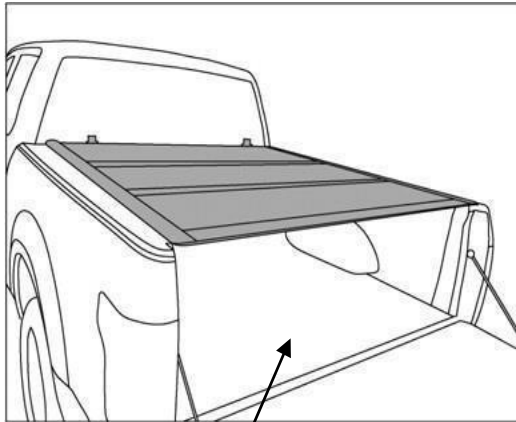

Truck Bed

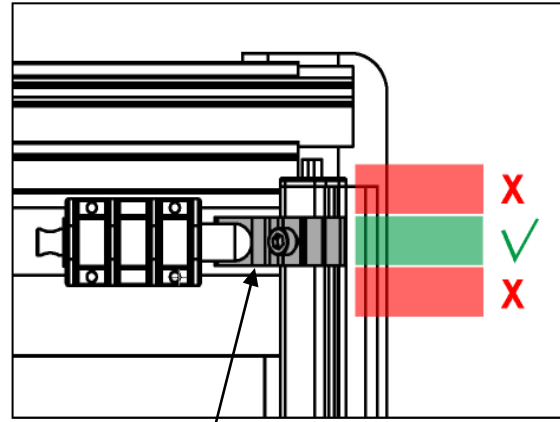


1-G

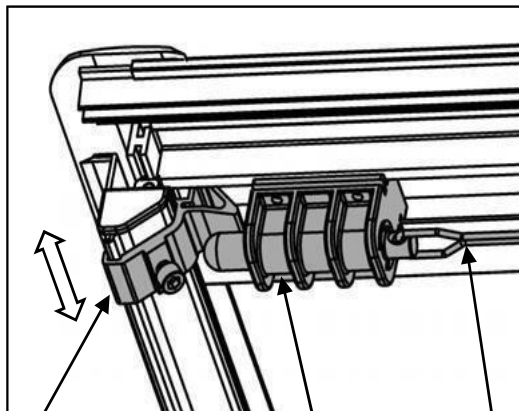


Locking Latch
(1-G)

Release Lock Cable

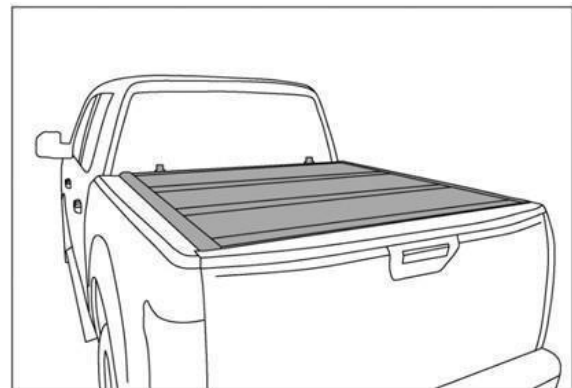


BE ATTENTION: TIGHTEN ALL BOLTS & NUTS BEFORE DRIVING!

For Truck bed with Utility Track System, two Safety Buckles Connectors are included(1-M).

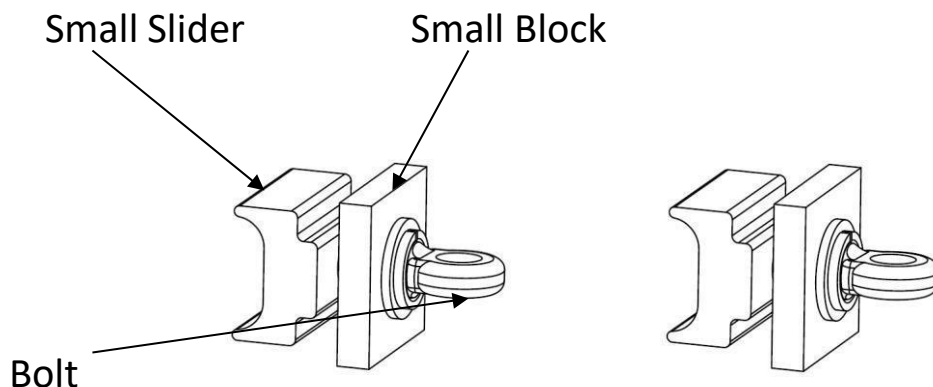

Insert the small slider into the Track Channel. Tighten the bolt. (Note: Make sure the small slider is installed nearby the Strap Safety Buckle position) There is a hole on the bottom of the bolt. Snap the safety buckle into the hole of the bolt.

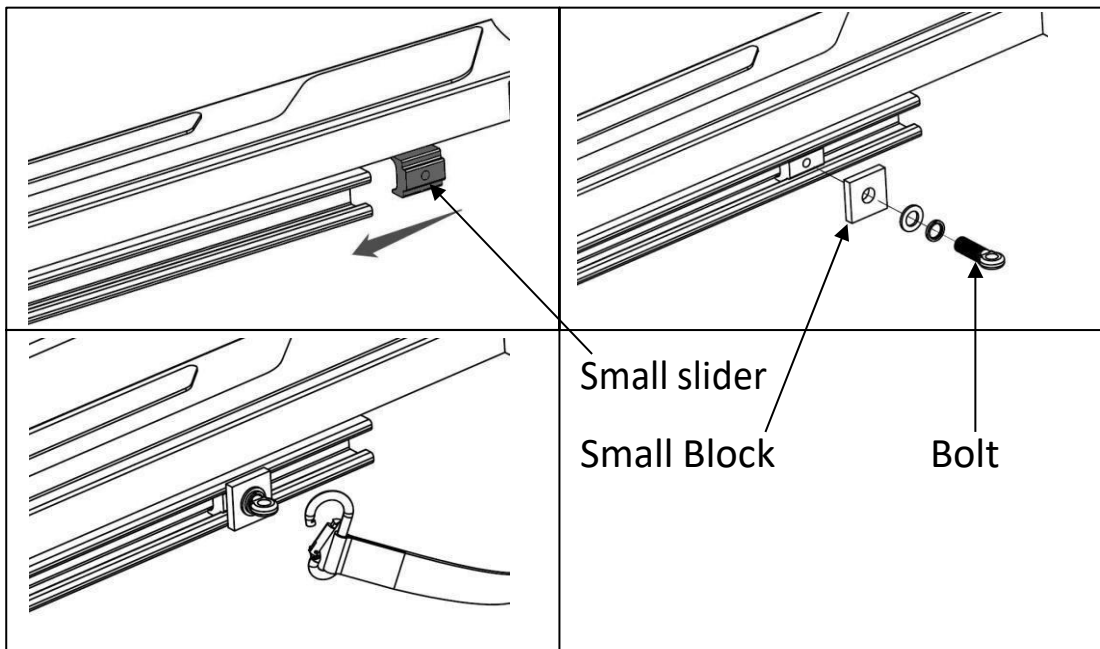

WARNING:

Always secure the safety straps to the truck bed. Never drive with a cover in partially opened position.