

LED FOG LIGHTS WITH HALO

(2005-2011 TACOMA)

INSTALLATION INSTRUCTIONS


CONTENTS

- (2) LED Fog Lights
- (2) Wire Leads
- (2) Scotchlok Connectors
- (2) Phillips Bolts
- (2) Flat Washers
- (2) Springs
- (2) Alignment Retainers

TOOLS REQUIRED

- Flathead Screwdriver
- Phillips Screwdriver
- Pliers

1. From under the bumper, locate and unplug the fog light wiring harness.
2. The fog light is retained to the bumper using nipples protruding the bumper at the 3 & 9 o'clock positions. Using a flathead screwdriver, push the bumper cover outwards or the fog light inwards. The fog light will be removed through the face of the bumper.

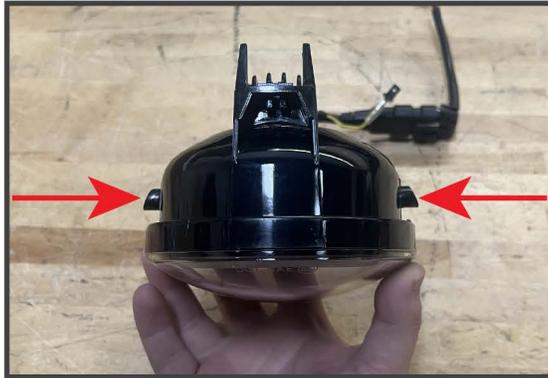

3. Fit the included alignment retainer to the lower portion of the fog light mounting area. This must be installed before the fog light.
4. Fit the new fog light into the vehicle bumper until the side nipples engage to the bumper cutouts.
5. Fit the included spring between the fog light and the previously installed alignment retainer. Fit the included Phillips bolt and flat washer through the alignment retainer, through the spring, and thread the bolt into the fog light screw retainer. Tighten the bolt until the threads begin, do not fully adjust until the light is plugged in.



6. Plug the fog light into the vehicle harness, and test functionality. Adjust the fog light for best lighting output. Route the yellow wire lead to the vehicle headlight. Splice the harness into the vehicle parking lamp using the included scotchlok connector.
To toggle white/yellow beam color, turn the lights on/off/on with 1-second delay between each switch actuation. Installation is now complete.