

LED HEADLIGHTS

(2016-2023 TACOMA)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Pair of Headlights
- (1) Fuse Tap Harness
- (2) DRL "T" Harness

TOOLS REQUIRED

- 8mm Socket
- 10mm Socket
- Ratchet
- Panel Removal Tool




STEP 1

Remove grille from vehicle by removing (2) 10mm bolts, and removing (2) push clips. Lift grille away from vehicle.




STEP 2

Remove (2) 10mm bolts from the fender liner from each side of the bumper.

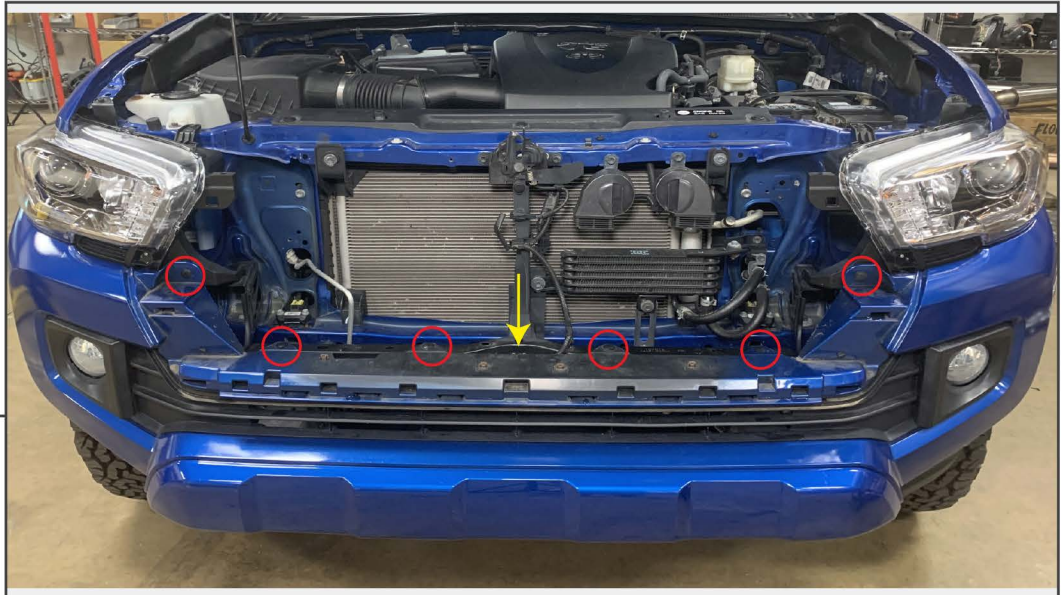

STEP 3


Remove (6) push clips from the bumper. Unplug the connector in the middle of the bumper.

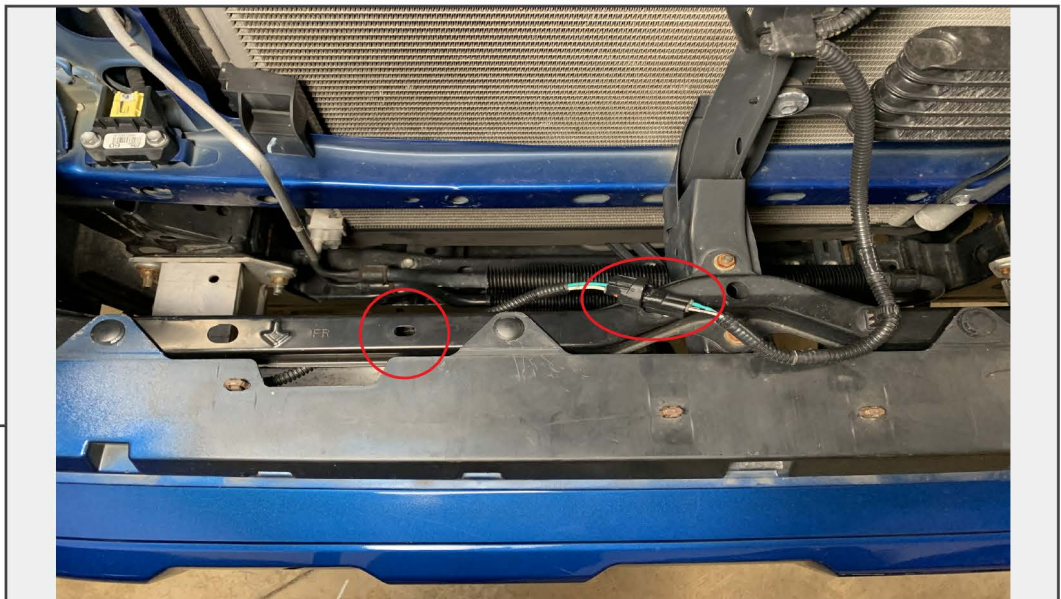

STEP 4


Unclip the fog light harness from the bumper support, then unplug the fog light connector.

STEP 5

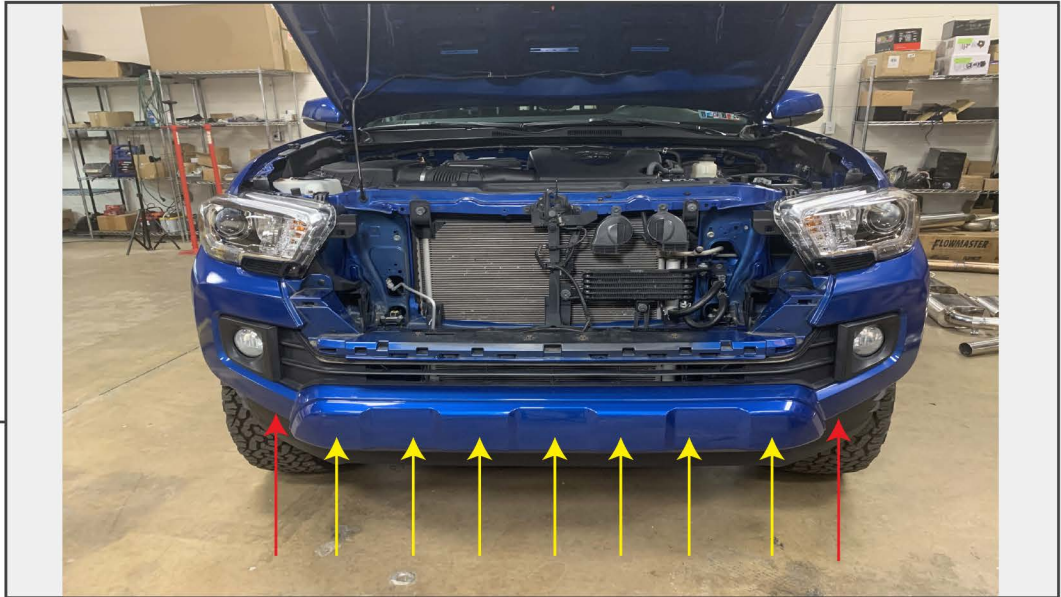

Remove (2) 8mm bolts, and (7) 10mm bolts from underneath the bumper.

STEP 6

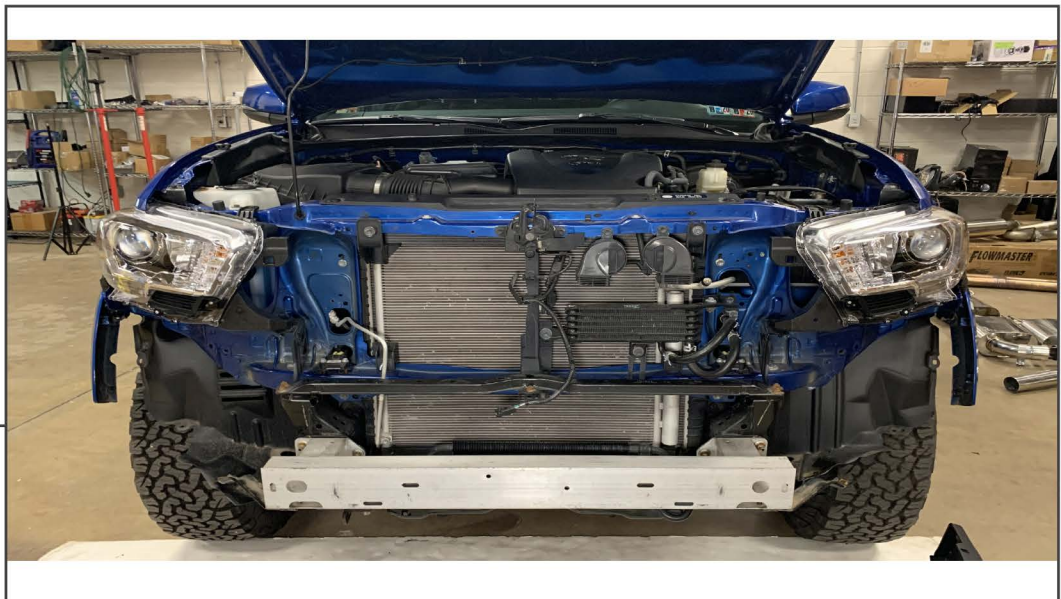

Firmly pull the bumper off the fender clips. Remove bumper from vehicle.

STEP 7




Remove (1) 10mm bolt from the side of the headlight.

STEP 8




Remove (2) 10mm bolts from the top of the headlight. Slightly lift each tab to release the headlight. Pull the headlight away from the vehicle.

STEP 9

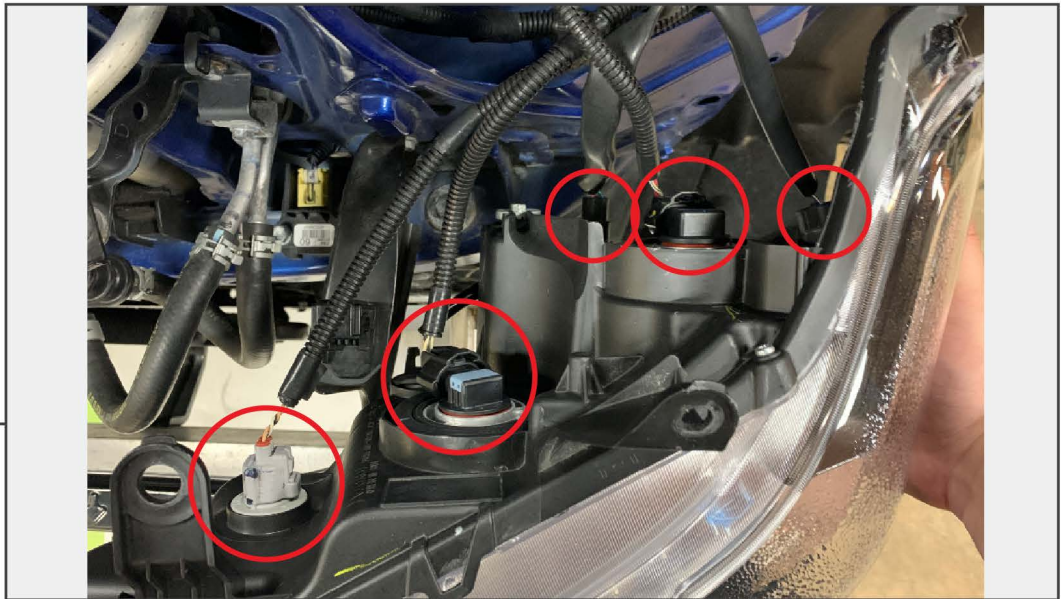


Unplug the (5) connectors from the back of the headlight. Remove headlight from vehicle.

**STEP 10
(OE DRL
VEHICLE)**

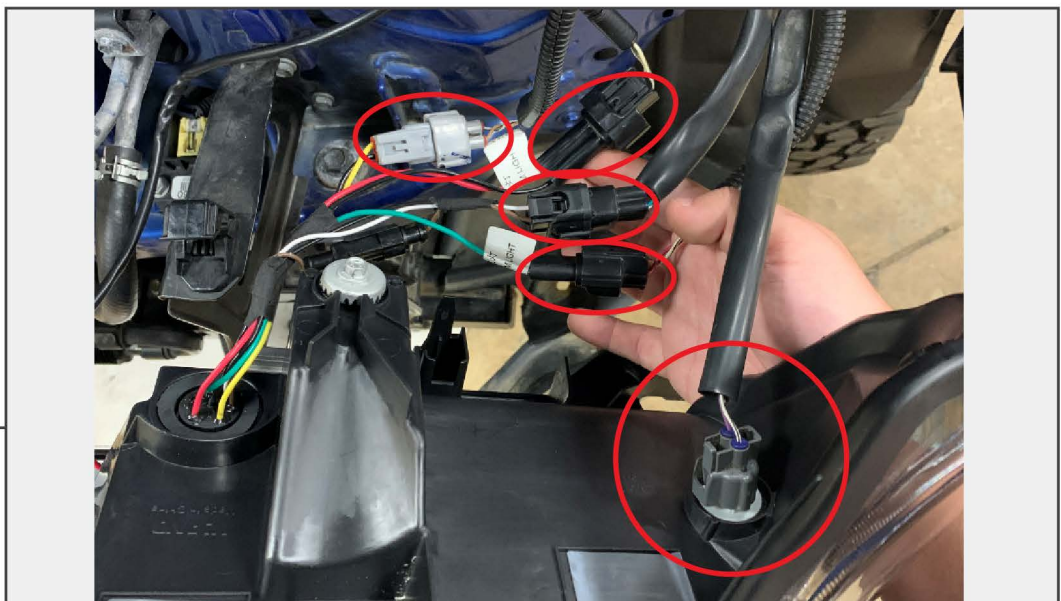


Plug each connector on the headlight into the vehicle's wiring harness. Be sure the connectors make an audible click into place.

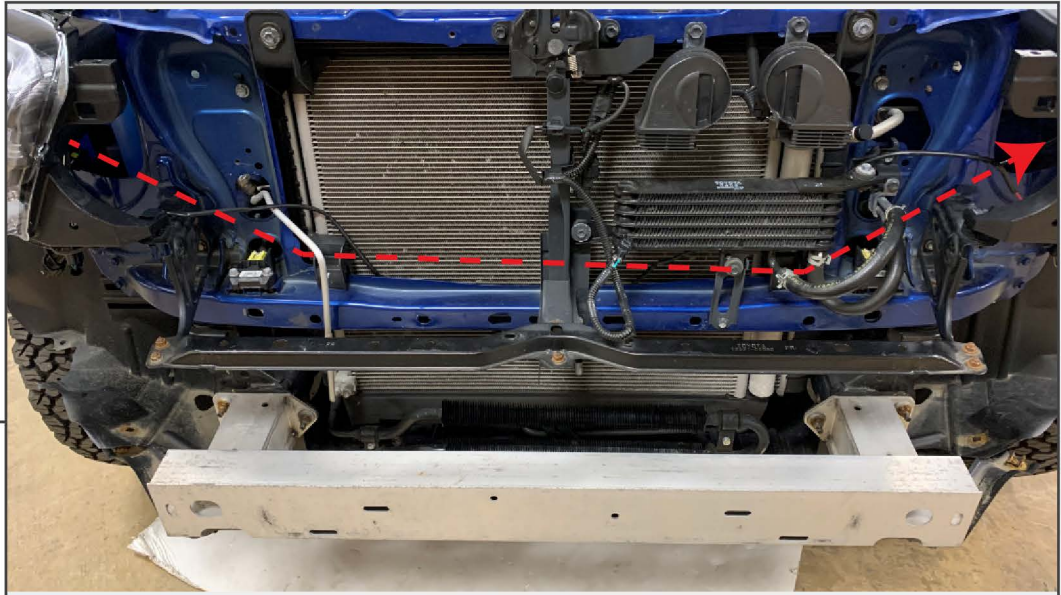


STEP 11
(NON OE
DRL VEHICLE)

Route the fuse tap harness neatly from the passenger's side headlight across the radiator support towards the driver's side. Be sure to route away from any mounting points or hot components. Plug the harness into the headlight assembly harness.

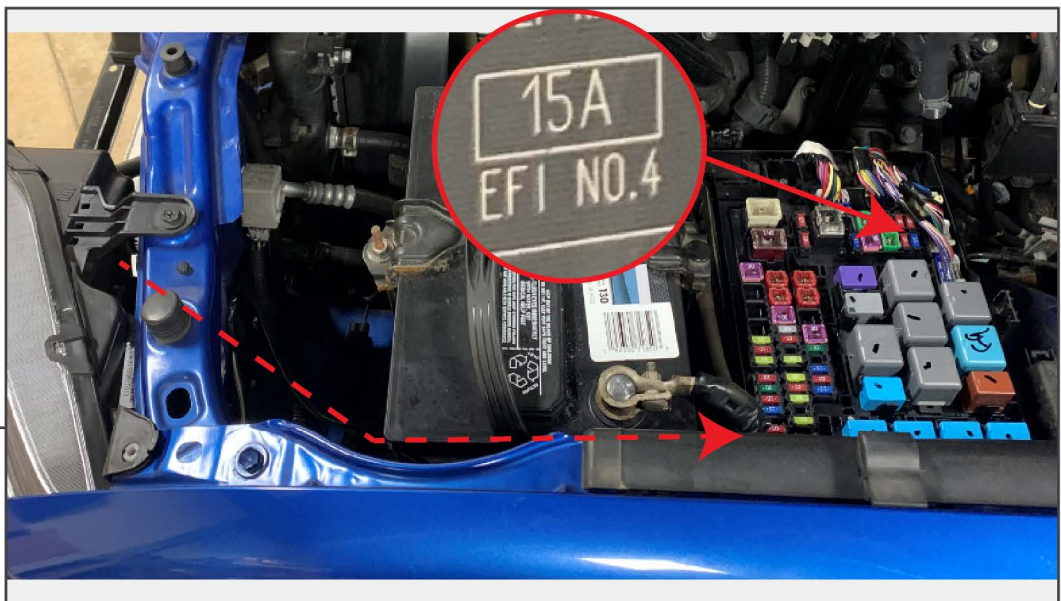


STEP 12
(NON OE
DRL VEHICLE)

Route the fused tap harness towards the fuse box. Plug the fused end of the harness into the fuse box under the hood. Locate the fuse labeled **EFI NO.4**, remove the 15A fuse and insert the fuse tap.

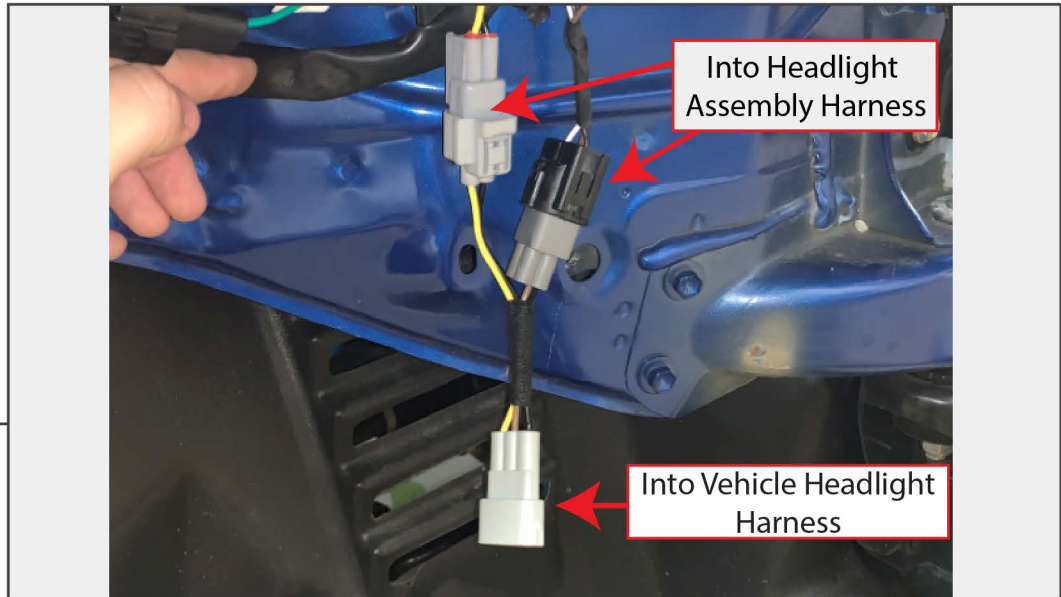

**STEP 13
(NON OE
DRL VEHICLE)**

Plug the included “T” Harness into the turn signal and headlight plugs on the headlight assembly. Then plug the harness into the vehicles headlight harness.

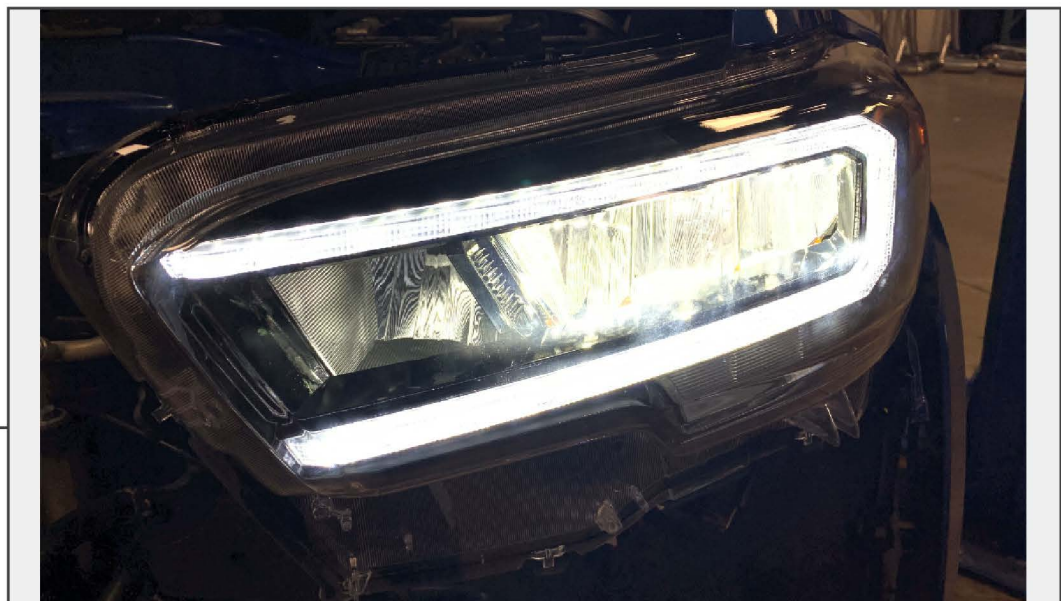

STEP 14

Reinstall headlights into the vehicle following steps 1-9 in reverse order.

Installation is complete.