



---

# CATALYTIC CONVERTER ANTI-THEFT DEVICE & SKID PLATE

(2022+ TUNDRA)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) Skid Plate  
(3) M10x1.50 x 40mm Security Torx Bolts  
(3) M10 Lock Washers  
(3) M10 Flat Washers  
(3) M10 Nut Plates  
(2) M8x1.25 x 45mm Security Torx Bolts  
(2) M8 Lock Washers  
(2) M8 Flat Washers  
(5) Spacers  
(1) T-45 Security Torx Bit  
(1) T-40 Security Torx Bit


### TOOLS REQUIRED

---

T-40 & T45 Security Torx Bits  
(Provided)  
Bit Driver  
Floor Jack  
Jack Stands

SKU # TU22237  
Edited: 05/29/24

## STEP 1

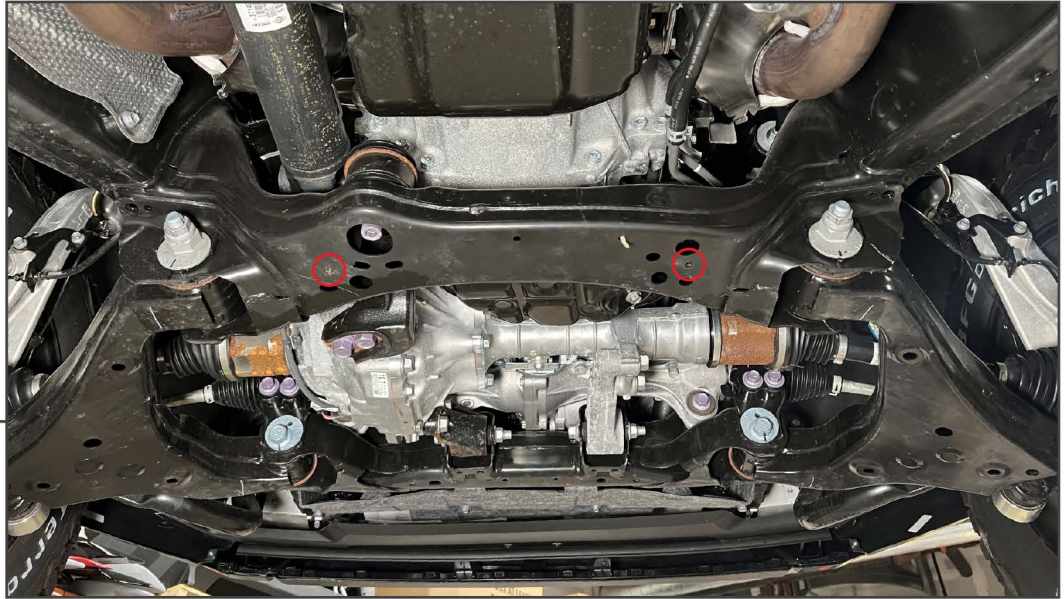


Safely lift and support the front of the vehicle.

Locate the (2) M8x1.25 threaded holes in the vehicle frame under the vehicle engine.

Note: It is recommended to run a thread tap through the bolt holes to ensure clean threads before attempting to fit the skid plate.


## STEP 2

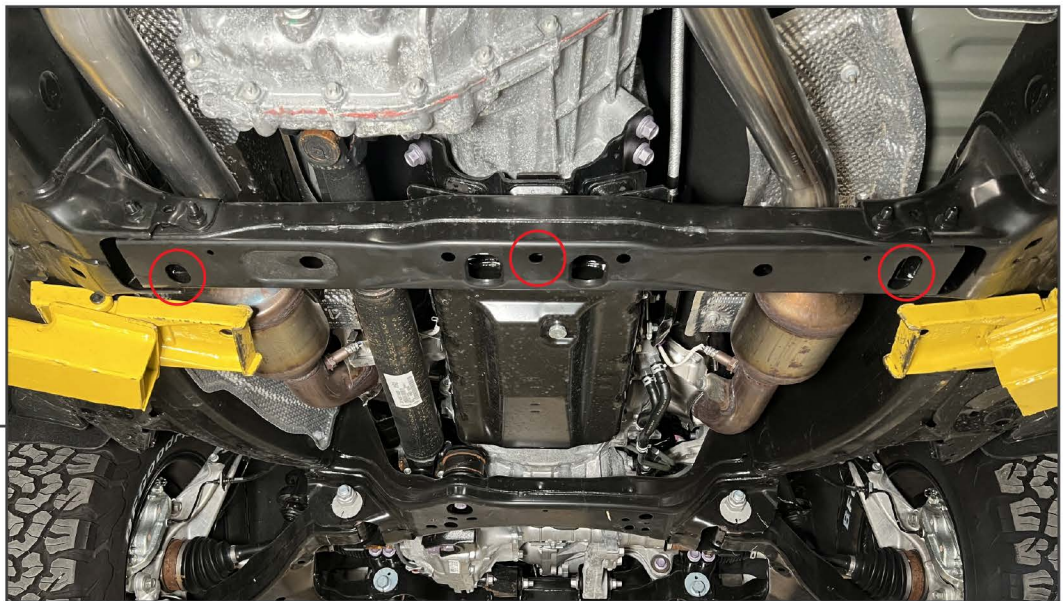

Locate the vehicle crossmember under the transmission. Fit the included (3) M10 nut plates into the crossmember.



### STEP 3

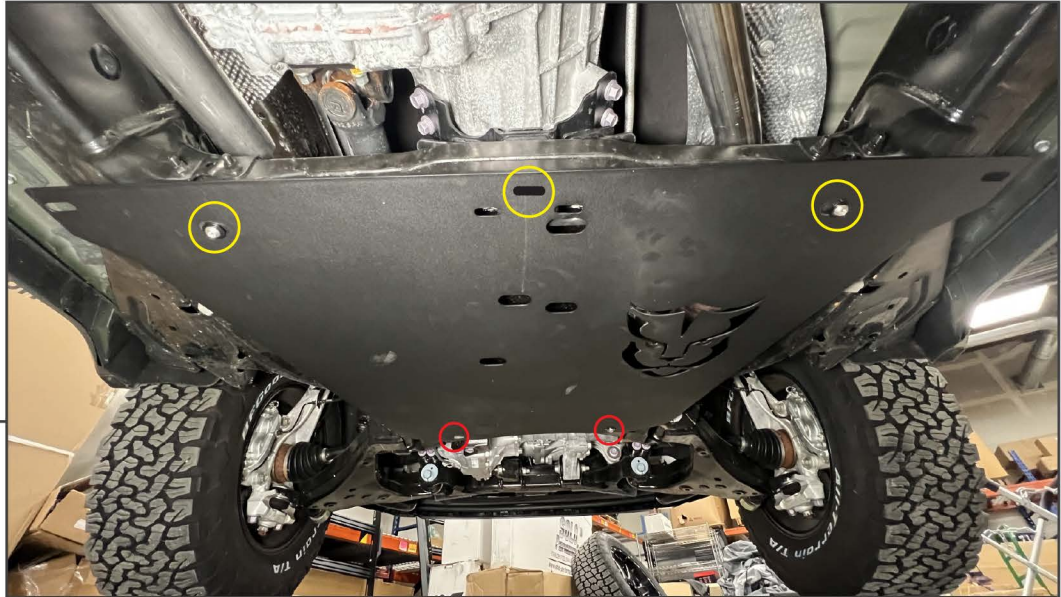

With assistance, lift the skid plate to the vehicle. Secure the skid plate to the front of the vehicle using (2) M8 x 45mm bolts, (2) M8 lock washers, and (2) M8 flat washers into the vehicle threaded holes. Fit (2) spacers between the frame and the skid plate.

Secure the rear of the skid plate to the previously placed nut plates using (3) M10 x 40mm bolts, (3) M10 lock washers, and (3) M10 flat washers. Fit (3) spacers between the crossmember and the skid plate.

### STEP 4



Adjust the skid plate as necessary for a symmetrical fit to the vehicle frame.

Secure the skid plate by tightening all hardware evenly until secure.

Installation is now complete.