



Thank you for your business

Please read all instructions before starting


Tools needed for installation.

- Sharp pin knife (Xacto knife)
- .375 (3/8) Drill bit
- 13mm wrench
- 14mm wrench
- 5/16 nut driver
- Drill
- Felt pen

These instructions will cover the Long panel and the add-on panel.

If you have just the Long panel 36 x 12

1. Center the panel both left and right top to bottom on the rear wall of your Tundra. If you plan on adding the short panel at a later date, push this long panel either to the far right or far left. Mark the small holes marked in red with felt pen.

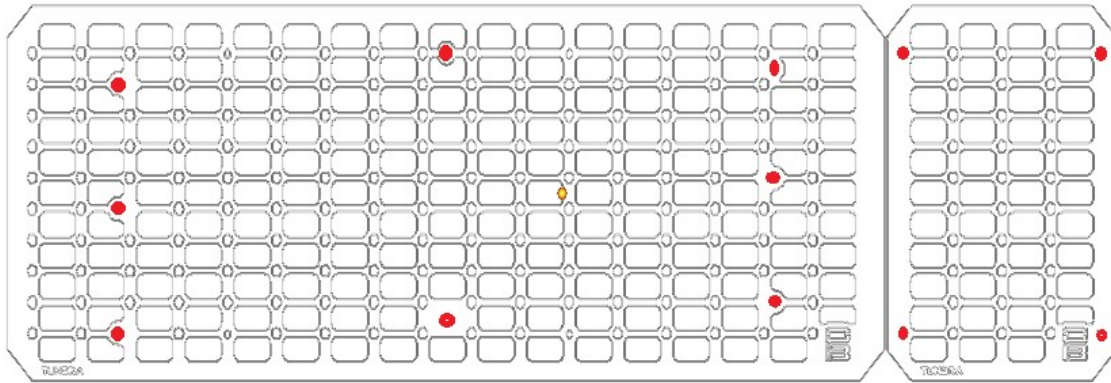

2. With (3/8) .375 drill bit drill holes out for white nut inserts. No, the nut insert will not fit in the hole yet.
3. Once all holes are cut in the plastic behind the seat. Use one of the nut inserts to mark where you need to cut the corners out. Use a sharp knife to cut the rest out to insert the white nuts.
4. Insert all white huts you have holes for.
5. Using the provided hardware. Insert bolt into M6 washer, Through Molle(PSD) rack, Through rubber spacer into the White insert nut. Do this across the top to start then work your way down to bottom. Leave a little loose. For final adjustment.
6. Repeat step 5 till all has been started.
7. Tighten all bolts. You may have to hold white nuts with the appropriate wrench.

We supply decals with all orders. This was a tradition with me and my father. Every time he got something for his project, me and my brother got all the decals. Mooneyes was my favorite.

If you have any questions contact us.

sales@orangeboxxfab.com

Our hours are Monday - Friday 9am - 4:30 pm eastern

Tag us on Instagram

#orangeboxxfab