



(1) Locate and remove the wiring harness connected to the lights and the tow hitch receiver

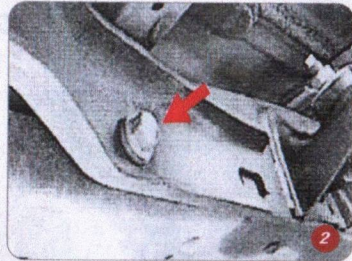


(2) Locate and remove the single 16mm bolt attaching the rear of the tow hitch to the frame of the vehicle

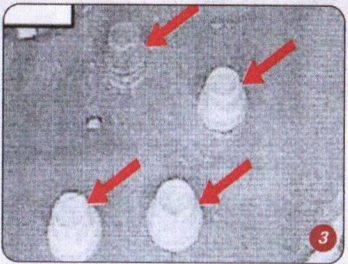

(3) Locate and remove the four 16 bolts towards the front of the tow hitch.


NOTE: The removal of these bolts will allow the bumper of fall. Make sure there is sufficient support for the bumper and the hitch.

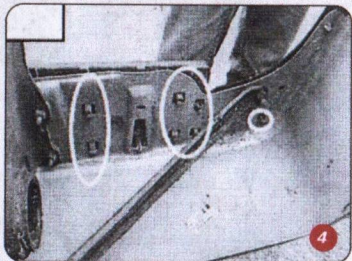


(4) Place bumper with tow hitch onto work beach and remove license plate frame




(5) Unclip plastic clips that are holding the plastic step to the top of the bumper.

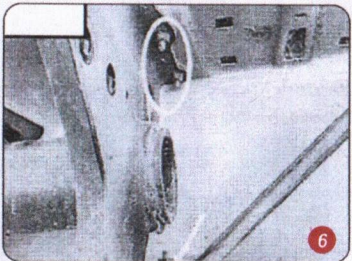


(6) Remove the three 12mm bolts that attach the bumper to the tow hitch.

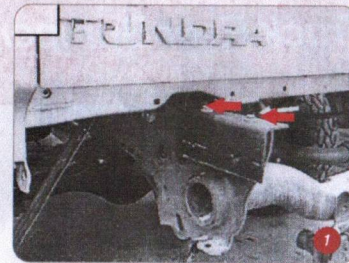

(1) Attach L-Brackets to top of tow hitch, using with 4 of F1, F2&F3.

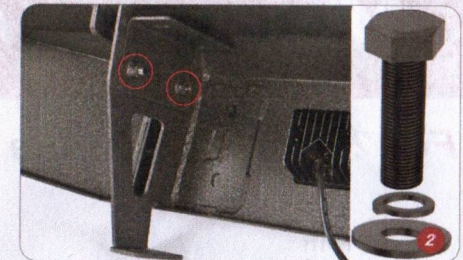

(2) Attach the new bumper, using with 4 of E1, E3&E4

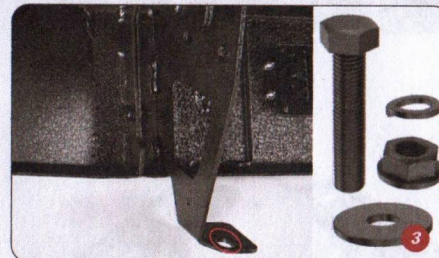

(3) Fix bumper, using with 2 of F1, F2, F4& 8 of F3.



(4) Reattach tow hitch receiver harness and license plate lights.

Enjoy Your New Nilight Bumper!






3

Step3

Install the new rear bumper.

For 2007-2013 Toyota Tundra

(1) Contents:

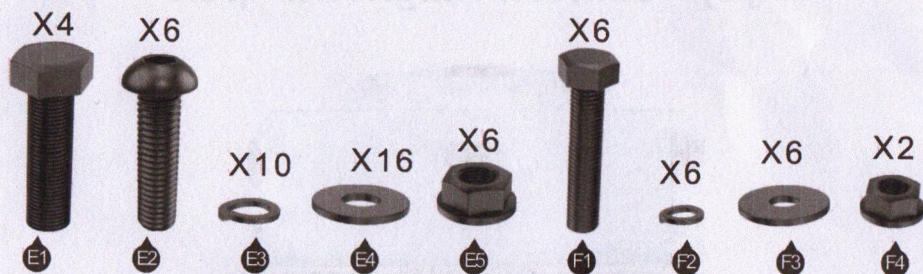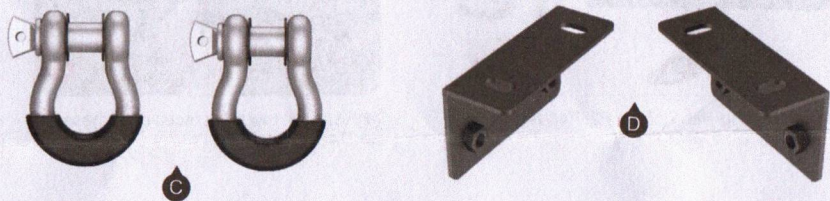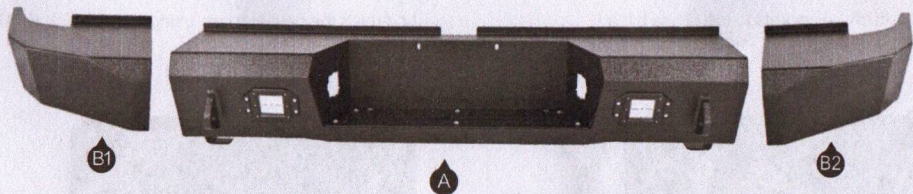

Notes

- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- Please contact us if missing parts or any damage found.

(2) Installation time: About 1 hour, 2-3 people may be needed.


Installation Instruction

1 Step1 Assemble the bumper.

(1) Connect the PART B1, B2 and A, with 6 of E2, E3&E5, 12 of E4.



(2) Install the PART C.

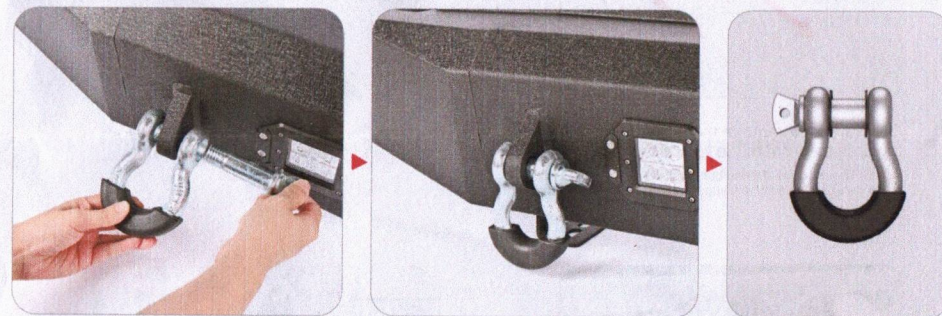

2 Step2 Remove the factory rear bumper

