



(1) While underneath the vehicle, locate and remove the four 8mm bolts that hold the plastic guard on each side of the bumper to gain access to the bolts attaching the bumper to the frame.




(2) Detach the wiring harnesses from the lights.

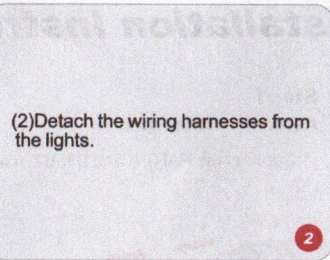


(3) Using a 12mm socket remove the four nuts that hold the bumper to the frame of the vehicle.

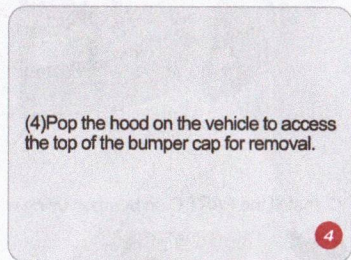


(4) Pop the hood on the vehicle to access the top of the bumper cap for removal.

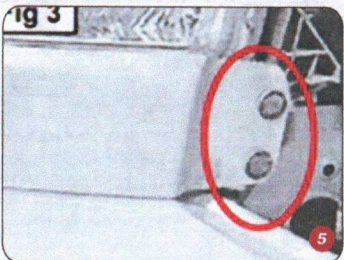


(5) Using a plastic clip remover remove the 2 plastic clips that hold the small portion of plastic under the headlights.

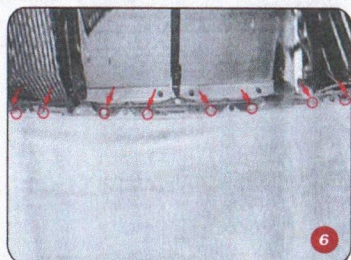


(6) Using a 10mm socket remove the 8 bolts from the center portion of the bumper cap.

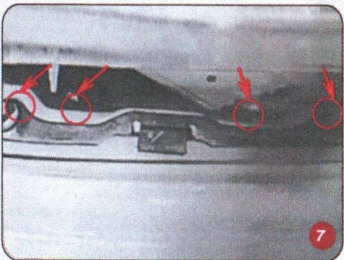


(7) Using a 10mm socket remove the 4 bolts attached to the bumper cap that are located under each headlights.

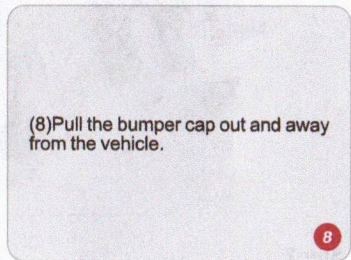

(8) Pull the bumper cap out and away from the vehicle.

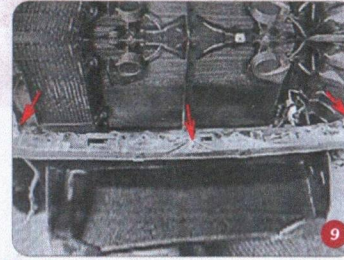


(9) Using a 10mm socket remove the 2 bolts in the plastic piece near the fender.

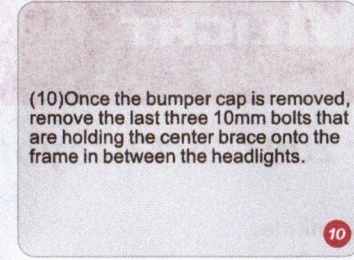

(10) Once the bumper cap is removed, remove the last three 10mm bolts that are holding the center brace onto the frame in between the headlights.

3 Step 3
Install the new bumper.

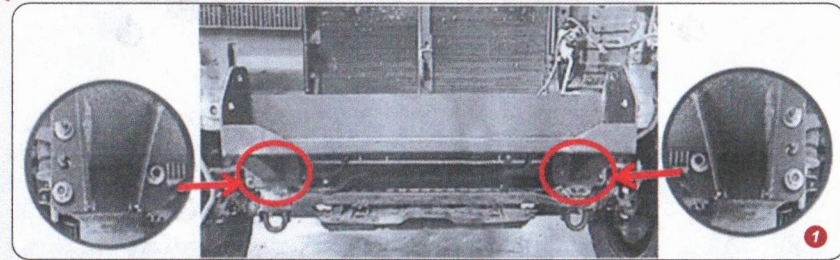

(1) Install the PART D on the car. Locate the supplied bumper support (winch plate) bracket. Using the OEM nuts from the removal process mount the PART D to the vehicle and tighten down.



(2) Install the bumper, attach it to the winch plate. Using with 6 of PART H1, H2, H3&H4.

Enjoy Your New Nilight Bumper!





02



Pickup Truck Front Bumper

For 2007-2013 Toyota Tundra

(1)Contents:

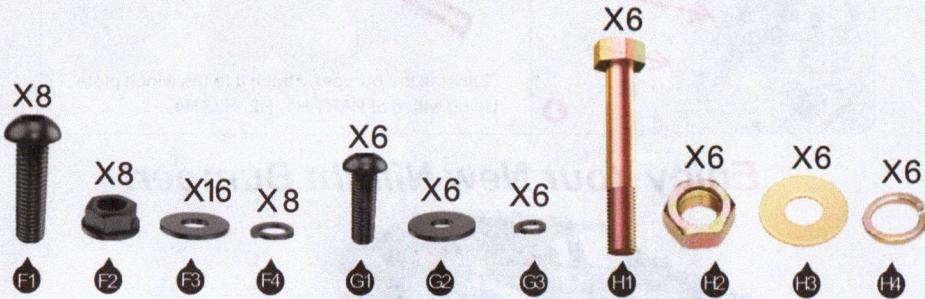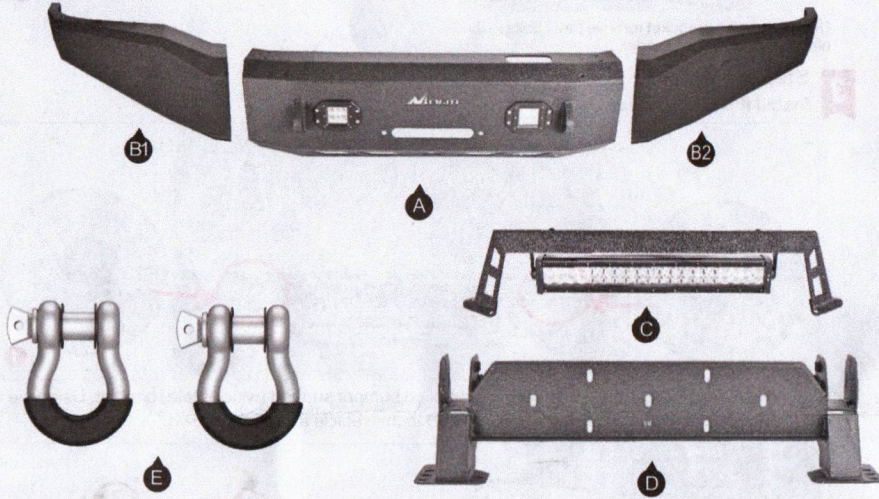


- Notes**
- Read this instruction carefully before starting installation.
 - Proper tools will improve the quality of installation and reduce the time required.
 - Please contact us if missing parts or any damage found.

(2)Installation time: About 1 hour, 2-3 people may be needed.


Installation Instruction

1 Step1 Assemble the bumper.


(1)Connect the PART A and B1, B2, using with 8 of PART F1,F2&F4, and 16 of PART F3.

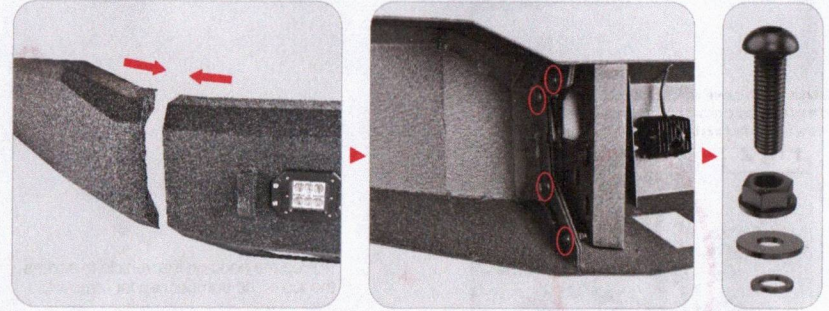

(2)Install the PART C on bumper, using with 6 of PART G1, G2 &G3.

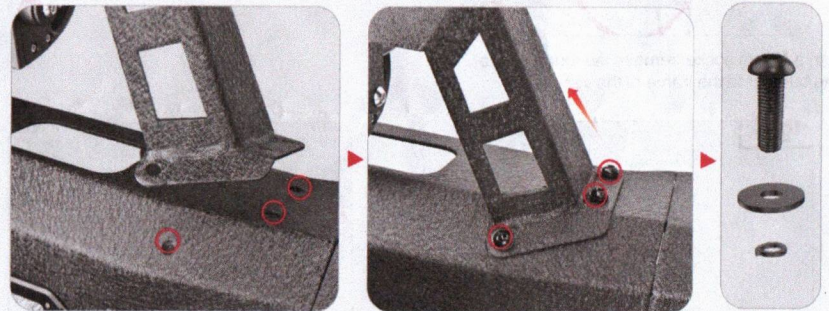

(3)Install the PART E

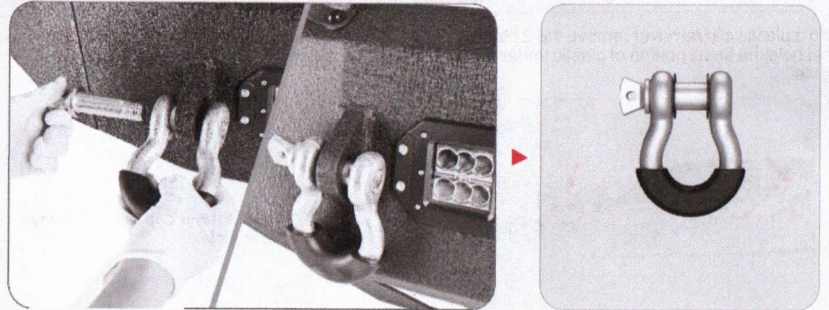

2 Step2 Remove the factory OEM bumper.