



OPEN TRAIL HD RUNNING BOARDS

(2022-2024+ TUNDRA CREWMAX)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) LH Running Board
- (1) RH Running Board
- (1) LH Front Bracket [DF]
- (2) LH Center Brackets [DC]
- (1) LH Rear Bracket [DR]
- (1) RH Front Bracket [PF]
- (2) RH Center Brackets [PC]
- (1) RH Rear Bracket [PR]
- (16) M8 x 30mm Hex Bolts
- (16) M8 x 24mm OD x 2mm Flat Washers
- (16) M8 Lock Washers
- (16) M8 x 25mm Combo Bolts

TOOLS REQUIRED

13mm Socket/Wrench
Ratchet

SKU # TU42453
Edited:04/15/2024

STEP 1

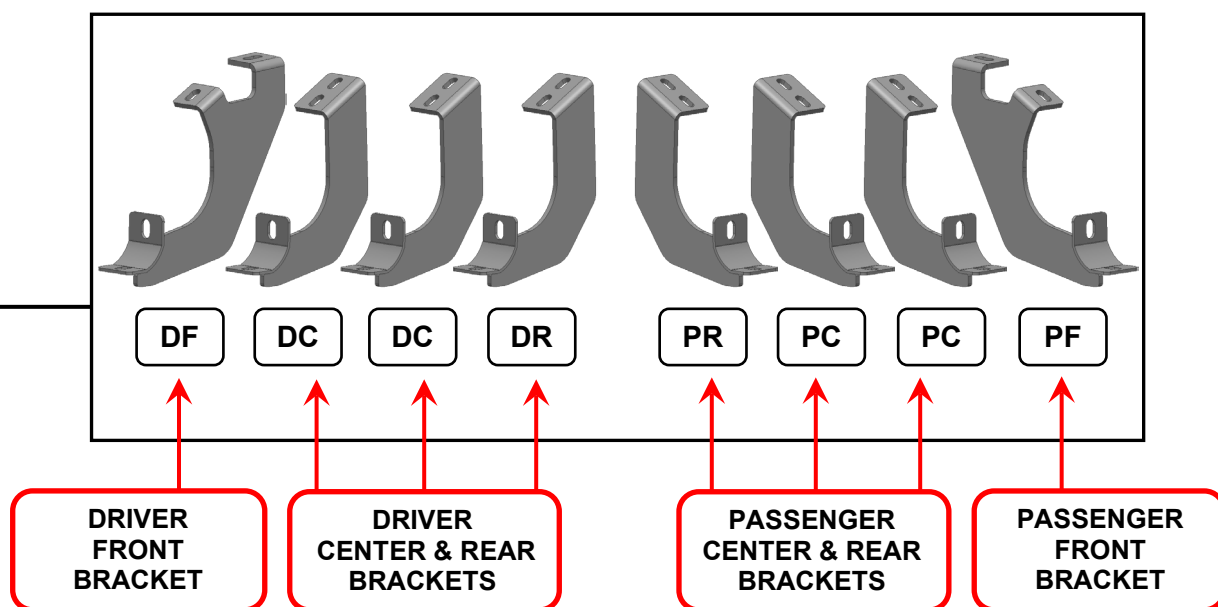


Please identify each mounting bracket using the engraved location identifier. **Notice: The center bracket and rear bracket per side are interchangeable.**

DF: Driver Front
DC: Driver Center
DC: Driver Center
DR: Driver Rear


PF: Passenger Front
PC: Passenger Center
PC: Passenger Center
PR: Passenger Rear

STEP 2

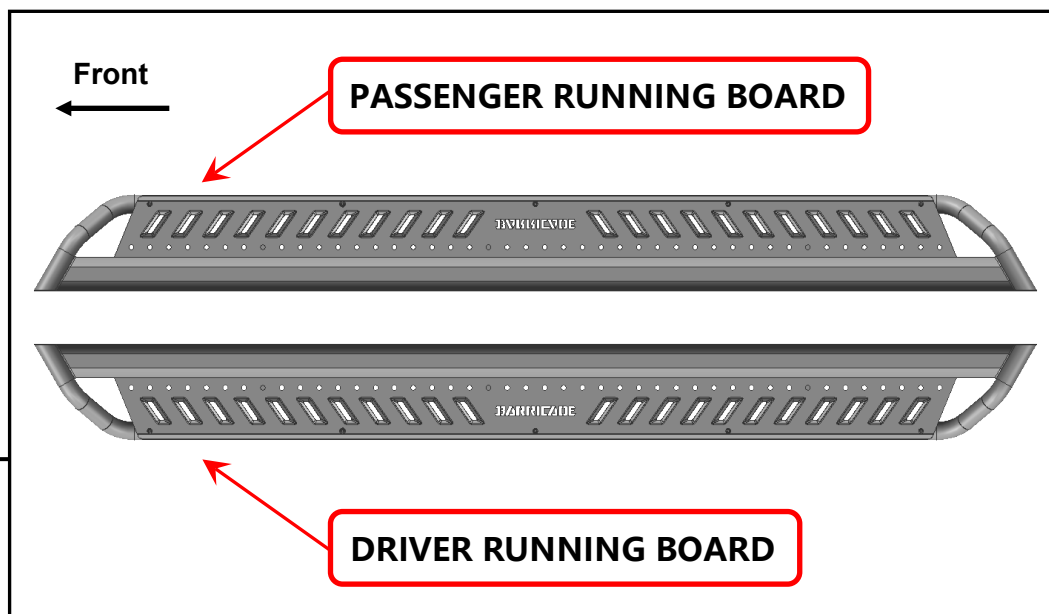

Identify each running board by identifier on the front. **Notice: "D" for Driver/Left Side; "P" for Passenger/Right Side.**


STEP 3

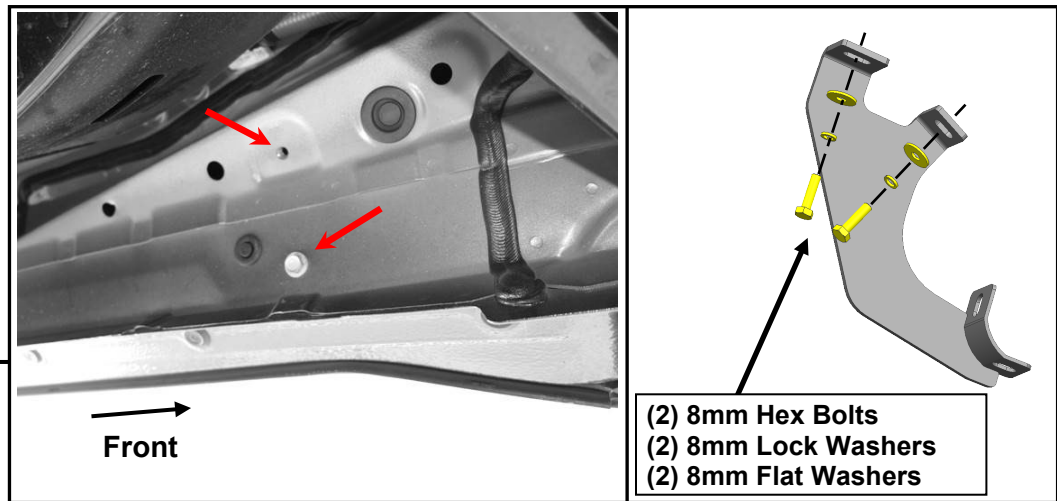

Start installation toward the front of the Driver/Left side of the vehicle.


Loosely fit the (1) Driver Front bracket to the vehicle threaded body hole using (2) M8 x 30mm bolt, (2) M8 lock washer, and (2) M8 flat washer. Do not fully tighten to allow for later adjustments.

STEP 4

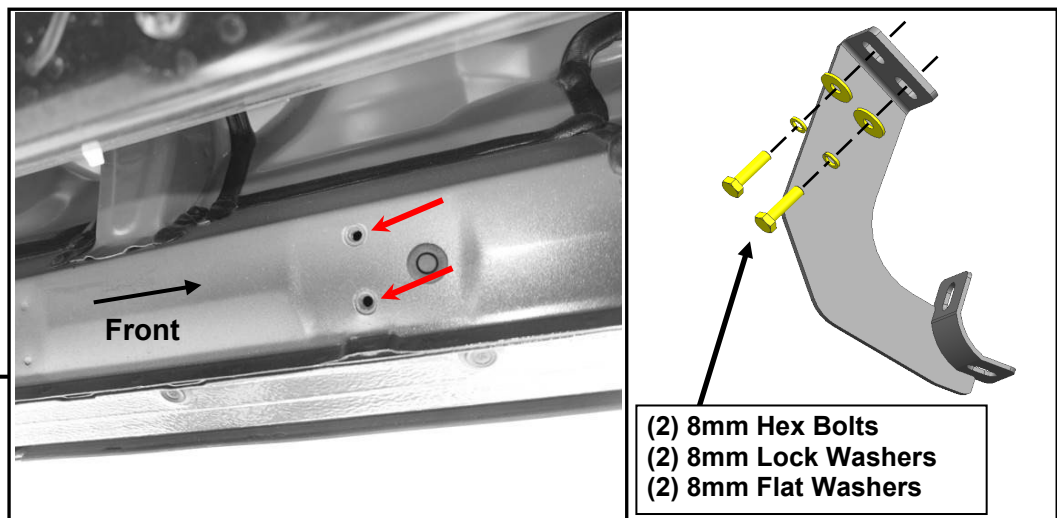


Loosely fit the (1) Driver Center bracket to the vehicle threaded body hole using (2) M8 x 30mm bolt, (2) M8 lock washer, and (2) M8 flat washer. Do not fully tighten to allow for later adjustments. Repeat this step for the remaining Driver Center & Rear brackets.

STEP 5

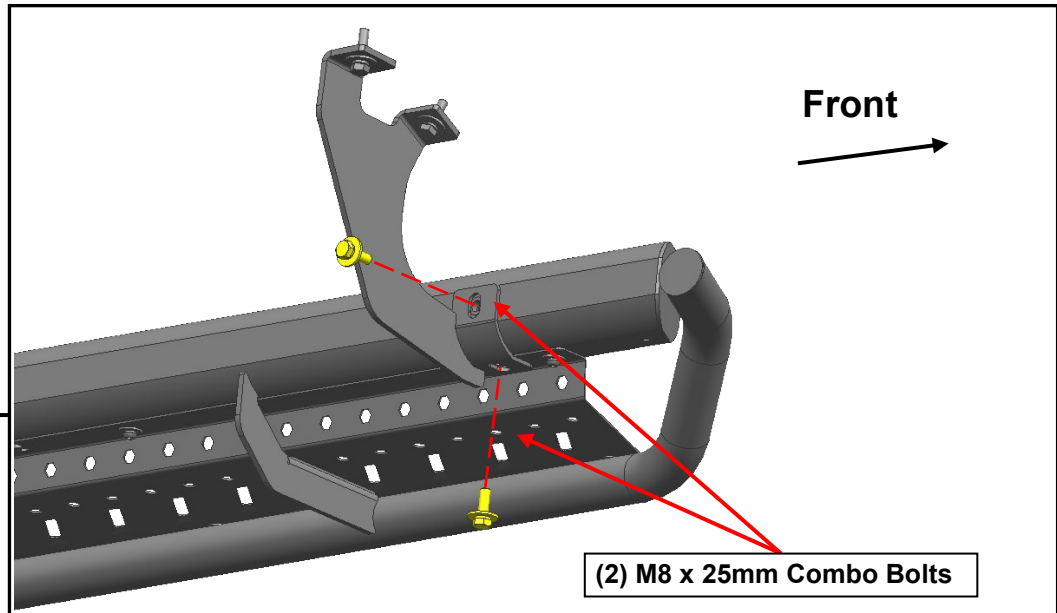

With all brackets loosely mounted to the vehicle, fit the running board onto the brackets, and loosely secure into place using (8) M8 x 25mm combo bolts.

STEP 6

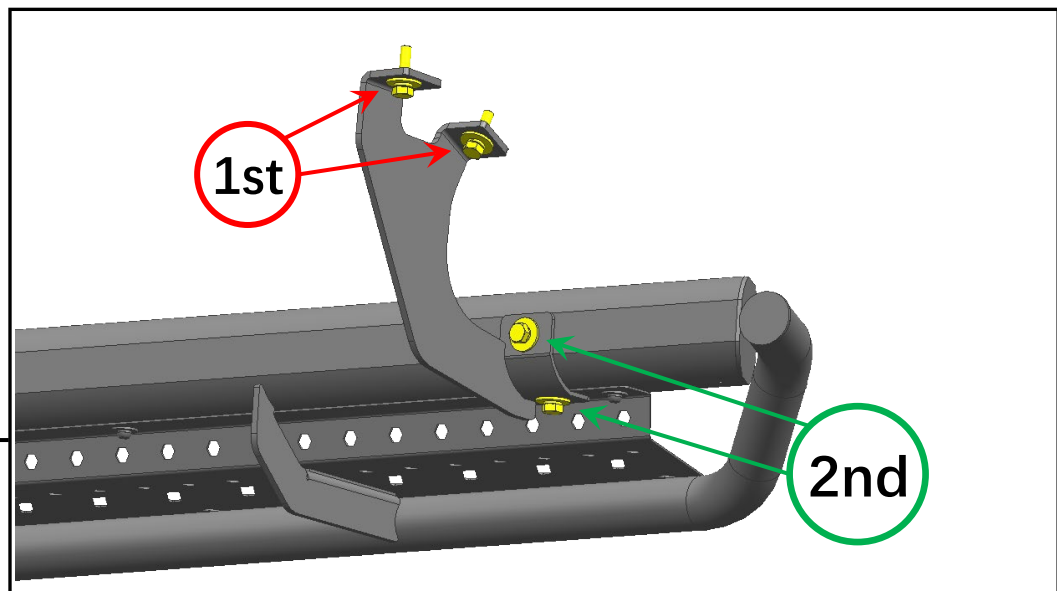

Tighten the mounting brackets to the vehicle. Adjust the running board to the desired angle, and tighten the M8 combo bolts to secure the step into place. See photo for tightening order visual.

Repeat steps 1-6 for the remaining Running Board.

Installation is now complete.