

---

# VELCRO ROLL-UP TONNEAU COVER

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (2) Bed Rail Channels
- (1) Velcro Roll-Up Tonneau Cover
- (6) Rail Clamps

### TOOLS REQUIRED

---

- 4, 5mm Allen Wrench
- Phillips Head Screwdriver



---


**STEP 1**



Place the rails on either side of the bed. The Velcro side faces out with the latch portion of the rail facing the rear of the vehicle.

---

**STEP 2**

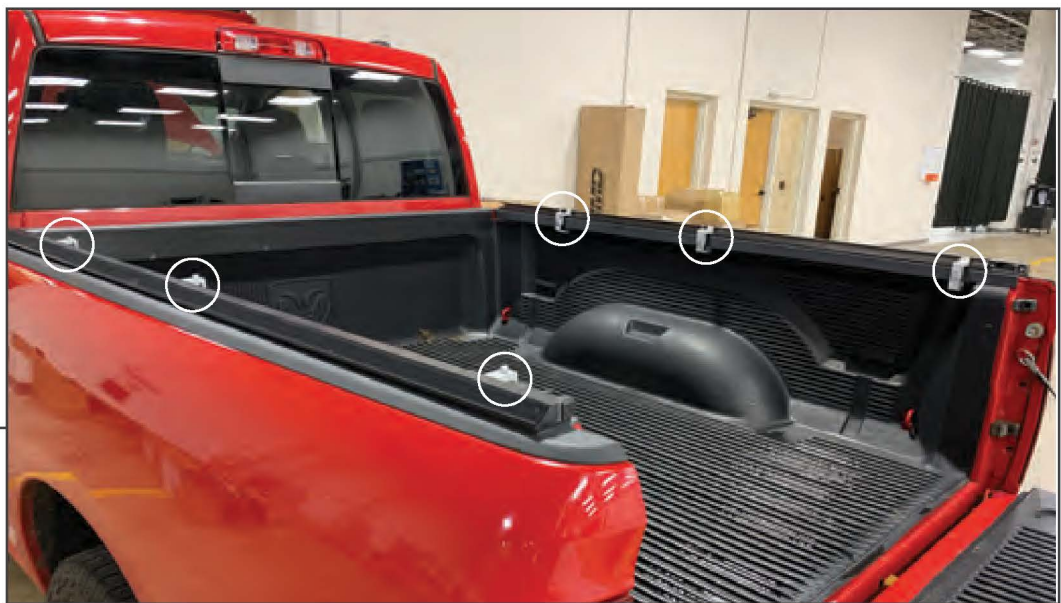


Space the rail clamps evenly over the distance of the bed rail. Tighten the clamps enough so that they are secure but leave them loose enough that you can move the rail forward/backward. \*\*For vehicles with utility rails, see the last page of the install guide.



---

### STEP 3

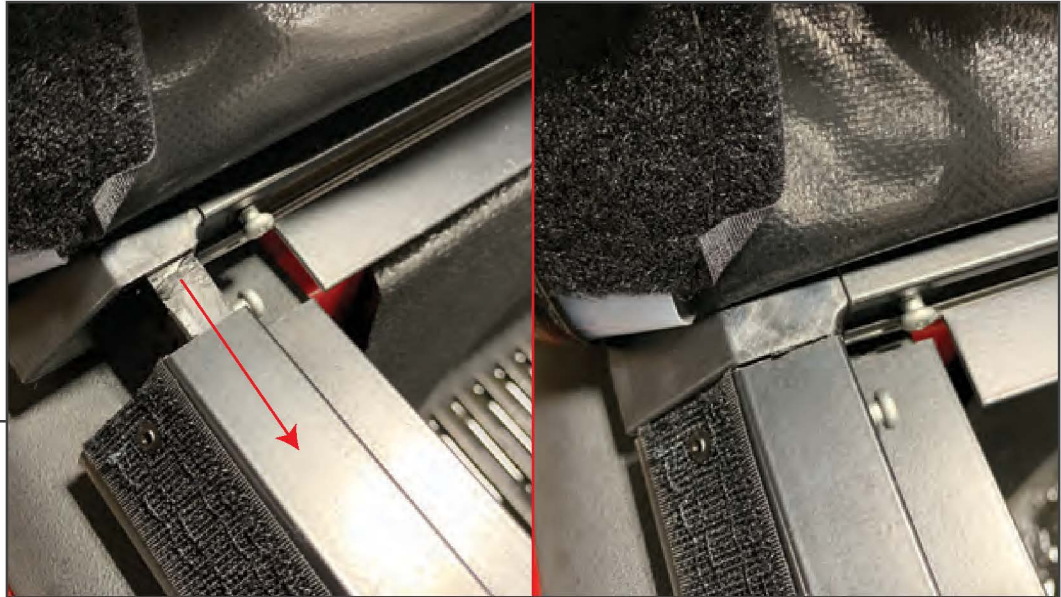

Slide the tonneau cover into the rails at the front of the bed. The plastic portion slides into the bed rails on both sides of the vehicle. Tighten the Philips head screw to secure the tonneau cover to the rails.

---

### STEP 4




Fold the tonneau cover towards the rear of the vehicle. Hook the end of the tonneau cover into the latch portion of the rails. This may require you to move the rails side-to-side and front-to-back. Once the rails are square and the cover latches into place, carefully pull the release cable located at the center of the tonneau cover to release it from the latches. Fold back the cover and tighten all clamps.



### STEP 5

When not in use, roll back to tonneau cover and secure it using the pre-installed nylon straps.

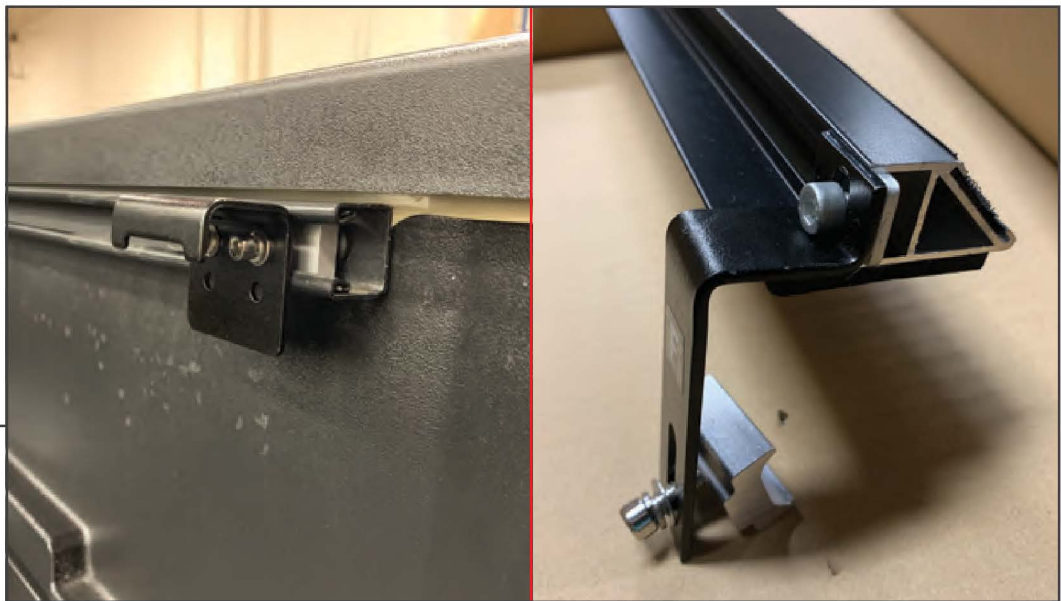

### Factory Utility Rails

For vehicles with factory bed rails, remove the rail end caps and install the supplied utility rail clamps. There are several styles of clamps (2) are shown above.