

REDROCK

FRONT BUMPER VENT TRIM

(2022-2025+ TUNDRA)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Bumper Vent Trim
- (1) RH Bumper Vent Trim
- (2) Alcohol Prep Pad
- (2) Adhesion Promoter Prep Pad

TOOLS REQUIRED

- Exterior Detailer
- Microfiber Cloth

SKU # TU56727
Edited: 05/21/2025

REDROCK


STEP 1



- Clean the front bumper vent using exterior detailer and a microfiber cloth, allow to fully dry.
- Clean the front bumper vent using the included (1) alcohol prep pad, allow to fully dry.
- Clean the front bumper vent using the included (1) adhesion promoter prep pad, allow to fully dry.

Before removing the tape backing, test fit the vent trim panel to familiarize fitment.

STEP 2

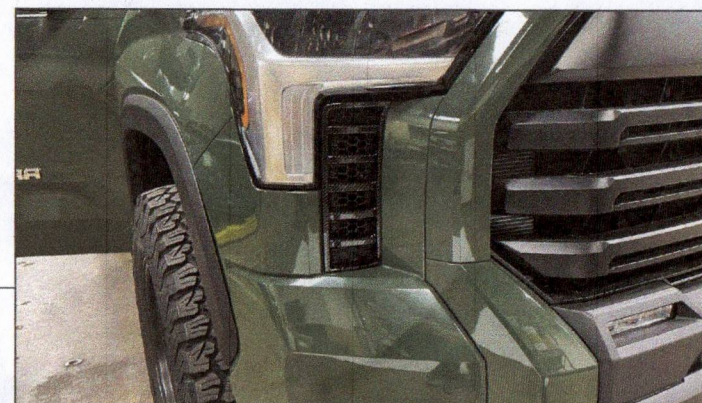

Peel the red tape backing from the vent trim panel, and firmly press the panel to the vehicle bumper vent.

Installation is now complete.