

REDROCK

MUD GUARDS

(2007-2021 TUNDRA)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Mud Guard [FL]
- (1) RH Front Mud Guard [FR]
- (1) LH Rear Mud Guard [RL]
- (1) RH Rear Mud Guard [RR]
- (8) Phillips Screws
- (4) V-Clips

TOOLS REQUIRED

- 10mm Socket
- 1/4" Drive Ratchet
- Phillips Screwdriver

SKU # TU56786

REDROCK


STEP 1 [FRONT]



Remove the (4) 10mm screws from the inner fender liner.

Note: For easier access, turn the steering wheel to move the front wheel away from the fender.

STEP 2 [FRONT]

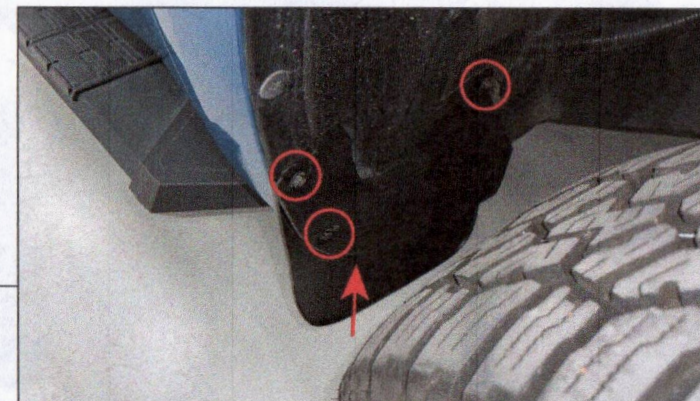

Fit the appropriate mud guard to the vehicle, and secure into place using the original (4) 10mm screws.

Note: Do not over-tighten the mud guard into place. The OEM fender liner fastener mount is plastic and can strip if over-tightened.

Repeat Steps 1-2 for the remaining front mud guard.

REDROCK

STEP 3 [REAR]



Remove the (4) 10mm screws and (1) plastic push clip from the vehicle inner fender liner.

Note: Removing the rear wheel may be necessary for adequate working room.

STEP 4



Fit the appropriate mud guard to the vehicle, and secure into place using the original (5) 10mm screws and (1) plastic push clip. If necessary, use the included V-Clips if the inner fender liner does not have screw mounts.

Note: Do not over-tighten the mud guard into place. The OEM fender liner fastener mount is plastic and can strip if over-tightened.

Repeat Steps 3-4 for the remaining rear mud guard.

REDROCK

STEP 5



Installation is now complete.