

INSTALLATION INSTRUCTIONS

A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS/B/C

Parts List:

- | | |
|--|---|
| <p>a) 1- LEG Driver side</p> <p>b) 1- LEG Passenger side</p> <p>c) 1- Cross Bar</p> <p>d) 2- Mounting plate</p> <p>e) 2- Tube spacer</p> <p>(1) Hardware kit includes:</p> <p>f) 8- Plastic flat washer</p> <p>g) 2- Round plastic gasket</p> <p>h) 2- Rectangle plastic gasket</p> | <p>i) 4- Plastic cover</p> <p>4- 3/8 x 5" Carriage bolt</p> <p>8- 3/8 x 1 1/2" Flat washer</p> <p>8- 3/8" Nut</p> <p>8- 3/8 x 1 1/2" Carriage bolt</p> <p>2- 3/8 x 1 1/2" Flat head bolt</p> <p>2- 3/8x5 1/2x2" Hex head bolt</p> <p>2- 3/8" Flat washer</p> <p>2- Whrite plastic washer</p> |
|--|---|

Not Includes:

B type Main bar
Kicker


Required tools:

9/16" Wrench	Hand drill	Pencil
7/32" Allen wrench	7/16" Bit	


Instructions:

Aprox. Installation time: 50 min.

1. Read carefully and understand instructions before beginning installation. If you can not find any listed part, please stop installation and call to your distributor to get the missing parts, **on the last page mentions Main Bar B and Kicker, these accessories are sold separately.**

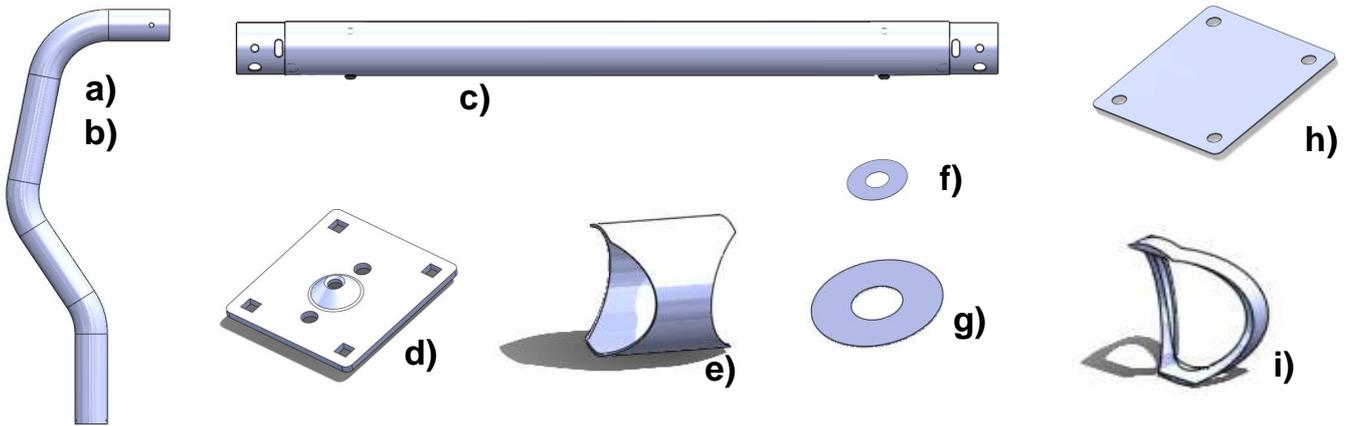


Pict. 1

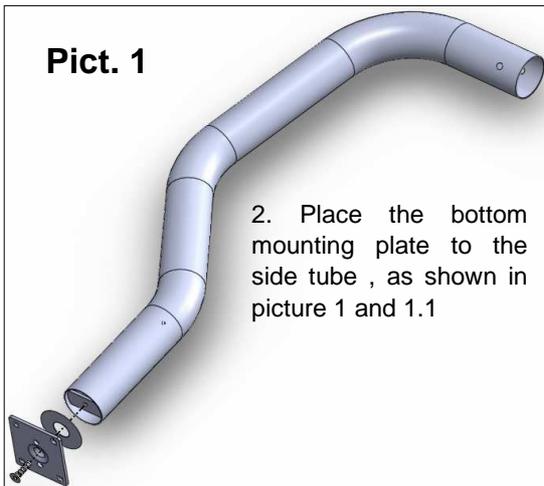

2. Place the bottom mounting plate to the side tube, as shown in picture 1 and 1.1

Pict. 1.1

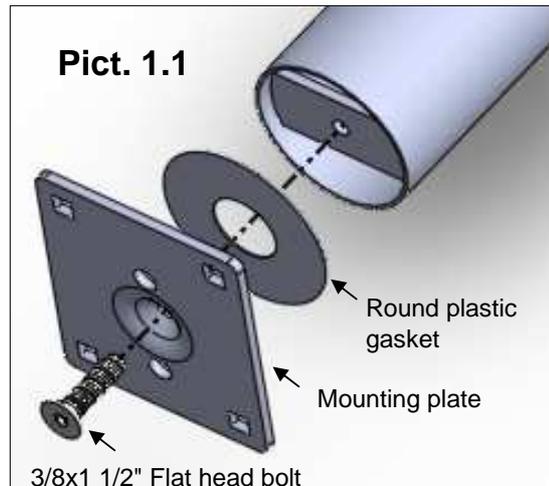

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:




Quality:

INSTALLATION INSTRUCTIONS

A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS/B/C

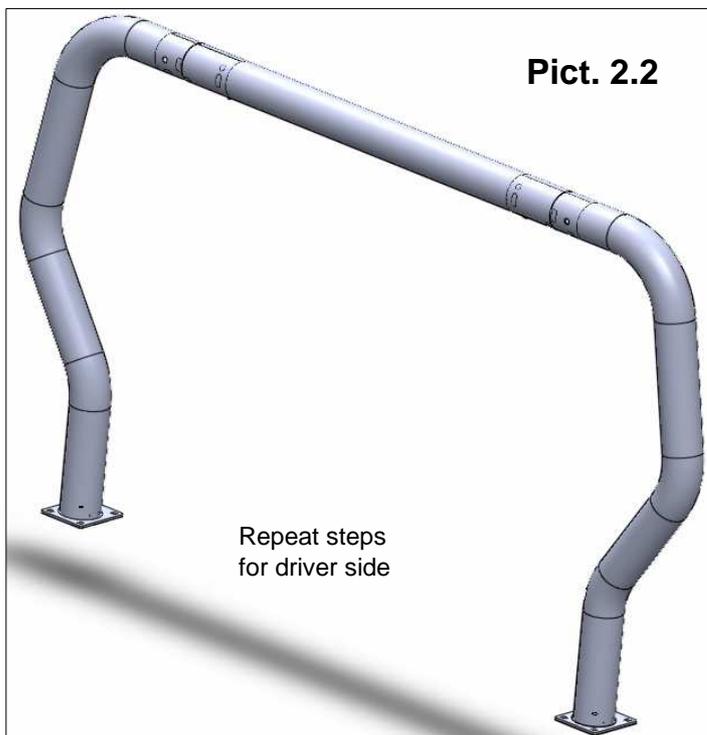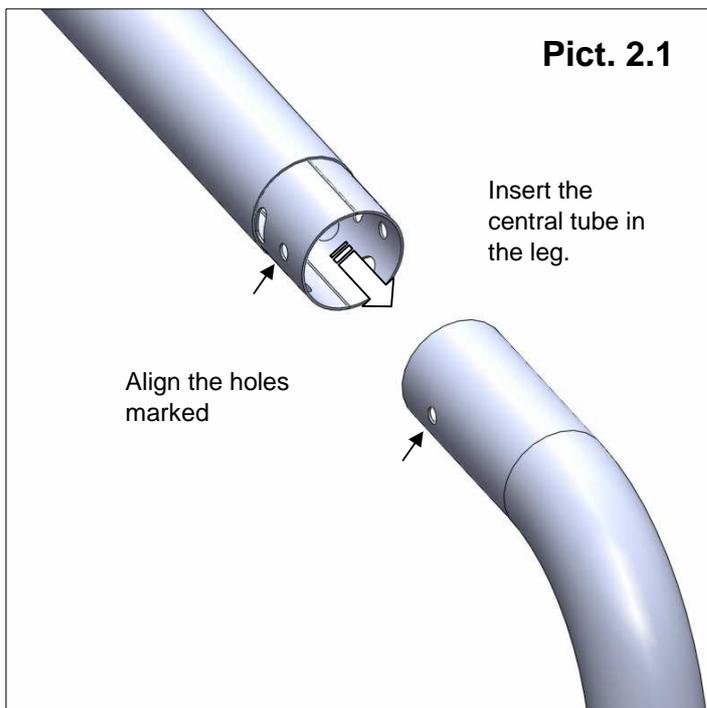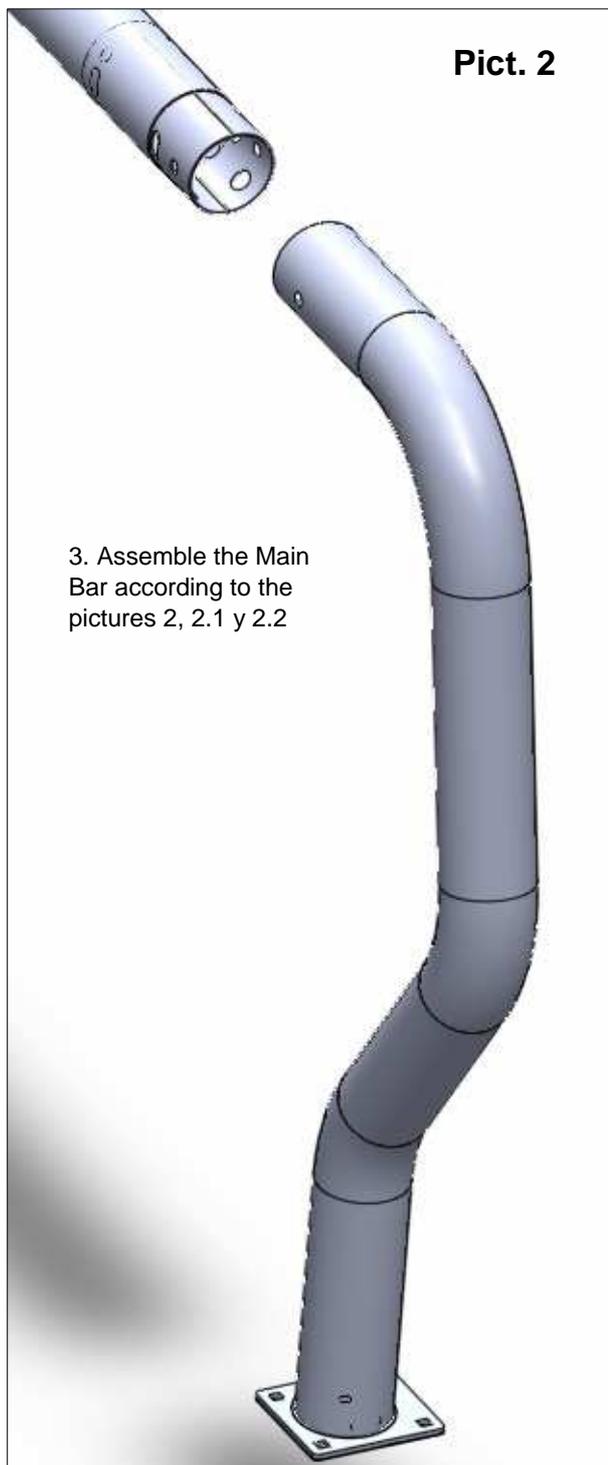

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS

A type MAIN BAR




90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001

PS/B/C

3. Place the frame on the floor of the box, with a pencil mark the locations. to set main bar on both sides of the truck pict 3

4. Remove the Main bar and drill 7/16" holes pict 4

5. Relocate the Main bar, and attach it to the floor of the box. Pict 5

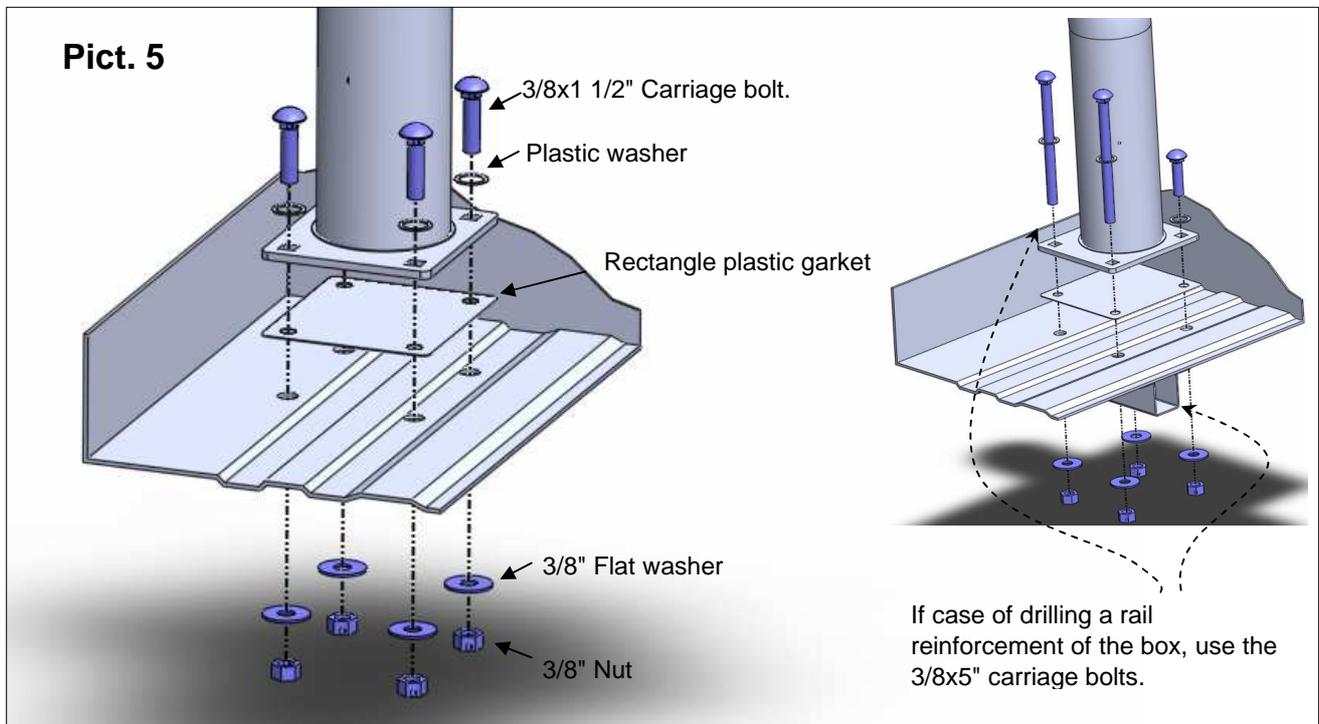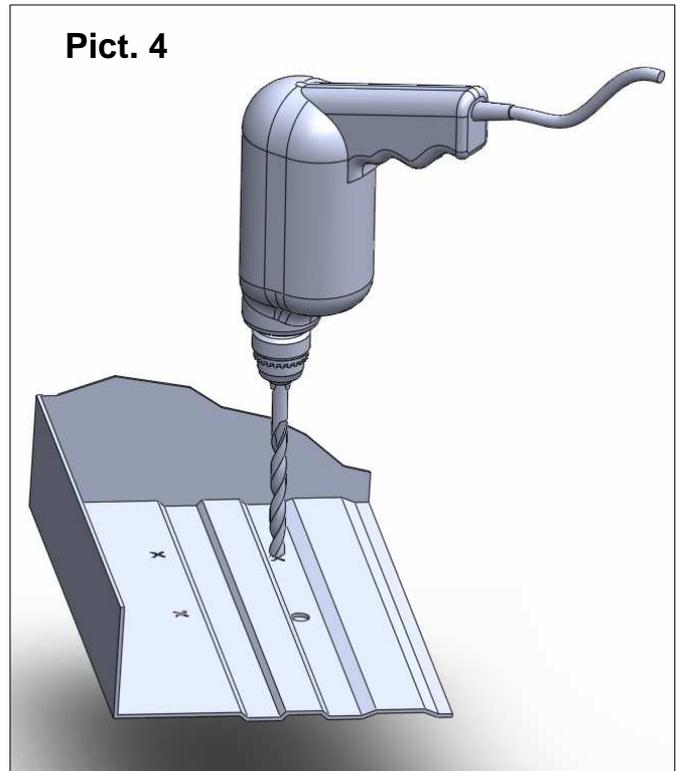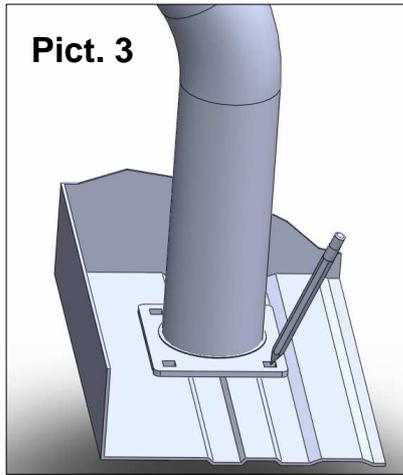

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS


A type MAIN BAR

90001, 91001, 91501, 92001, 93001, 94001, 95001, 96001, 97001 y 98001




PS/B/C

6. Follow the instructions contained in the B Bar B to assemble, and to keep the armed continue with step 7.

7. 6 and 6.1 The image shows you how to assemble your Bed Bar with a Type A Type B

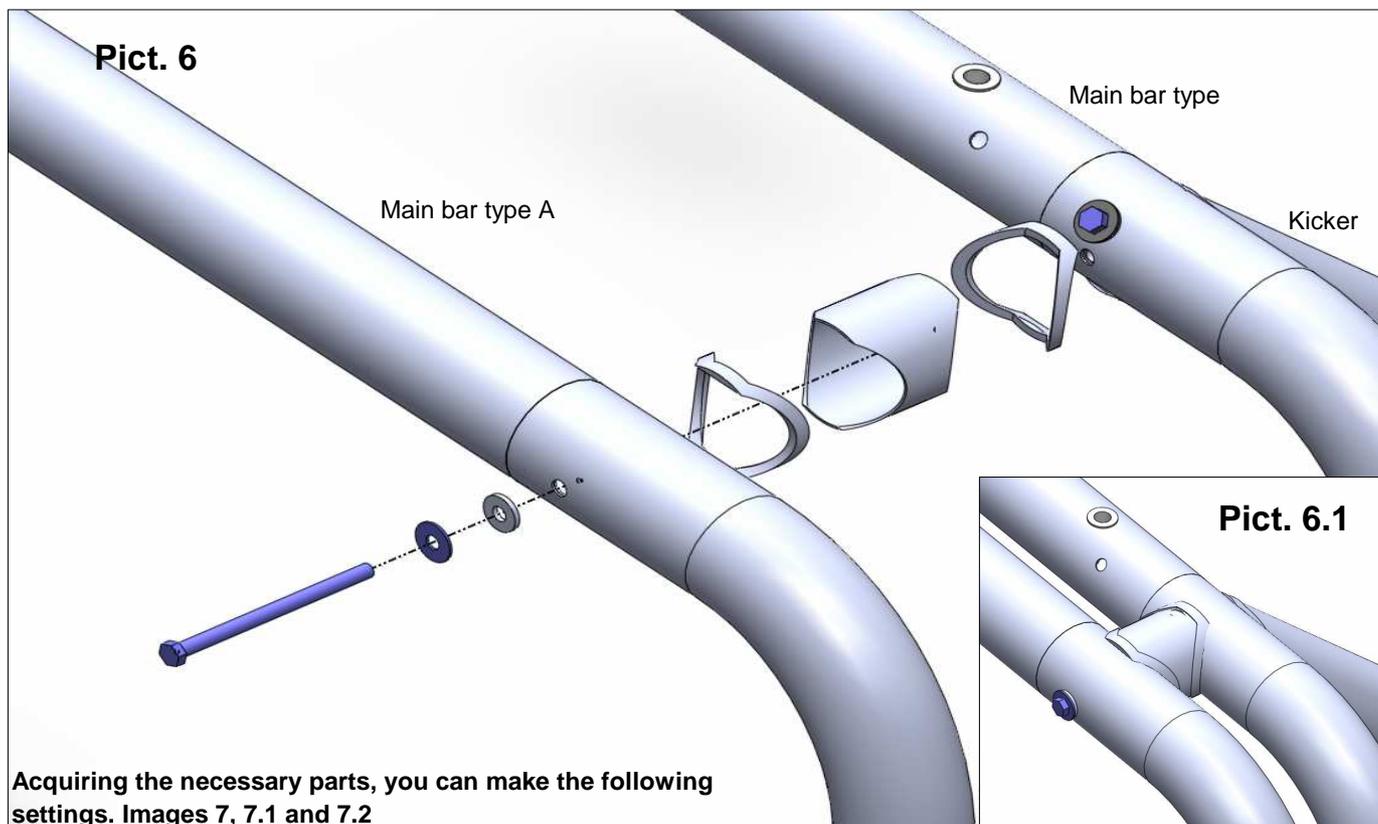

Acquiring the necessary parts, you can make the following settings. Images 7, 7.1 and 7.2

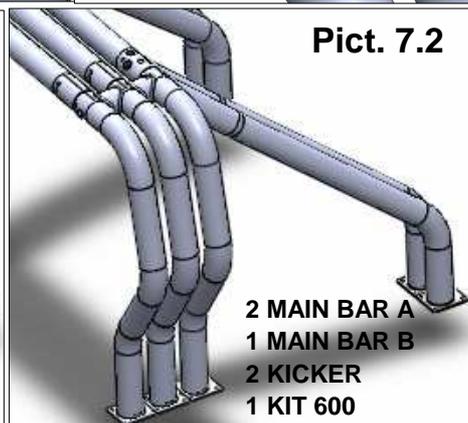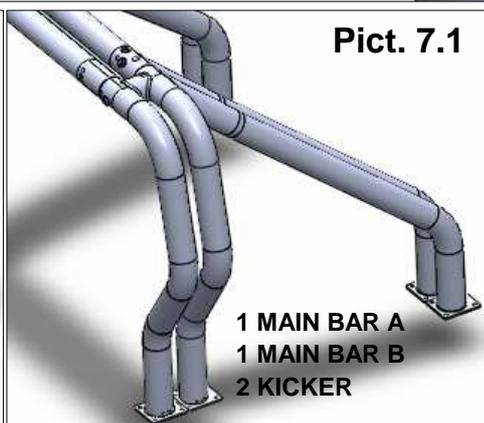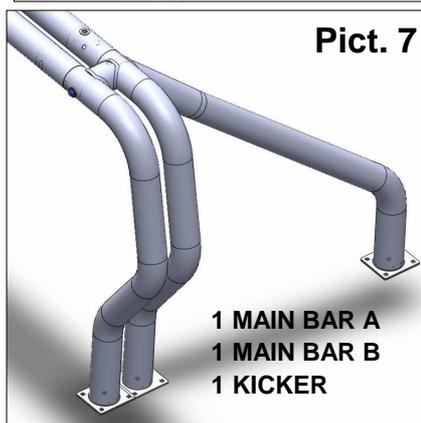

8. Align Bed Bar, and then tighten all bolts, from bottom to up.

9. Periodically it may need a bolts re-tighten.

10. Fill out the warranty card and place it inside your vehicle's glove box.

Cleaning and care instructions:

Design:

Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

INSTALLATION INSTRUCTIONS

MAIN BAR TIPO B

90002, 91002, 91502, 92002, 93002, 94002, 95002, 96002, 97002 y 98002

PS / B / C

Parts List:

a) 1- Driver Leg

b) 1- Passenger Leg

c) 1- Cross bar

d) 2- Mounting plate

(1) Hardware kit includes:

e) 8- Small plastic washer

f) 2- Round plastic gasket

g) 2- Rectangle plastic gasket

h) 2- 7/16" X 1 1/8 Rubber cap

i) 4- 7/16" Plastic cap

8- 3/8x1 1/2" Flat washer

8- 3/8" Hex nut

4- 3/8x 1 1/2" Carriage bolt

4- 3/8x 5" Carriage bolt

2- White plastic washer

2- 3/8x1" Hex head bolt

2- 3/8x1 1/2" Flat head bolt

2- 3/8" Flat washer

Not Includes:

Kicker

Required tools:

9/16" Wrench

Hand drill

Pencil


7/32" allen Wrench

7/16" Bit


Instructions:

Aprox. Installation time: 50 min.

1. Read carefully and understand instructions before beginning installation. If you can not find any listed part, please stop installation and call to your distributor to get the missing parts.

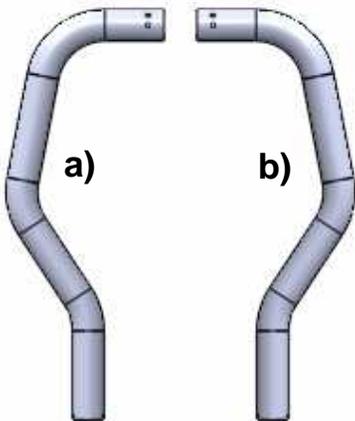


c)

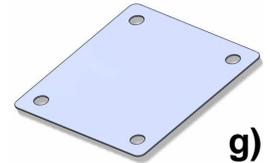

g)



e)




f)




h)



i)

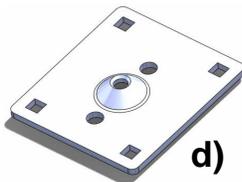


d)

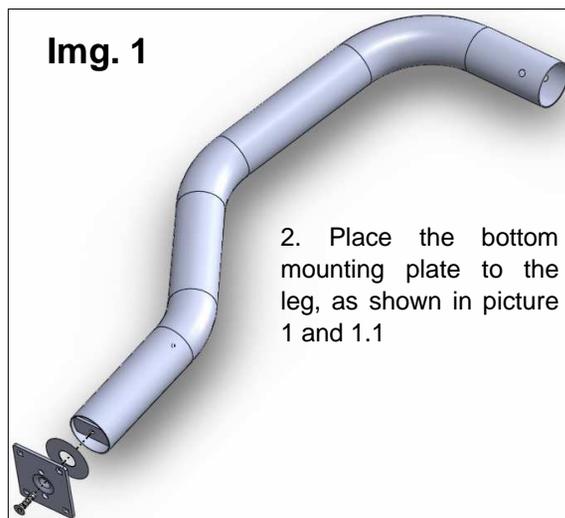

Img. 1

2. Place the bottom mounting plate to the leg, as shown in picture 1 and 1.1

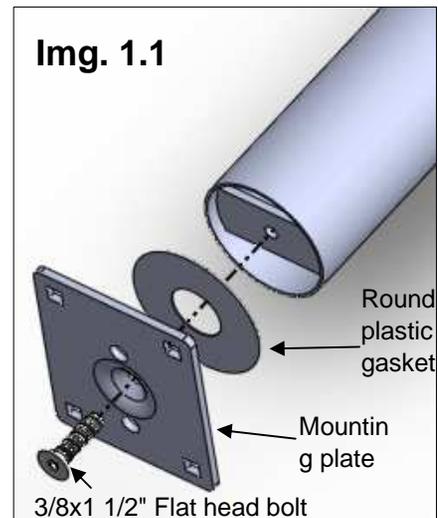

Img. 1.1

Round plastic gasket

Mounting plate

3/8x1 1/2" Flat head bolt

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:




Quality:

INSTALLATION INSTRUCTIONS

MAIN BAR TIPO B

90002, 91002, 91502, 92002, 93002, 94002, 95002, 96002, 97002 y 98002

PS / B / C

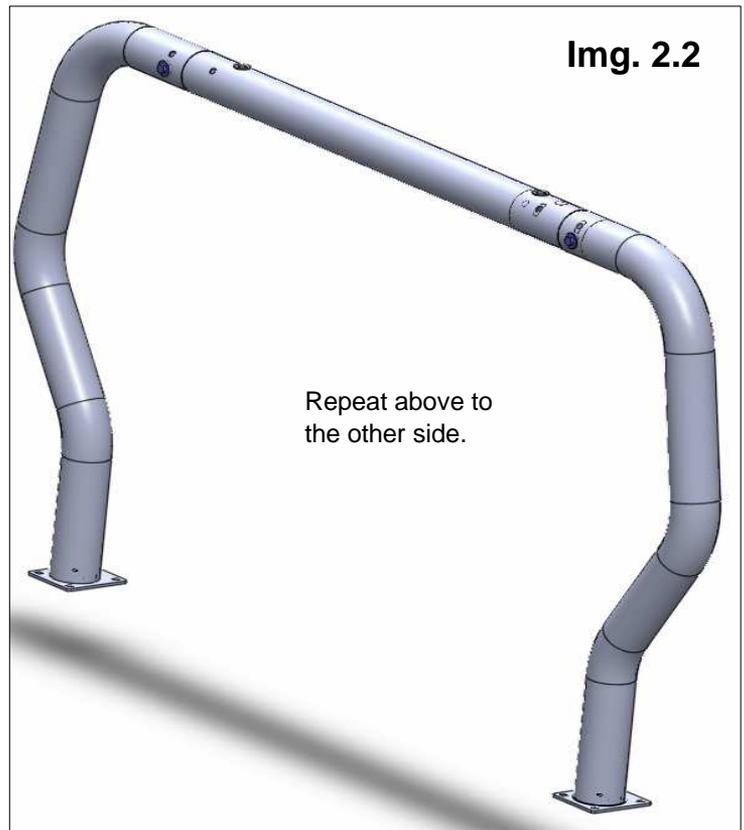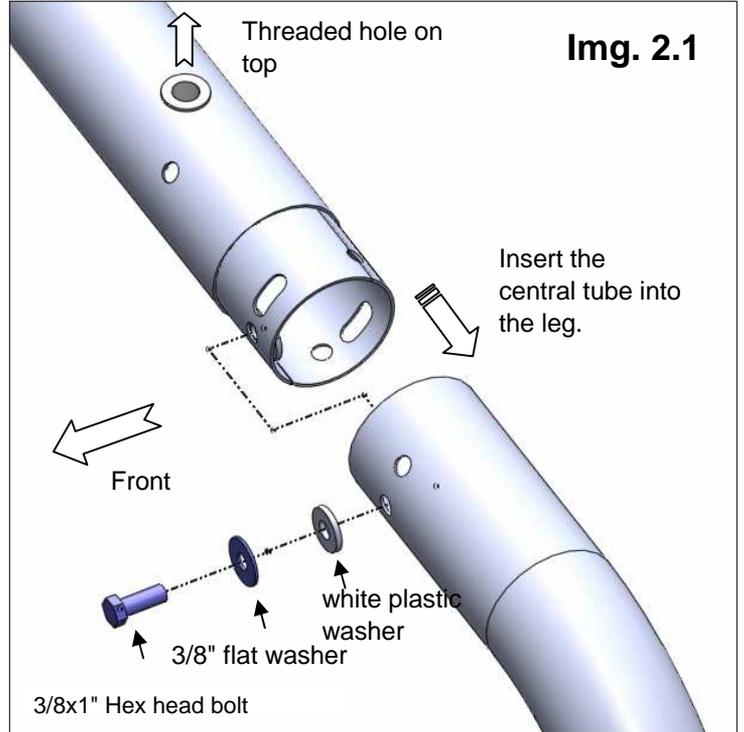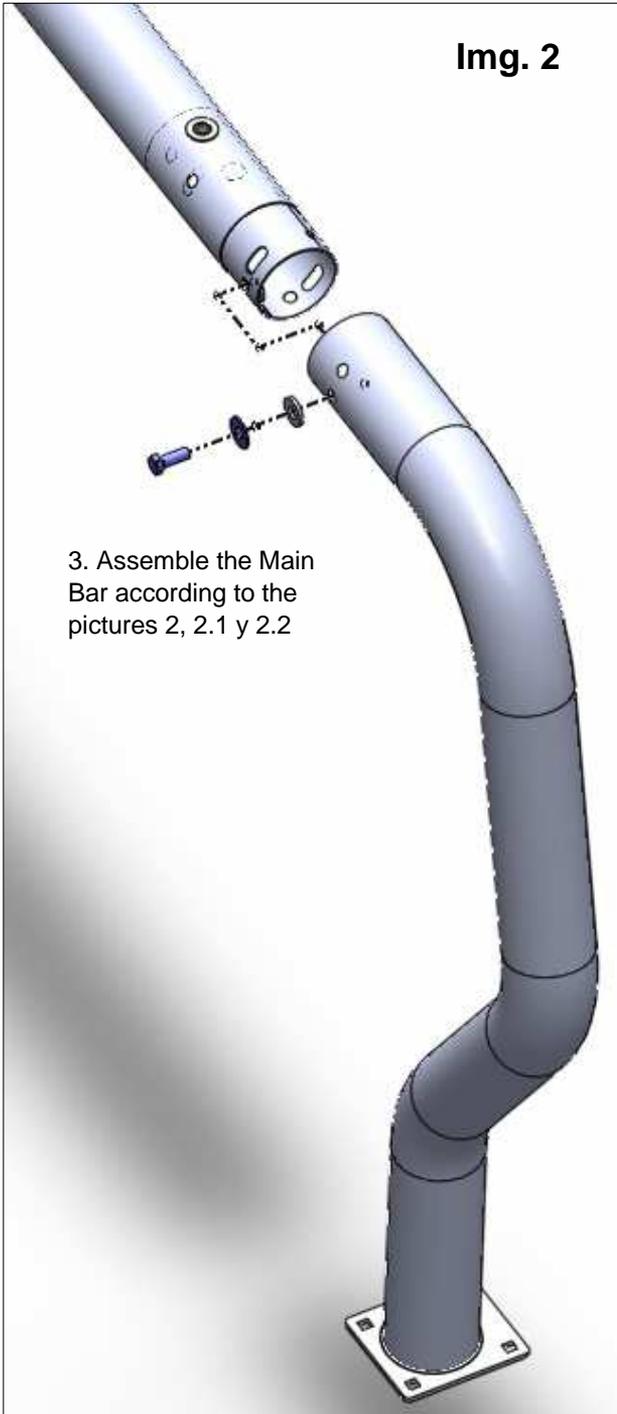

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:


INSTALLATION INSTRUCTIONS

MAIN BAR TIPO B

90002, 91002, 91502, 92002, 93002, 94002, 95002, 96002, 97002 y 98002

PS/B/C


4. Place bar assembly onto the truck bed floor and mark with a pencil the holes to drill at driver and passenger side. Image 3.
5. Proceed to drill where the marks were made. Image 4.
6. Place the bar assembly and secure to the vehicle using 3/8 x 1" carriage head bolt and corresponding hardware. Image 5

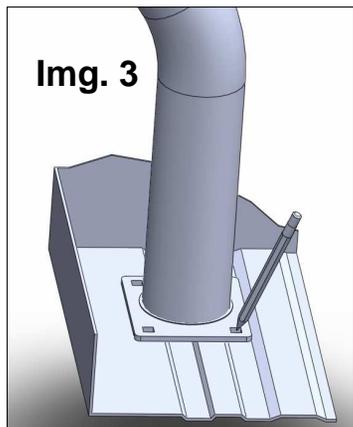

Img. 3



Img. 4

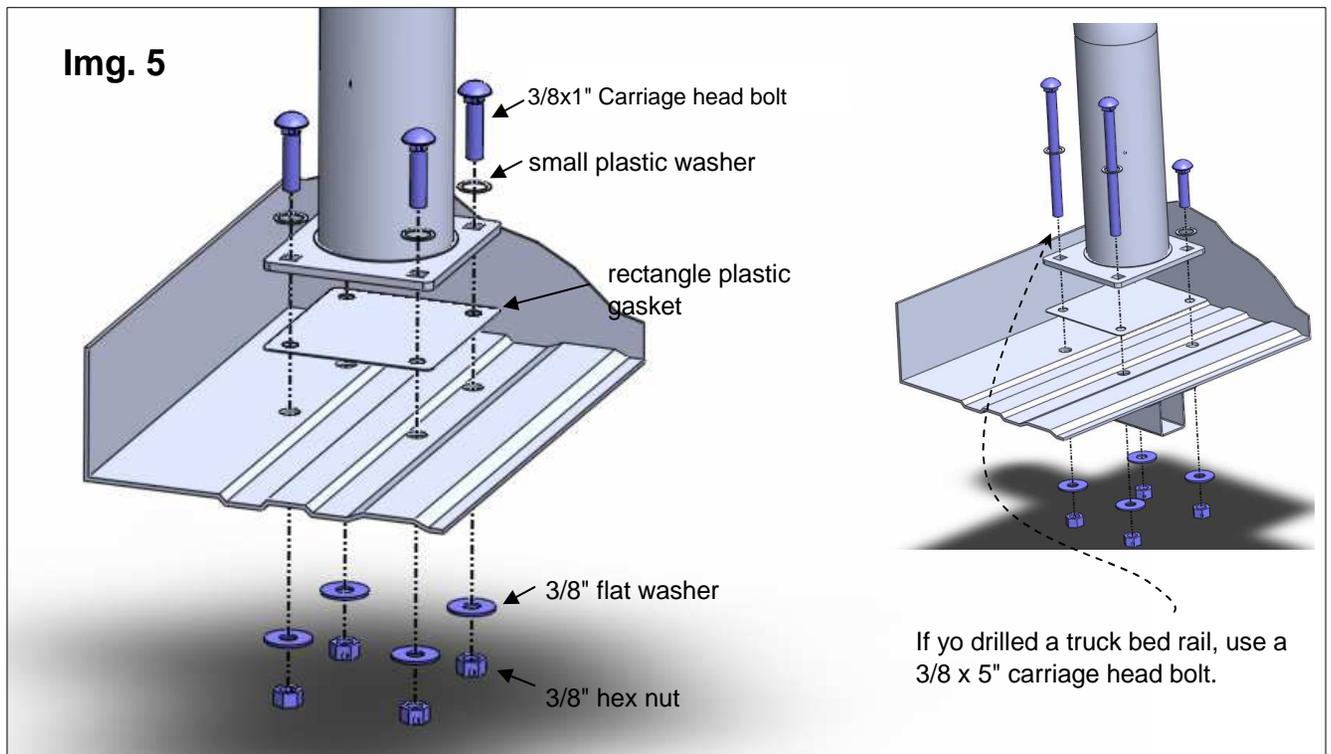

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:


INSTALLATION INSTRUCTIONS

MAIN BAR TIPO B

90002, 91002, 91502, 92002, 93002, 94002, 95002, 96002, 97002 y 98002


PS / B / C

Img. 6

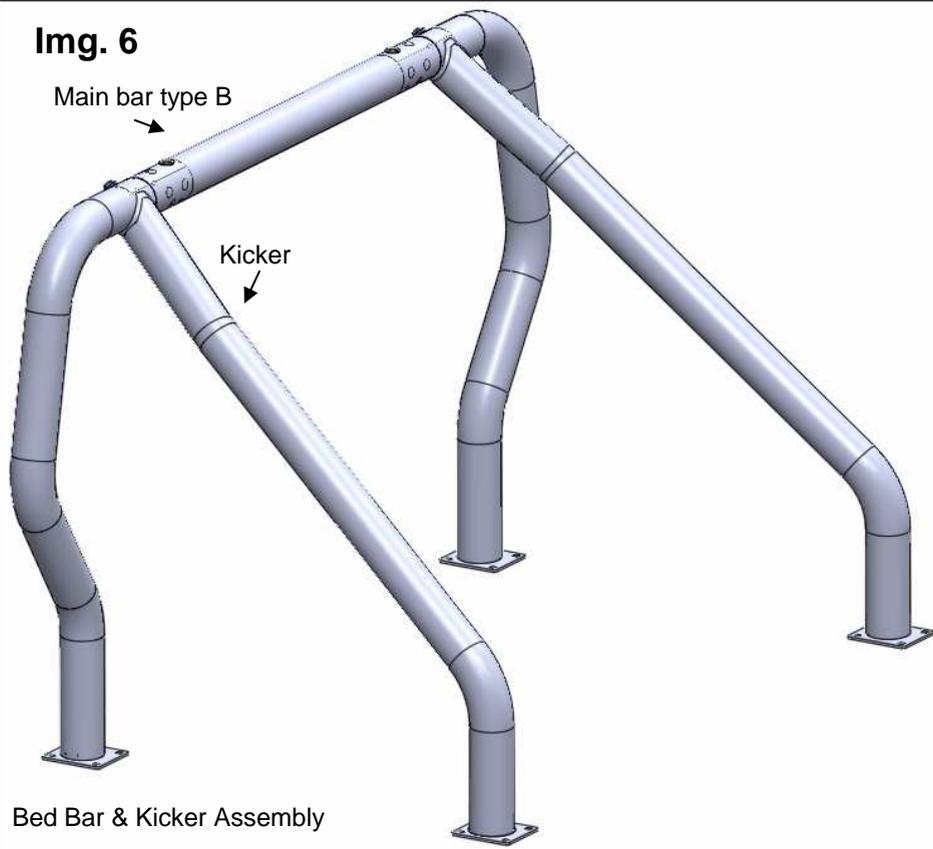


Bed Bar & Kicker Assembly


Acquiring the necessary parts, you can make the following settings. Images 7, 7.1 y 7.2

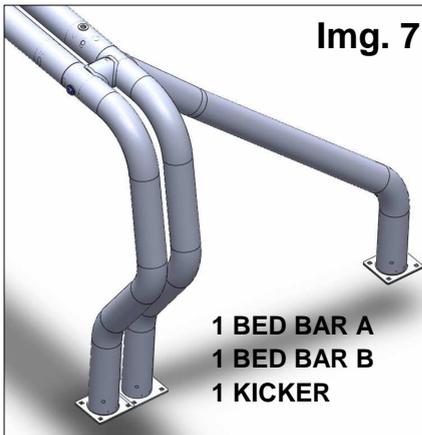

1 BED BAR A
1 BED BAR B
1 KICKER

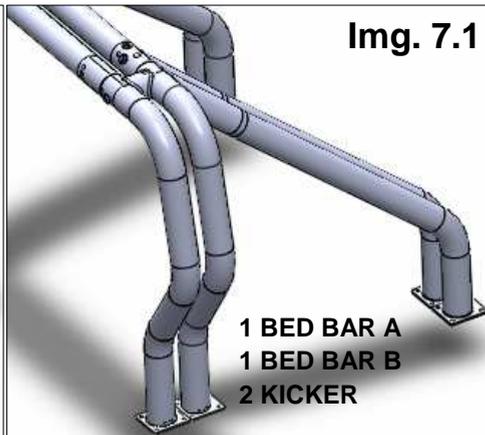

1 BED BAR A
1 BED BAR B
2 KICKER

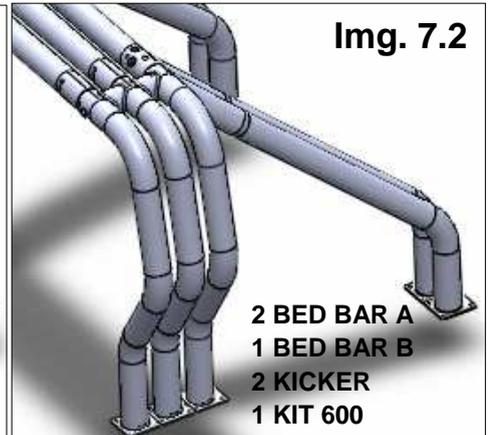

2 BED BAR A
1 BED BAR B
2 KICKER
1 KIT 600

8. Make any final adjustment to Bed Bar & Kicker alignment and then tighten all bolts from bottom to up.

9. Periodically it may need a bolts re-tighten.

10. Fill out the warranty card and place it inside your vehicle glove box

Cleaning and care instructions:

Design:

Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

INSTALLATION INSTRUCTIONS

KICKER

9370, 9390, 9516, 9519, 9520, 9530, 9546, 9552, 9558, 9560 and 9590

PS / B / C

Parts List:

- a) 1- Kicker Driver side
- b) 1- Kicker Passenger side
- c) 2- Mounting plate
- (1) Hardware kit includes:**
- d) 8- Plastic flat washer
- e) 2- Round plastic gasket
- f) 2- Square plastic gasket
- g) 4- Plastic tube cover

- 8- 3/8 x 1 1/2" Flat washer
- 8- 3/8" Nut
- 8- 3/8 x 1 1/2" Carriage bolt
- 2- 3/8 x 1 1/2" Flat head bolt
- 2- 3/8x5 1/2x2" Hex bolt
- 2- 3/8" Flat washer
- 2- White plastic washer

Not Includes:

B type main bar


Required tools:

- 9/16" Wrench
- Hand drill
- Pencil
- 7/32" Allen wrench
- 7/16" Bit



Instructions:

Aprox. Installation time: 50 min.

1. Read carefully and understand instructions before beginning installation. If you can not find any listed part, please stop installation and call to your distributor to get the missing parts, **on the last page mentions Bed Bar B, these accessories are sold separately.**

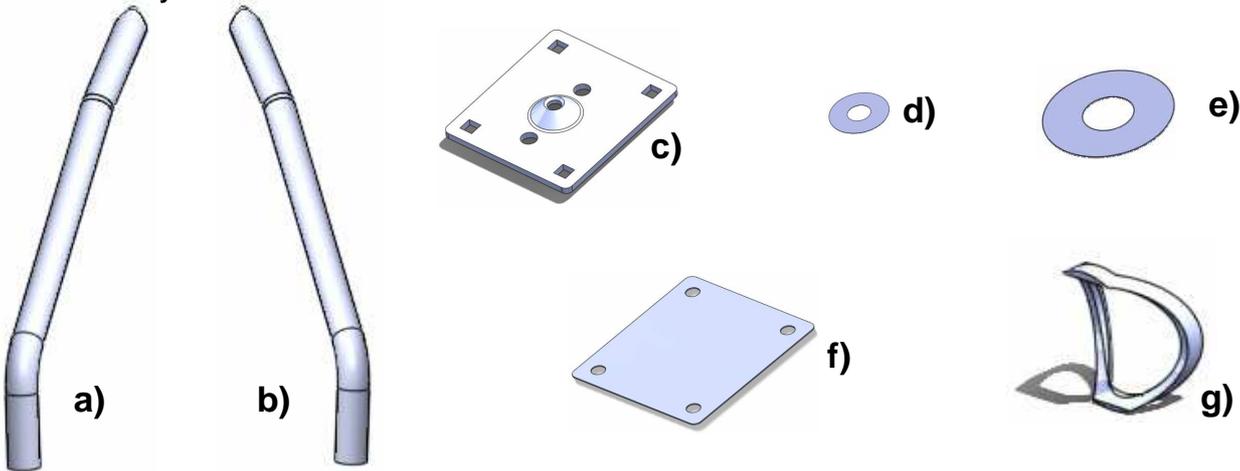

Img. 1

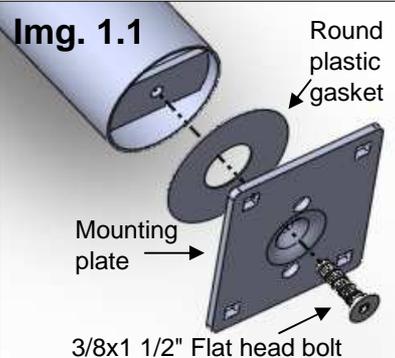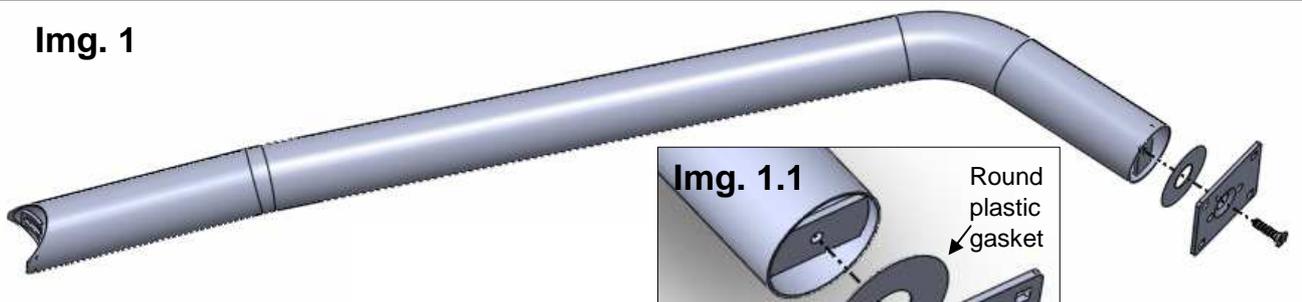

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS

KICKER






9370, 9390, 9516, 9519, 9520, 9530, 9546, 9552, 9558, 9560 and 9590

PS / B / C

3. Place the kicker to the main bar, mark with a pencil the 4 points to be drilled. See Image 2 and 2.1

4. Remove the part to drill with a 7/16" bit. See Image 3

5. Place again the Kicker and attach to the main bar and the floor of the box. See image 4 y 4.1

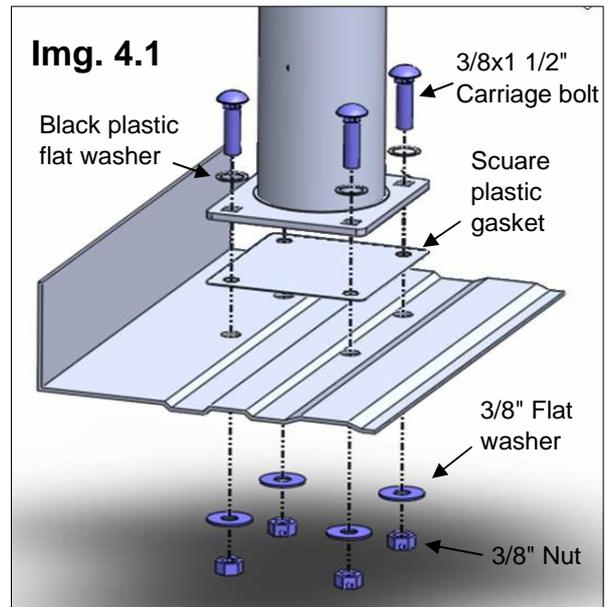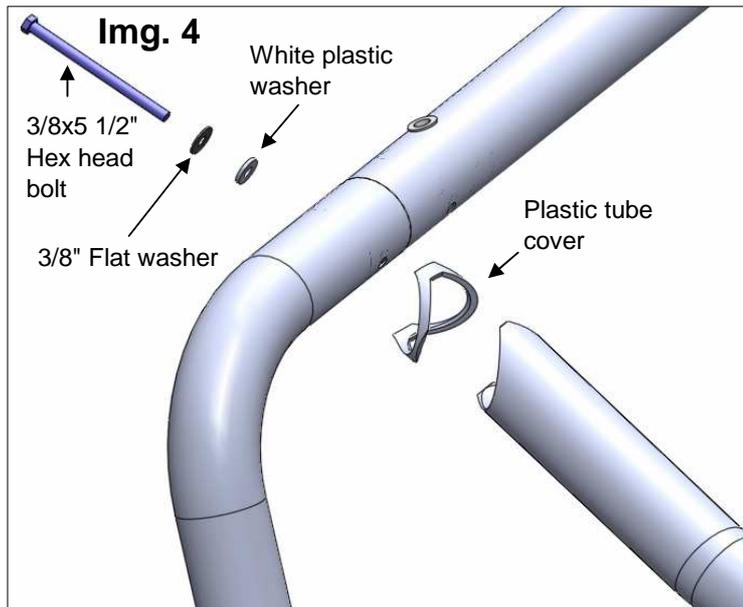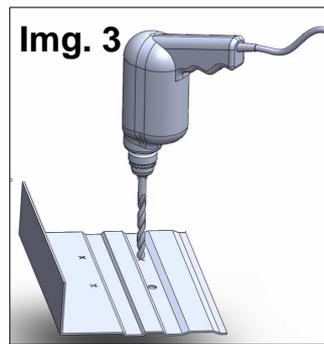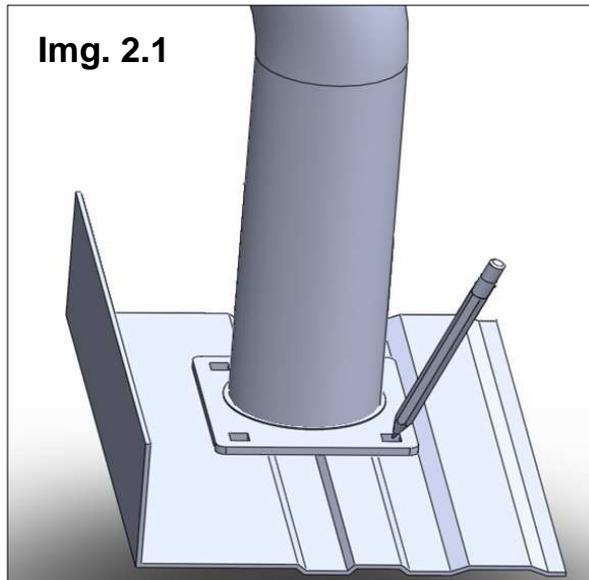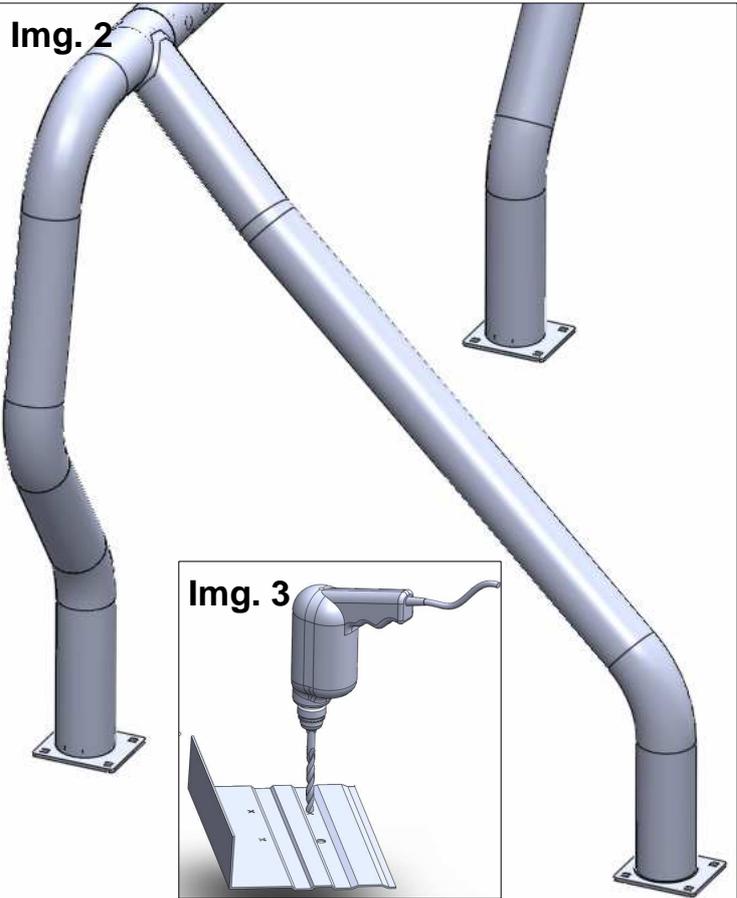

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:


Quality:

INSTALLATION INSTRUCTIONS




KICKER

9370, 9390, 9516, 9519, 9520, 9530, 9546, 9552, 9558, 9560 and 9590

PS / B / C

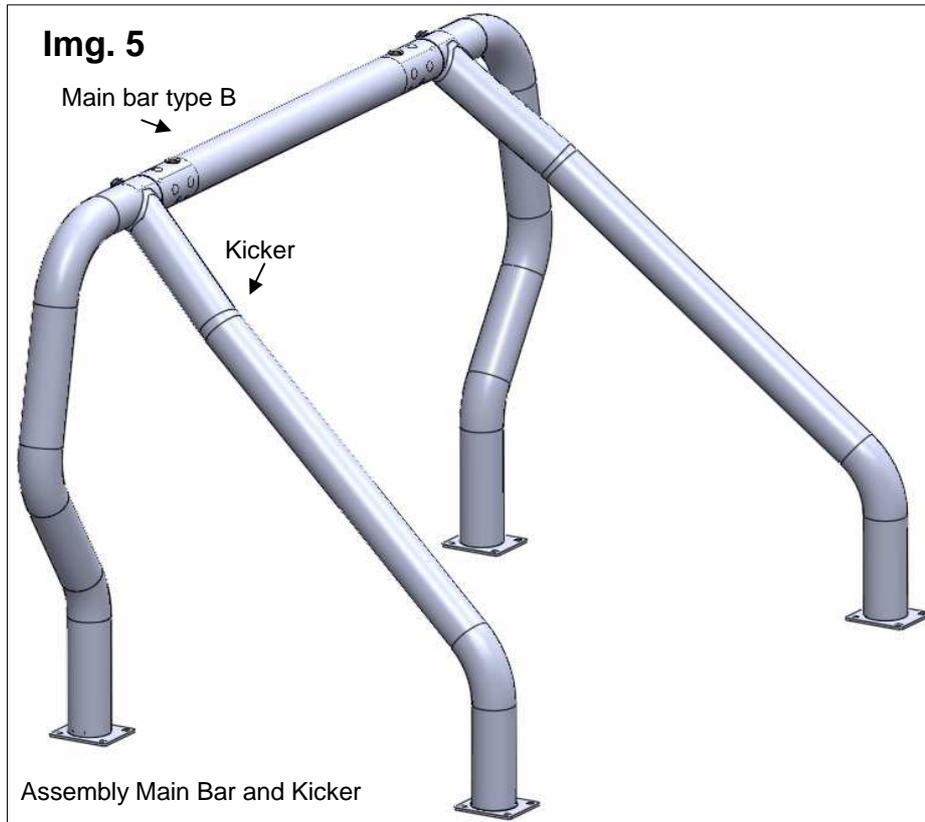

Acquiring the necessary parts, you can make the following settings. Images 6, 6.1 and 6.2

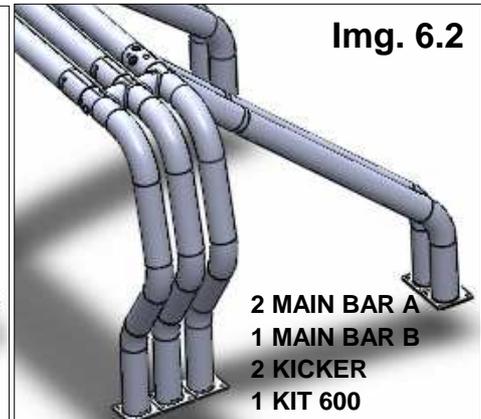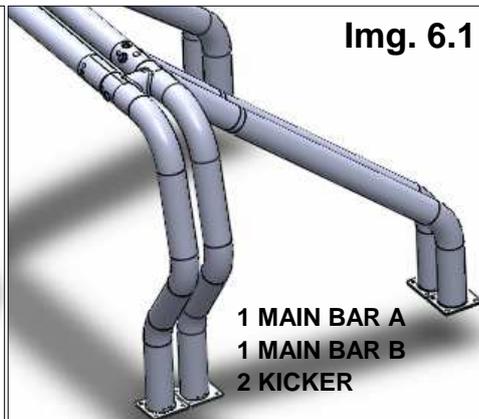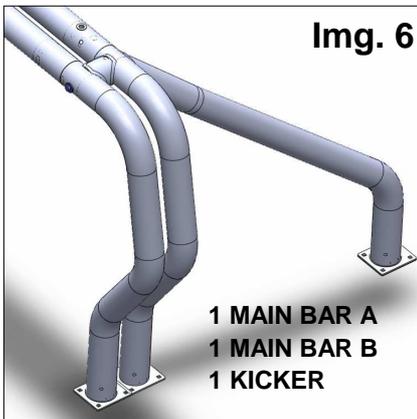

8. Align Bed Bar, and then tighten all bolts, from bottom to top.
9. Periodically it may need a bolts re-tighten.
10. Fill the warranty card and place it inside your vehicle's glove box.

Cleaning and care instructions:

Design:

Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.