



## 22+ Toyota Tundra Front Billet Upper Control Arm Kit

100ADS-10001

### Included hardware:

QTY	DESCRIPTION	PART NUMBER
1	22+ Tundra UCA ASM LHS	721R108A
1	22+ Tundra UCA ASM RHS	721R109A
2	M12 X 130mm SHCS	5R3005
2	M12 Locknut	39R596
2	ADS lower Uniball tapered spacer	721R110
2	ADS Upper M12 Uniball spacer	721R97
2	Toyota Uniball lower washer	724R56
4	Steel UCA Bushing Insert	724R104
2	ADS gold Uniball cap	721R64
2	Uniball cap o-ring	721R65
1	1oz bushing grease packet	270R54
2	ADS sticker	99R10671Y
1	Instructions	199R12554

**ADS recommends that all suspension components be installed by a qualified professional.**


### **Installation notes:**

- Stretch **721R65** o-ring into the bottom groove of **721R64** Uniball cap.
- Lightly grease inner steel bushing sleeve (**724R104**) before installation.
- Secure ABS wire bracket to control arm with included M6 bolt
- Control arm cross bolts should be fully tightened with the vehicle at ride height under its own weight.
- The control arm cross bolt torques to **136ft-lbs.**
- ADS Uniball bolt torques to **85ft-lbs.**
- Install **721R64** Uniball cap into both control arms.
- Recheck all fastener torque after 50 miles.

**Toll Free Technical Service: 1-866-464-6553**

**For online help, please refer to the Technical Information section of our website:**

[www.holley.com](http://www.holley.com)

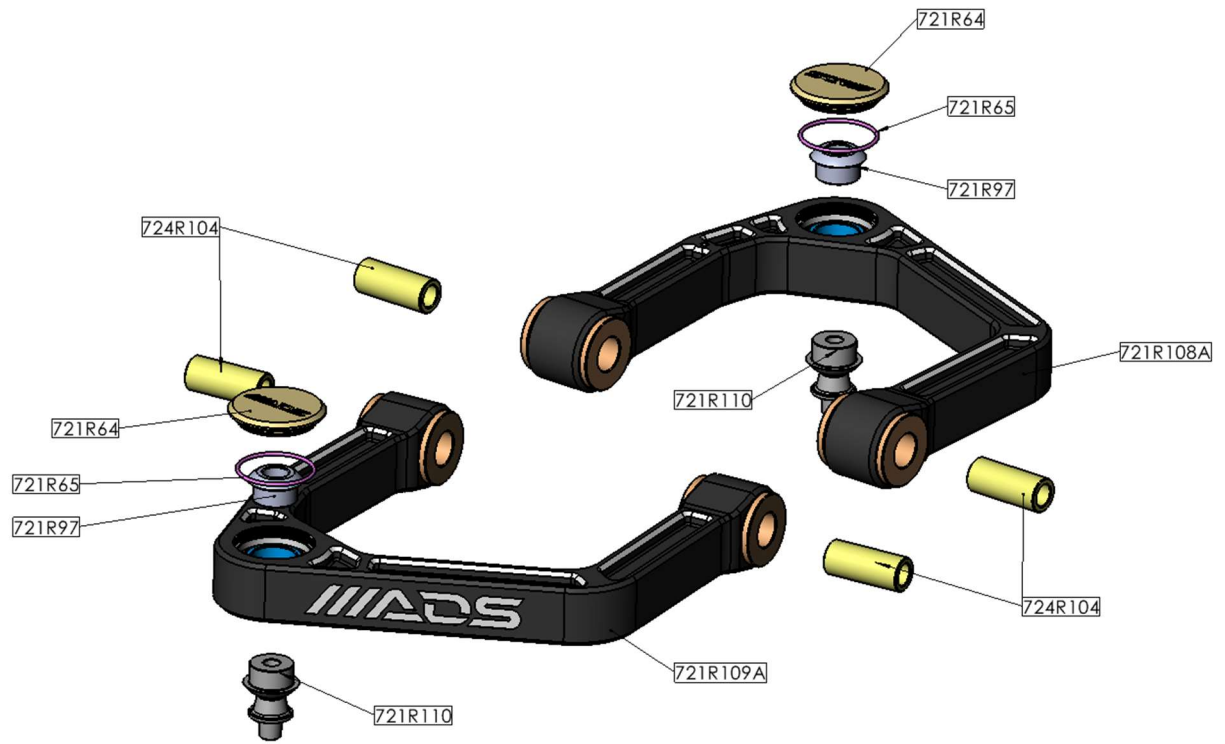

© 2025 Holley Performance Products, Inc. All rights reserved. Tous Droits Réservés.