



POCKET STYLE FENDER FLARES

(2022-2025+ TUNDRA)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Fender Flare
- (1) RH Front Fender Flare
- (1) LH Rear Fender Flare
- (1) RH Rear Fender Flare
- (1) Roll of Weatherstripping
- (36) Torx Bolts
- (36) Flat Washers
- (36) Lock Nuts
- (1) Torx Bit
- (3) Phillips Screws
- (3) Nylon Spacers
- (6) Screw Brackets

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Side Cutters
- 13mm Wrench
- Exterior Detailer
- Microfiber Cloth



STEP 1

Install (9) Torx bolts, (9) flat washers, and (9) lock nuts into the top holes in the fender flare. Tighten until the bolts are secure. Ensure the head of the bolt faces outwards on the flare.

Fit the provided weatherstripping to the top edge of the flare, and secure using the attached double sided tape. Trim the weatherstripping to size using side cutters.

Clean the vehicle body using exterior detailer and a microfiber cloth.



STEP 2 [FRONT]

Remove the (7) 10mm bolts from the inner fender liner/fender flare. The top three bolts are in the fender liner above the flare in the wheel well.

Note: Throughout this install, it is recommended to only use hand tools to prevent damaging the vehicle threaded inserts.



STEP 3

Loosely install the fender flare to the bottom of the fender using the original (4) 10mm screws. Do not fully tighten at this time.



STEP 4

Fit (3) screw brackets into the cutout in the fender flare. Then, secure the top of the flare to the vehicle using the original (3) 10mm screws.


STEP 5



Begin to tighten the upper (3) 10mm screws first, then tighten the lower (4) 10mm screws. Tighten until secure, but do not over-tighten.

Note: Over-tightening the hardware can damage the vehicle threaded inserts.

STEP 6 [REAR]

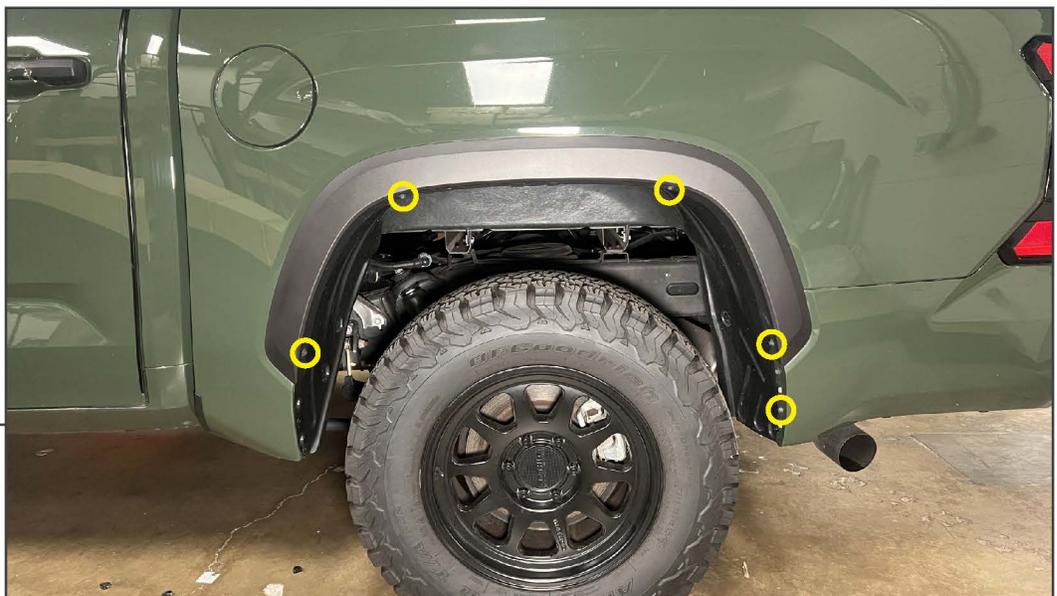


Remove the (5) 10mm bolts from the inner fender liner/fender flare.

Note: Throughout this install, it is recommended to only use hand tools to prevent damaging the vehicle threaded inserts.



STEP 7

Loosely install the fender flare to the vehicle using the original (4) 10mm screws. Do not fully tighten at this time.

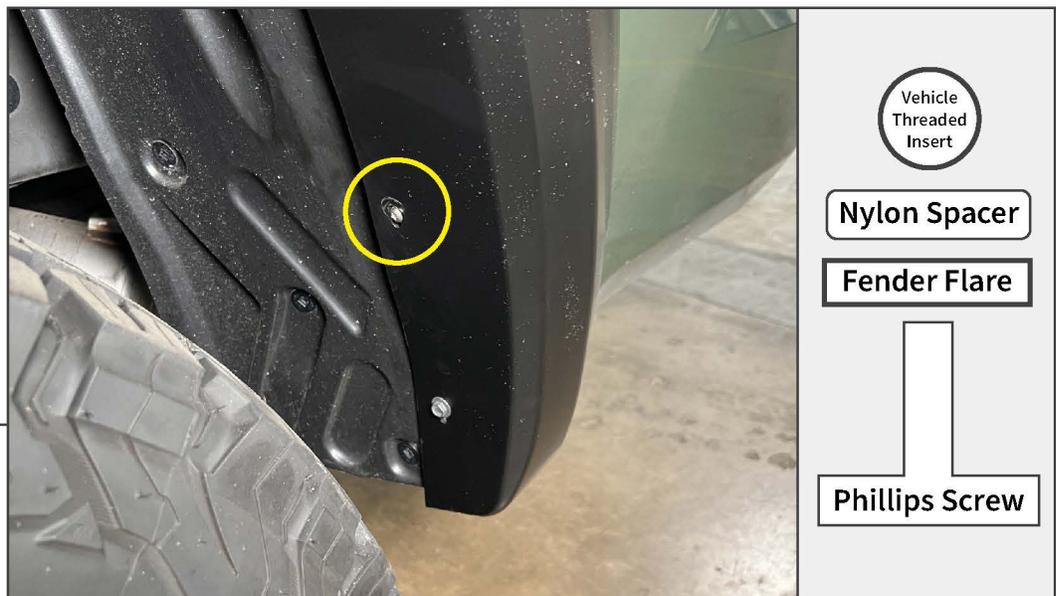

STEP 8

Use the included (1) Phillips screw and (1) nylon washer to secure the fender flare to the rear of the vehicle. Place the nylon spacer between the vehicle body and the fender flare, and then fit the Phillips screw through the flare and spacer into the vehicle threaded insert.

STEP 9



Begin to tighten the upper (2) 10mm screws first, then tighten the lower (3) 10mm screws and (1) Phillips screw.
Tighten until secure, but do not over-tighten.

Note: Over-tightening the hardware can damage the vehicle threaded inserts.

STEP 10



Repeat Steps 1-9 to install the remaining fender flares to the vehicle.

Installation is now complete.