



OE STYLE FENDER FLARES

(2022-2025+ TUNDRA)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Fender Flare
- (1) RH Front Fender Flare
- (1) LH Rear Fender Flare
- (1) RH Rear Fender Flare
- (4) Foam Strips w/ Tape
- (36) Plastic Retainers

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Exterior Detailer
- Microfiber Cloth

STEP 1 [FRONT]



Remove the (9) 10mm bolts from the inner fender liner/fender flare. The top three bolts are in the fender liner above the flare in the wheel well.

Note: Throughout this install, it is recommended to only use hand tools to prevent damaging the vehicle threaded inserts.

STEP 2 [FRONT]



Using a panel removal tool, begin to pull the fender flare away from the vehicle body. The flare is only secured by plastic retaining clips.

Note: It may be necessary to press the (2) tabs on the front of the flare from the back-side of the front bumper.



STEP 3

Clean the vehicle body using exterior detailer and a microfiber cloth.



STEP 4

Install (8) plastic retainers into the new fender flare.

Clean the inner top edge of the fender using isopropyl alcohol and a microfiber cloth, and allow to dry. Apply the included foam tape to the inner top edge of the fender flare.

STEP 5



Carefully align all fender flare mounting points to the vehicle fender/bumper, and press the fender flare into the vehicle to engage the plastic clips.

Once the flare is seated with the clips, re-install the original (9) 10mm screws. Tighten until secure, but do not over-tighten.

Note: Over-tightening the hardware can damage the vehicle threaded inserts.

STEP 6 [REAR]



Remove the (5) 10mm bolts from the inner fender liner/fender flare.

Note: Throughout this install, it is recommended to only use hand tools to prevent damaging the vehicle threaded inserts.




STEP 7

Using a panel removal tool, begin to pull the fender flare away from the vehicle body. The flare is only secured by plastic retaining clips.

Note: It may be necessary to press the (1) tab on the back of the flare from the back-side of the rear bumper.

Clean the vehicle body using exterior detailer and a microfiber cloth.

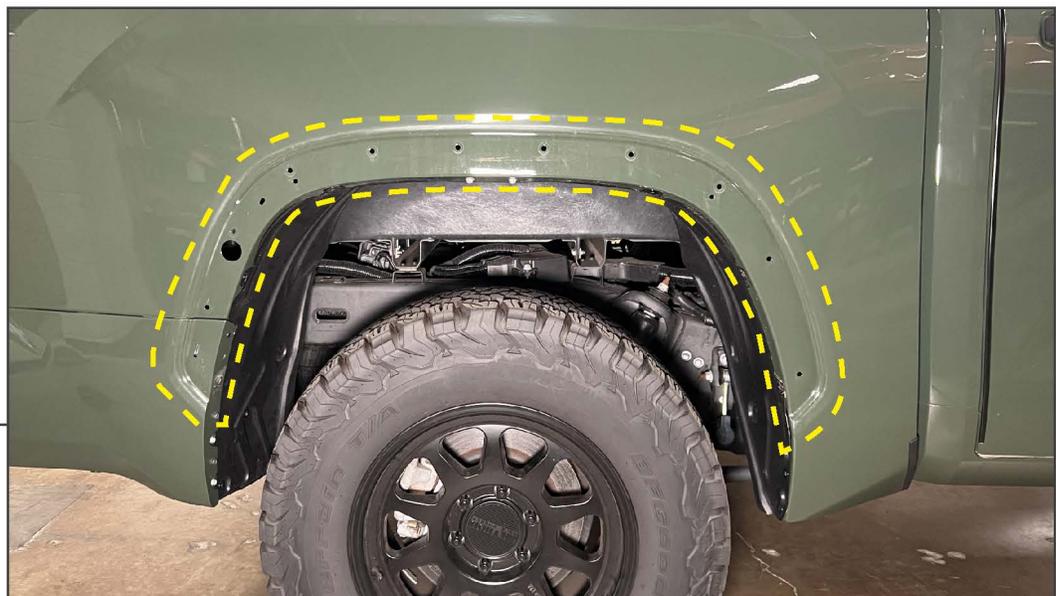

STEP 8


Clean the vehicle body using exterior detailer and a microfiber cloth.



STEP 9

Install (10) plastic retainers into the new fender flare.

Clean the inner top edge of the fender using isopropyl alcohol and a microfiber cloth, and allow to dry. Apply the included foam tape to the inner top edge of the fender flare.

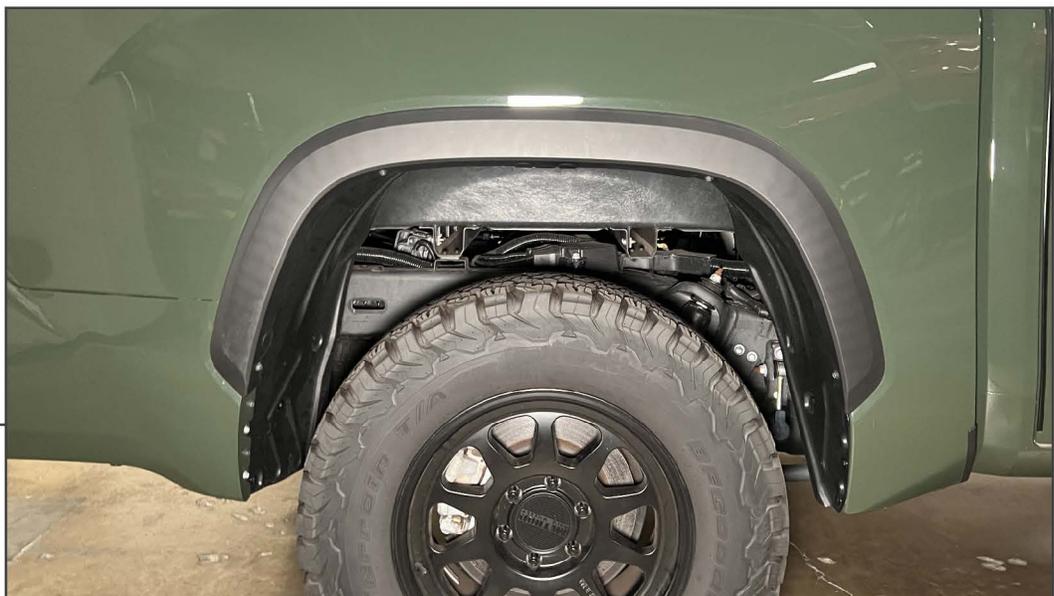

STEP 10

Carefully align all fender flare mounting points to the vehicle fender/bumper, and press the fender flare into the vehicle to engage the plastic clips.

Once the flare is seated with the clips, re-install the original (5) 10mm screws. Tighten until secure, but do not over-tighten.

Note: Over-tightening the hardware can damage the vehicle threaded inserts.



STEP 11

Repeat Steps 1-10 to install the remaining fender flares to the vehicle.

Installation is now complete.