



MULTI-COLOR UNDER-BODY ROCK LIGHT KIT

(UNIVERSAL FITMENT)

INSTALLATION INSTRUCTIONS


CONTENTS

(4) LED Rock Lights
(1) Power Module
(1) Remote
(8) Mounting Pads
(8) Allen Bolts
(8) Flat Washers
(8) Nuts

TOOLS REQUIRED


Socket Set
Socket Wrench
Allen Keys

SKU # U5456

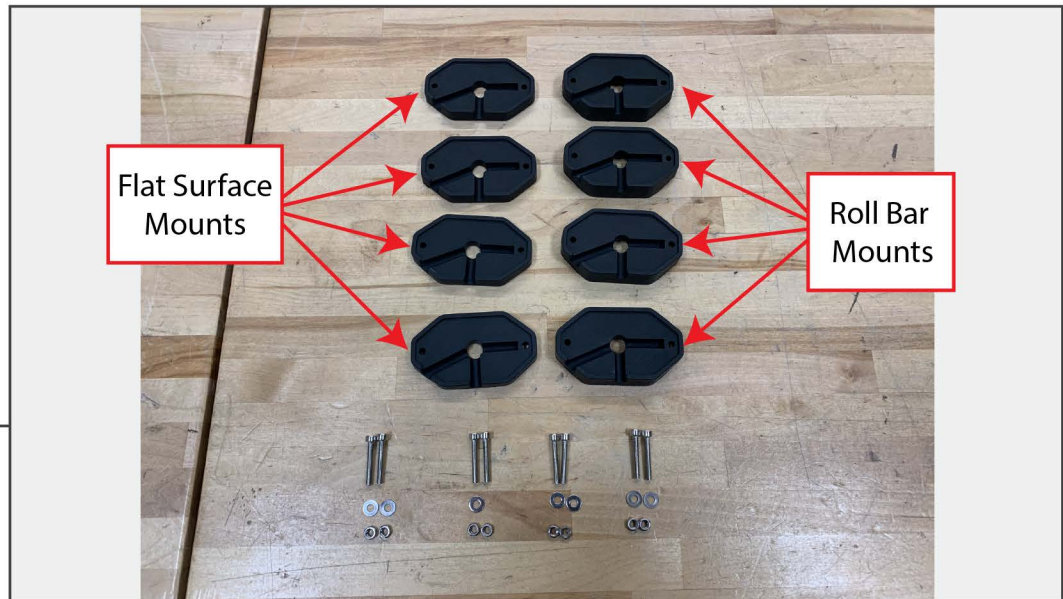

STEP 1

Use the appropriate mount for the application. Be sure to mount lights away from anything hot or rotating.

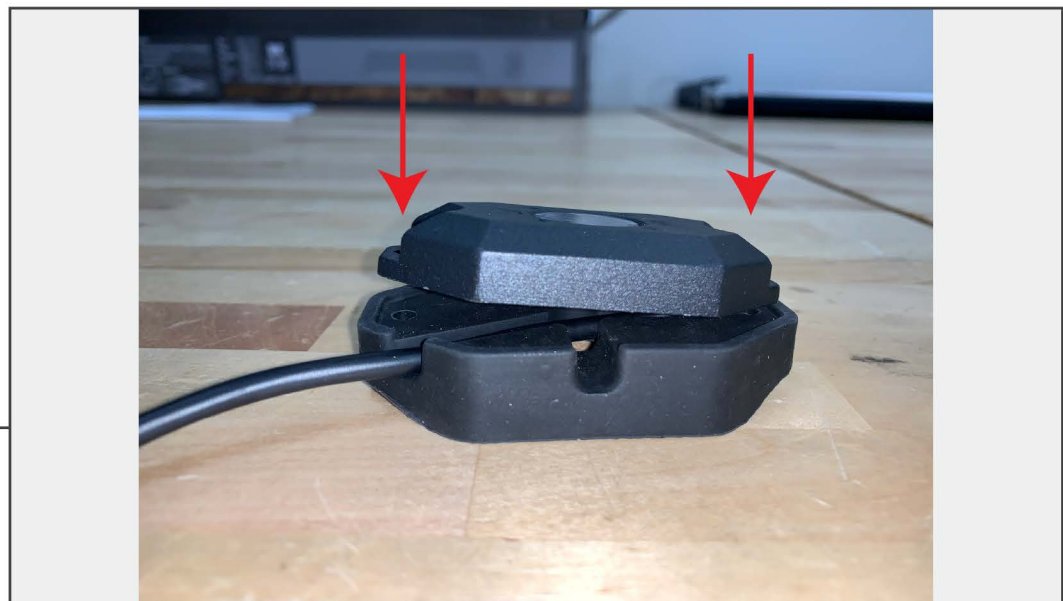

STEP 2


Install the Rock Lights to the appropriate mount and vehicle location using (2) Allen bolts, (2) flat washers, and (2) nuts.



STEP 3

Connect the wiring harness to the power module. Plug the connectors together and lock into place by threading them together using the nut on the wire.

Note: These connectors have a key-way, they only connect one way.

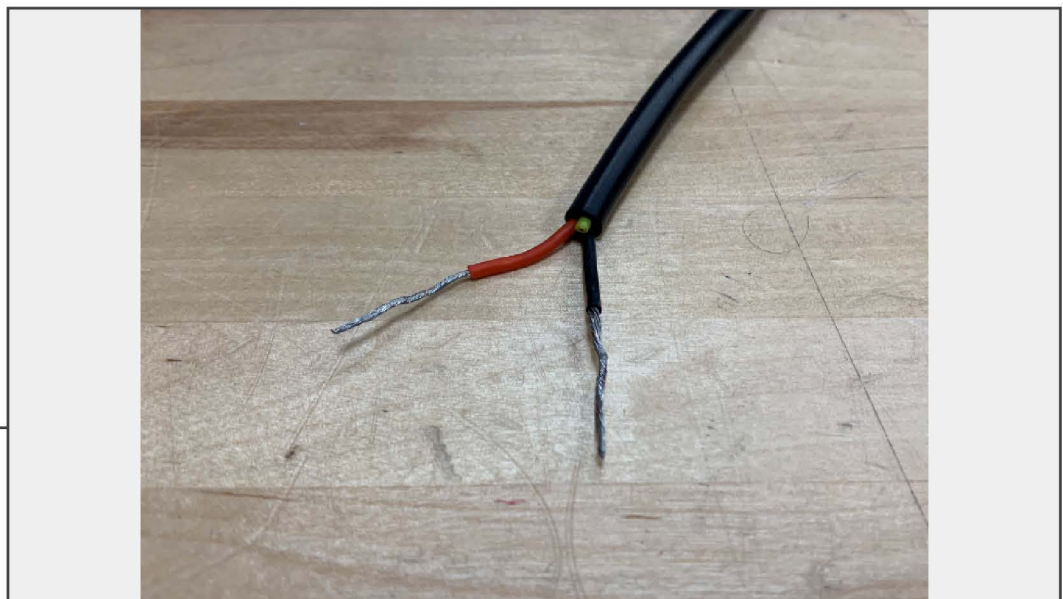


STEP 4

Connect the power and ground wires to the vehicle.


Splice the Red wire into a 12V ignition wire.
Attach the Black wire into a good chassis ground.

STEP 4

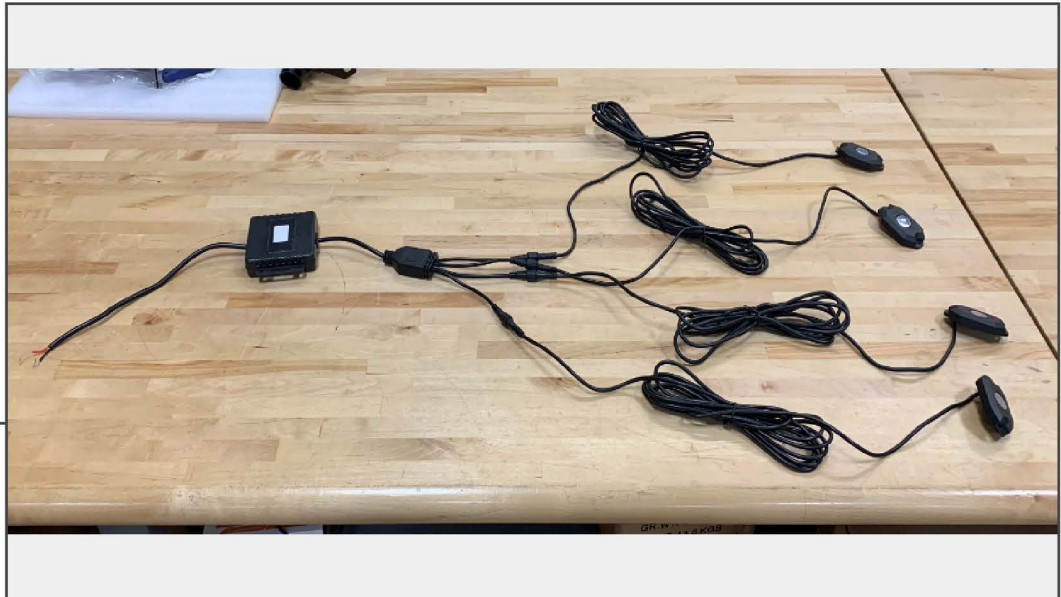

Install rock lights to vehicle in desired location. Be sure to mount lights away from anything hot or rotating. Secure the power module in a safe and secure location to prevent damage.

STEP 4

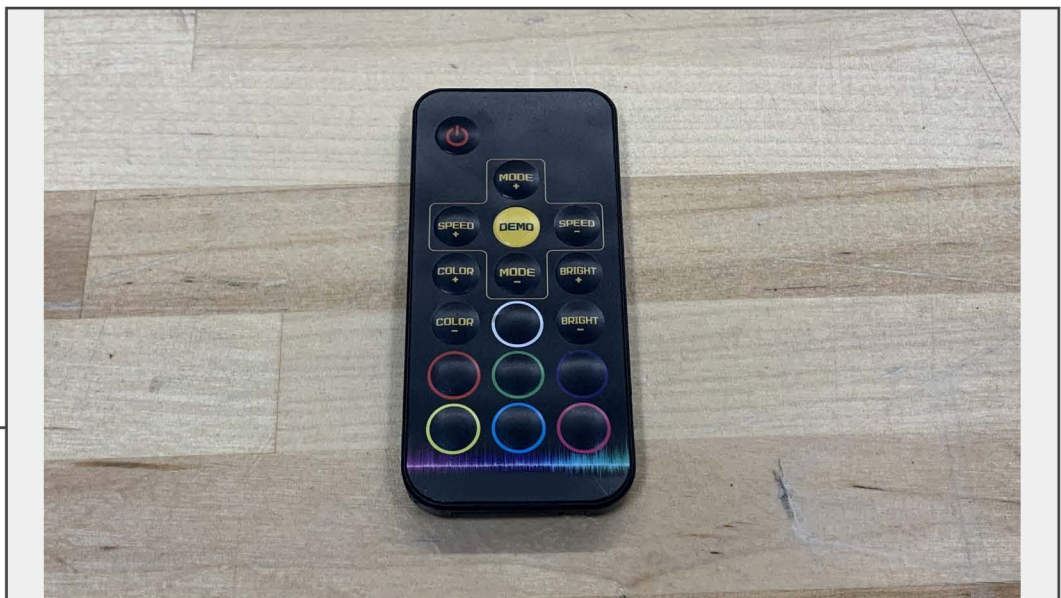

Using the remote, power on the LED Rock Lights and use various functions.

Power: Turn Lights on and Off
Mode +/- : Strobe/Pulsating/Solid Lights
Speed: Speed of Strobe/Pulsating
Color +/- : Change Color

Demo: Displays all functionalities
Brightness +/- : Change LED Brightness
7 Colors: Change LED to indicated color