

9" LED HEADLIGHT W/DRL & HALO

(2018+ JL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Light
- (1) RH Light
- (2) Light Adapters
- (1) Wiring Harness
- (1) Fuse Tap

TOOLS REQUIRED

- Soft Pry Tool
- 10mm Socket
- Socket Wrench



STEP 1

Begin by opening and supporting the hood. Use a soft pry tool to remove the (6) plastic push pins across the top of the grille. Then Firmly pull the grille away from the vehicle. Set the grille aside for re installation later.



STEP 2


Using a 10mm socket, locate and remove the (3) 10mm bolts securing the headlight to the radiator support.

STEP 3



Pull the headlight away from the vehicle. Pull back the red locking tab, then depress the clip and pull the plug away from the light. Remove the light from the vehicle.

STEP 4

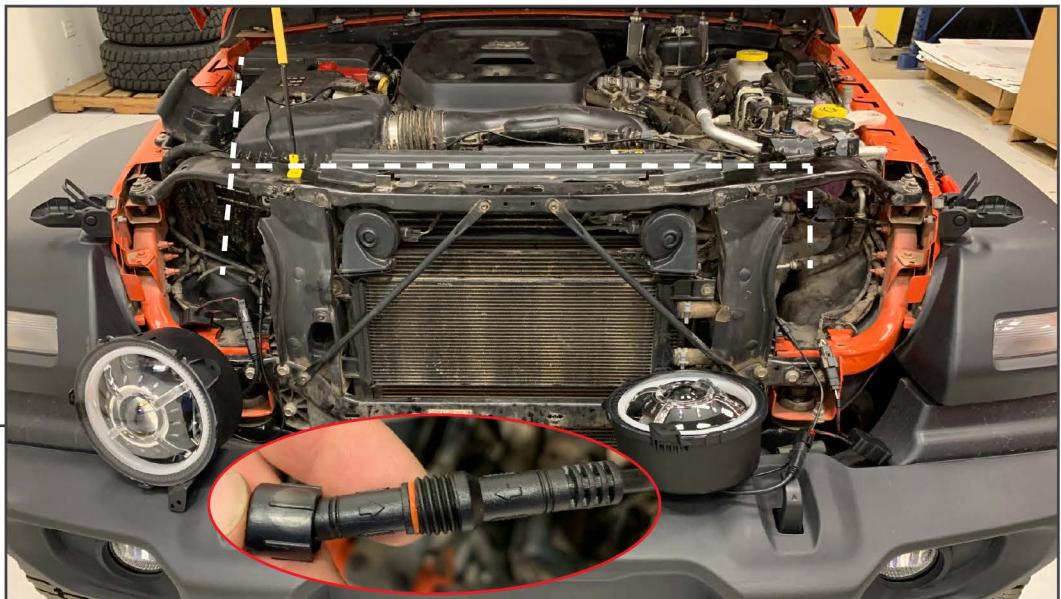


Neatly route the supplied DRL harness from the fuse box to each headlight bucket. Connect the DRL harness to the headlight. Align the arrows on the plugs and then screw them together. Do not over-tighten the plug.

STEP 5



Plug the headlight harness into the vehicle and then into the headlight. Using the factory hardware, reinstall the headlights.

STEP 6

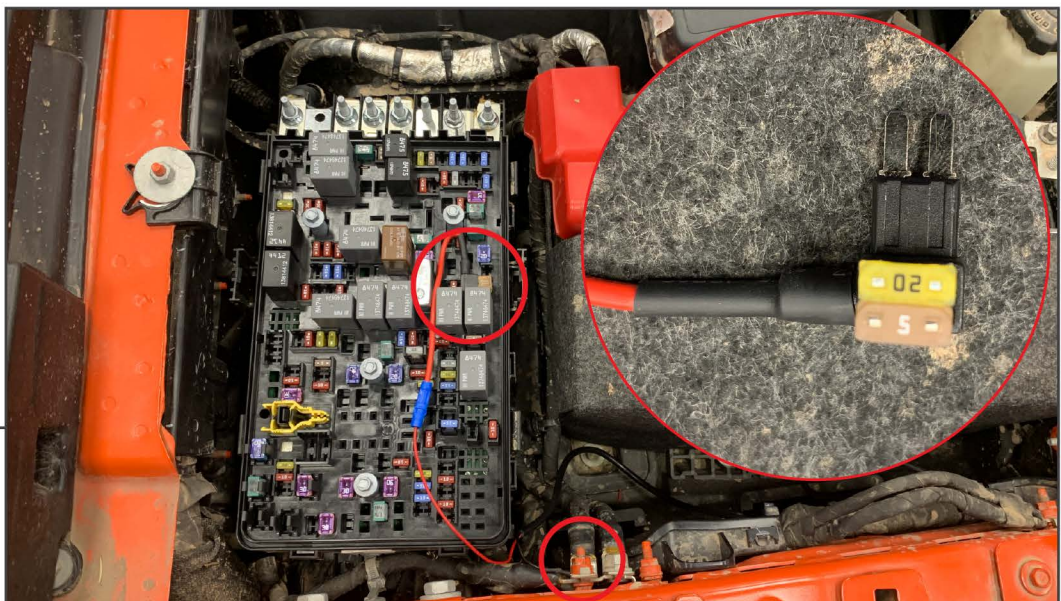

Open the fuse box and locate F52. Remove the fuse from that location. Install the original 20 amp fuse and the supplied 5 amp Fuse as shown. Ground the ring terminal on the DRL harness to the ground studs inside the fender. Crimp the red wire to the fuse tap.



STEP 7

Test the headlights. The vehicle must be running for the DRL to turn on.



STEP 8

Before reinstalling the grille, adjust the headlights using the Allen screw on the back of the light. Turning the screw clock-wise will raise headlight. The Allen screw does not need to be tight for the headlight to be adjust correctly. **Note the Allen screw will only get tight in the fully clock-wise or fully counter-clockwise position.



STEP 9

Reinstall the grille cover in reverse order. Installation is now complete.