



baja designs®
THE SCIENTISTS OF LIGHTING

Jeep JL and JT Dual LP4/LP6 Auxiliary Light Kit



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 X3 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs®
THE SCIENTISTS OF LIGHTING

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies


Jeep JL Auxiliary Light Kit Instructions

Tools Required

- 16mm Wrench
- 7/16" Socket

1. To begin, use the trim tool, or a flathead screwdriver to remove the two plastic fasteners from the plastic panel in between the front grill and bumper. It will not be reused. Remove six more fasteners from the front edge of the panel.
2. With the 16mm wrench, remove the bumper mounting bolts on the inside and outside of the frame (Driver side only).
3. Mount the driver side bumper bracket on the inside of the frame rail with the flange pointed inward. Hand tighten the bolt. Then mount the bumper bracket support on the outside of the frame rail with the bolt hand tight. Use the 9/16" wrench and socket to tighten the 9/16" hex head hardware and tighten the brackets together snug. Tighten the frame bolts with the 16mm wrench with the top surface level. Repeat steps 1-3 for the passenger side.
4. Use the 7/16" socket to mount the LP lights to the standard LP brackets. With the provided hardware, mount the LP lights to the bumper bracket assemblies using the 9/16" wrench and socket.


- Trim Tool (Flathead Screwdriver)
- 9/16" Wrench and Socket

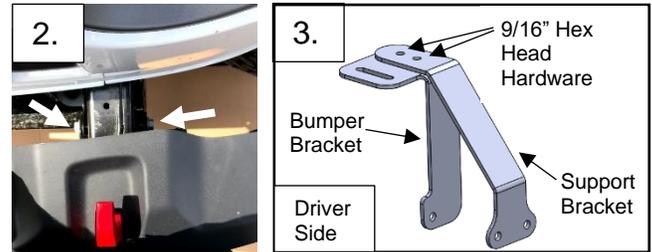

LP4 Only Wiring Instructions

If you purchased the upfitter switch version:


- Route the light connector leads of the included harnesses from the engine compartment along the passenger side inner fender down and out through the front of the fender well. Plug in the light connectors.
- Route the opposite ends of the harnesses to the battery.
- Clasp the splice connector attached to the white wire over the desired upfitter wire (15A minimum). Clasp the splice connector attached to the yellow wire over another upfitter wire (1A minimum) or a DRL (Daytime Running Light) wire. Repeat for other light.
- Use the 10mm socket to remove the nut on the common ground stud, place the black wire ring terminal over the stud, and tighten.

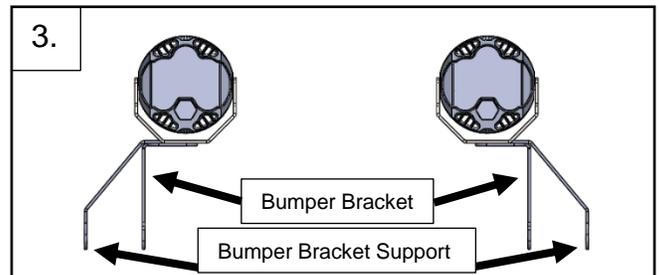

If you purchased the stand-alone harness version:

Automatic Transmission:




- Route the light connector leads of the included harness from the engine compartment along the passenger side inner fender down and out through the front of the fender well. Plug in the light connectors. With the provided backlight wiring harness, follow the same route with the two terminal ends and plug them into each connector in the #3 pin.
- Route the opposite end of the harness to the battery and then route the switch lead along the firewall to the driver side near the brake booster. Route the opposite end of the backlight harness to the fuse panel.
- Reference included backlight harness instructions to attach micro fuse tap to the harness and the fuse tap to the fuse panel (F52, Cigarette lighter).
- Take a photo of the wires connected to the switch for reference later. Remove the grommet that seals the firewall passthrough and pierce a hole in the center.

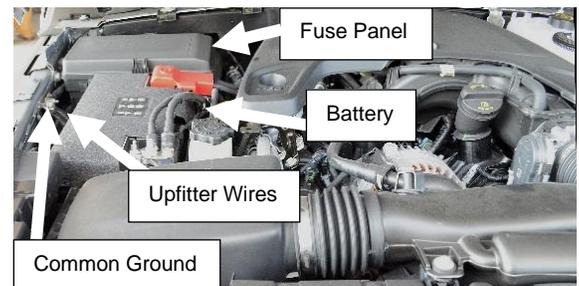

- Remove the wires from the switch, thread wires through the grommet, route wires through the passthrough, and reinstall the grommet.
- Locate a desired dash location for the switch and confirm that there is clearance behind. Drill hole, thread wires through, attach the switch, and mount the switch.
- Use 10mm socket to attach ring terminals to the battery. (+) Red lead first and (-) Black lead second.

Manual Transmission:


- Route the light connector leads of the included harness from the engine compartment along the passenger side inner fender down and out the front of the fender well. Plug in the light connectors. With the provided backlight wiring harness, follow the same route with the two terminal ends and plug them into each connector in the #3 pin.
- Route the opposite end of the harness to the battery and then route the switch lead to the bottom of the passenger side inner fender well. Route the opposite end of the backlight harness to the fuse panel.
- Reference included backlight harness instructions to attach micro fuse tap to the harness and the fuse tap to the fuse panel (F52, Cigarette lighter).
- Outside the passenger side inner fender well, remove the two plastic fasteners to access the inner passenger side firewall.
- Locate the arrowed electronic module. With the 10mm socket wrench, remove the nuts and move it toward the center of the firewall out of the way momentarily. Press in on the harness grommet on the firewall until the grommet seal is broken and the inside of the cab is breached. (Second image on right)
- Snap a photo of the switch wiring. Remove the switch terminals from the switch, route switch wires through.
- Pull the slack from the switch lead into the cab from under the glovebox in the arrowed location. Pull the grommet back into the engine compartment and/or push from inside the cab to seal the grommet.
- Mount the electronic module back to the firewall.
- Route the switch lead behind the dash over to the driver side.
- Locate a desired dash location for the switch and confirm that there is clearance behind. Drill hole, thread wires through, attach the switch, and mount the switch.
- Using the 10mm socket wrench, mount the (+) and (-) ring terminals of the harness to the corresponding battery terminals starting with the (+) red lead.

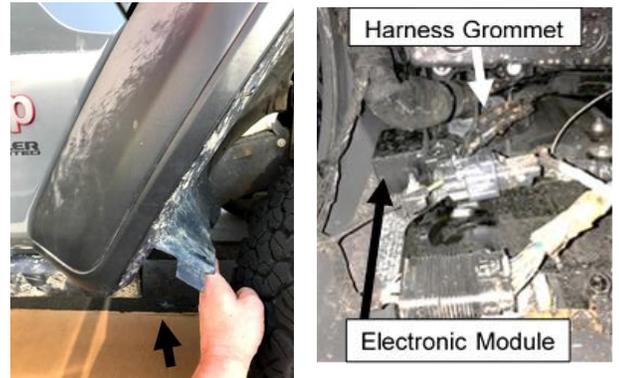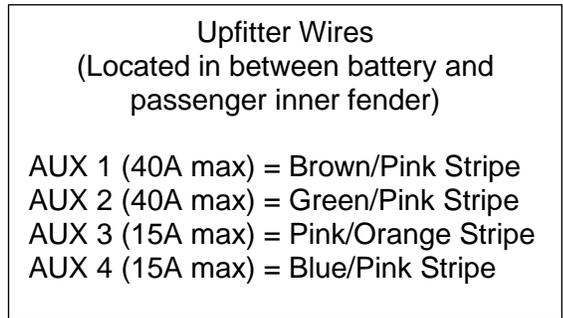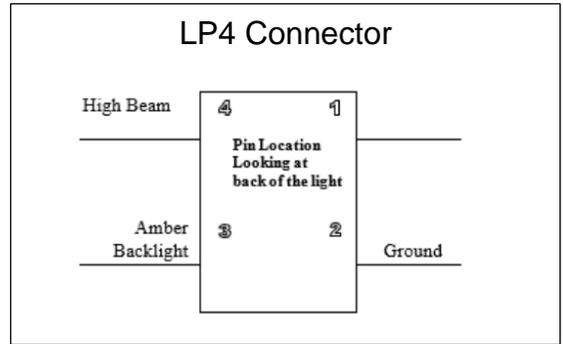

LP6 Only Wiring Instructions

If you purchased the upfitter switch version:

- Route the light connector leads of the included harness from the engine compartment along the passenger side inner fender down and out through the front of the fender well. Plug in the light connectors.
- Route the opposite end of the harness to the battery.
- Clasp the splice connector attached to the white wire over the desired upfitter wire (16A minimum). Clasp the splice connector attached to the yellow wire over another upfitter wire (1A minimum) or a DRL (Daytime Running Light) wire.
- Use 10mm socket to attach ring terminals to the battery. (+) Red lead first and (-) Black lead second.

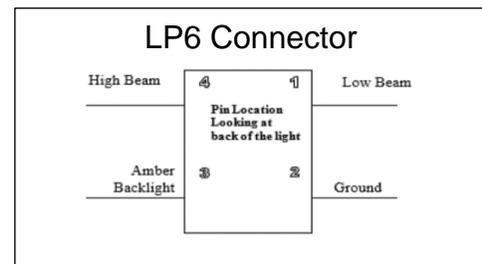


If you purchased the stand-alone harness version:

Automatic Transmission:

- Route the light connector leads of the included harness from the engine compartment along the passenger side inner fender down and out through the front of the fender well. Plug in the light connectors. With the provided backlight wiring harness, follow the same route with the two terminal ends and plug them into each connector in the #3 pin.
- Route the opposite end of the harness to the battery and then route the switch lead along the firewall to the driver side near the brake booster. Route the opposite end of the backlight harness to the fuse panel.
- Reference included backlight harness instructions to attach micro fuse tap to the harness and the fuse tap to the fuse panel (F52, Cigarette Lighter).
- Take a photo of the wires connected to the switch for reference later. Remove the grommet that seals the firewall passthrough and pierce a hole in the center.
- Remove the wires from the switch, thread wires through the grommet, route wires through the passthrough, and reinstall the grommet. Locate a desired dash location for the switch and confirm that there is clearance behind. Drill hole, thread wires through, attach the switch, and mount the switch.
- Use 10mm socket to attach ring terminals to the battery. (+) Red lead first and (-) Black lead second.

Manual Transmission:

- Route the light connector leads of the included harness from the engine compartment along the passenger side inner fender down and out through the front of the fender well. Plug in the light connectors. With the provided backlight wiring harness, follow the same route with the two terminal ends and plug them into each connector in the #3 pin.
- Route the opposite end of the harness to the battery and then route the switch lead to the bottom of the passenger side inner fender well. Route the opposite end of the backlight harness to the fuse panel.
- Reference included backlight harness instructions to attach micro fuse tap to the harness and the fuse tap to the fuse panel (F52, Cigarette lighter).
- Outside the passenger side inner fender well, remove the two plastic fasteners to access the inner passenger side firewall.
- Locate the arrowed electronic module. With the 10mm socket wrench, remove the nuts and move it toward the center of the firewall out of the way momentarily. Press in on the harness grommet on the firewall until the grommet seal is broken and the inside of the cab is breached. (Second image on right)
- Snap a photo of the switch wiring. Remove the switch terminals from the switch, route switch wires through.
- Pull the slack from the switch lead into the cab from under the glovebox in the arrowed location. Pull the grommet back into the engine compartment and/or push from inside the cab to seal the grommet.
- Mount the electronic module back to the firewall. Route the switch lead behind the dash over to the driver side.
- Locate a desired dash location for the switch and confirm that there is clearance behind. Drill hole, thread wires through, attach the switch, and mount the switch.
- Using the 10mm socket wrench, mount the (+) and (-) ring terminals of the harness to the corresponding battery terminals starting with the (+) red lead.

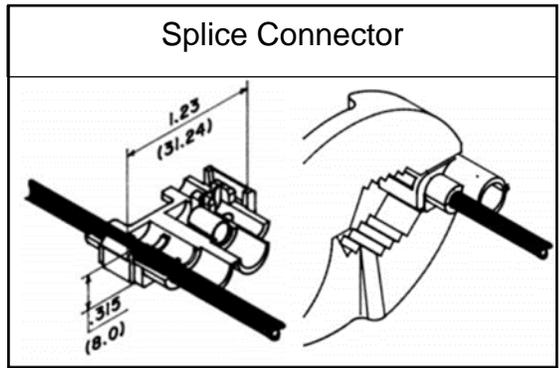

Tie all wires away from sharp, hot, and/or rotating components.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.